



MSI CENTER

User Guide

(For MSI's Motherboards, Desktops & Liquid Cooling)

Contents

- About MSI CENTER 4
- Get Started..... 5
 - System Requirements 5
 - Supported Hardware 5
 - Installing MSI Center..... 5
 - Launching MSI Center 7
 - How to completely remove MSI Center..... 7
- MSI CENTER Basics 8
- Feature Sets 9
- Gaming Mode 10
 - Gaming Mode Option 10
 - How to Add Games into Gaming Mode..... 11
 - How to Remove Games from Gaming Mode 12
 - How to Enable Gaming Mode 13
- Smart Priority..... 14
 - How to Enable Smart Priority..... 15
- User Scenario 16
 - Selecting User Scenario 16
 - Canceling User Scenario..... 17
 - Setting User Options..... 18
 - How to Adjust the CPU Frequency 18
 - How to Adjust the Motherboard Voltage 19
 - How to Use Game Boost 20
 - How to Adjust the GPU and GPU Memory Frequency..... 22
 - How to Adjust the DRAM Timing 23
 - How to Adjust the DRAM Voltage 24
 - Adjusting the Fan Speed..... 25
 - How to Enable MSI Fast Boot 27
- Hardware Monitoring 28
- FROZR AI Cooling (optional) 29
 - How to enable FROZR AI Cooling 29
 - Setting Manual Mode for FROZR AI Cooling 30
- Game Highlights 31
 - How to Share Game Highlights to Social Media 32
 - How to Remove Game Highlights..... 33
 - Installing MSI Companion 34

Setting MSI Companion	36
Setting Game Highlights.....	38
True Color	40
True Color Preset Options.....	40
How to customize screen color.....	41
LAN Manager	42
Network Control Menu	42
Setting Network Speed.....	43
Customizing Application Priorities.....	44
Mystic Light.....	45
Ambient Link.....	48
DYNAMIC DASHBOARD Control Panel (optional)	53
DYNAMIC DASHBOARD II Control Panel (optional)	55
Gaming Gear	57
Gaming Dial (optional)	58
MSI Sound Tune (optional)	61
Devices Speed Up	62
Super Charger	63
Smart Image Finder	64
Using Smart Image Finder	64
Add or Remove Tags on Images.....	67
System Diagnosis (optional).....	68
Coreliquid (optional).....	69
Product Registration	73
Live Update	75
System Info	76
Microsoft APP	77
Notices	78
Copyright.....	78
Revision History.....	78

About MSI CENTER

- Optimize game settings and enjoy a high quality gaming experience.
- System performance tuning, you can choose overclock or silent.
- Monitor system information.
- Adjust the best display settings for your eyes.
- Register your MSI products.
- Control the LED light effects and synchronize effects to your devices.
- Manage network connection settings.
- Use utilities to control special features.



Important

THE SOFTWARE FEATURES IN THIS USER GUIDE VARY BY PRODUCT.

THE SCREENSHOTS FOR THE UI IN THIS USER GUIDE ARE FOR REFERENCE ONLY AND THE ACTUAL UI DESIGN MAY VARY.

Get Started

System Requirements

 
- Operating System:
 - Windows 10 64-bit

Supported Hardware


- Motherboard:
 - MSI motherboards
- Graphics card:
 - MSI NVIDIA and AMD graphics cards

Installing MSI Center


1. Go to MSI Website download **MSI Center**.
2. Extract the downloaded file.
3. Double-click on the extracted **MSI Center** setup program.



 
4. Click **Install** to continue the process.

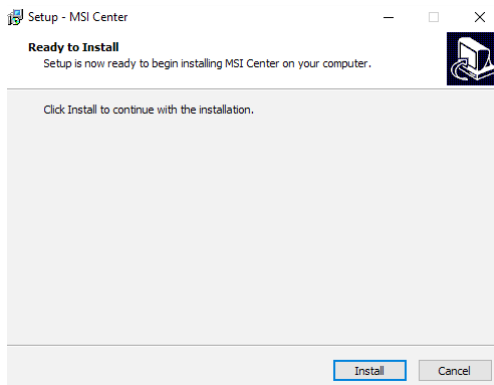

 
5. Open the Start menu, then right-click on MSI Center.
6. Hover over **More**.

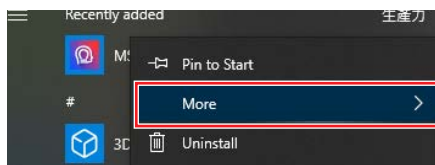

 
7. Select **Run as administrator**.

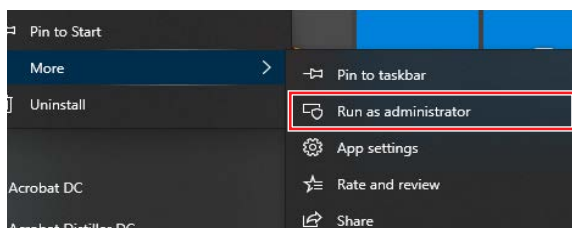

 8. Please wait until the installation is complete.

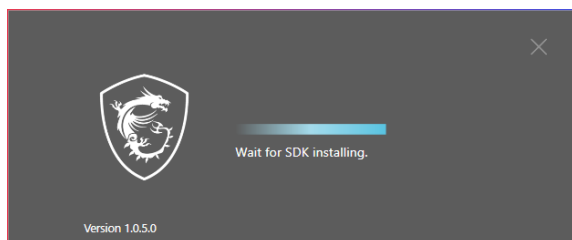

 9. You can start to use MSI Center.

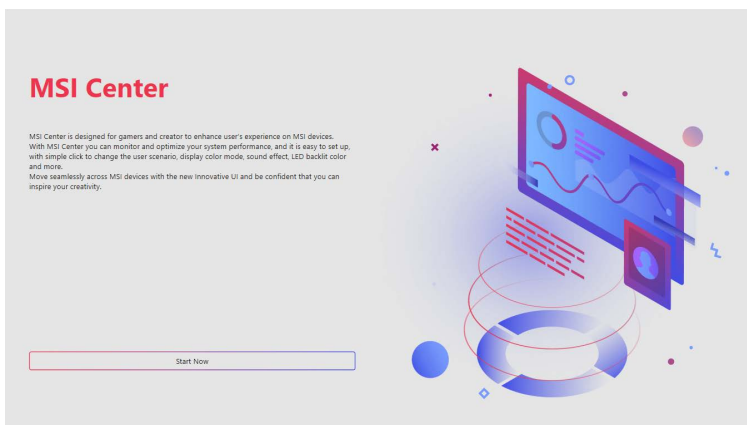

Launching MSI Center

Open the Start  menu, then select MSI Center .

How to completely remove MSI Center

1. Open the Start  menu, then select settings .
2. Select **Apps**.



Apps

Uninstall, defaults, optional features

3. Uninstall **MSI Center**.

	MSI Center MICRO-STAR INTERNATIONAL CO., LTD Advanced options	28.4 KB 1/11/2021
		Move Uninstall


4. Uninstall **MSI Center SDK**.

	MSI Center SDK 3.2020.1222.01	459 MB 1/11/2021
		Modify Uninstall

MSI CENTER Basics



 
The screenshots for the UI in this user guide are for reference only and the actual UI design may vary.

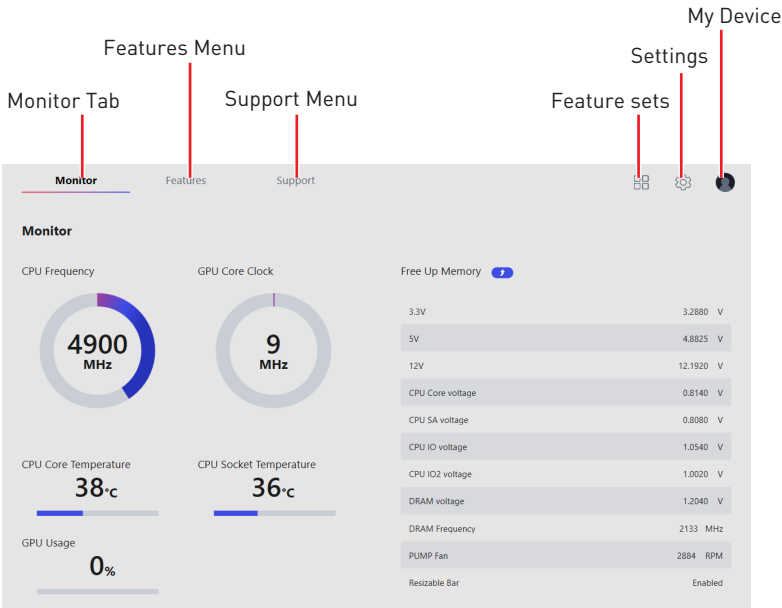

Feature Sets

Feature Sets allows you to download, update, or uninstall MSI exclusive features. Therefore, you can choose the features you want to build your own MSI center.

 The items you can download

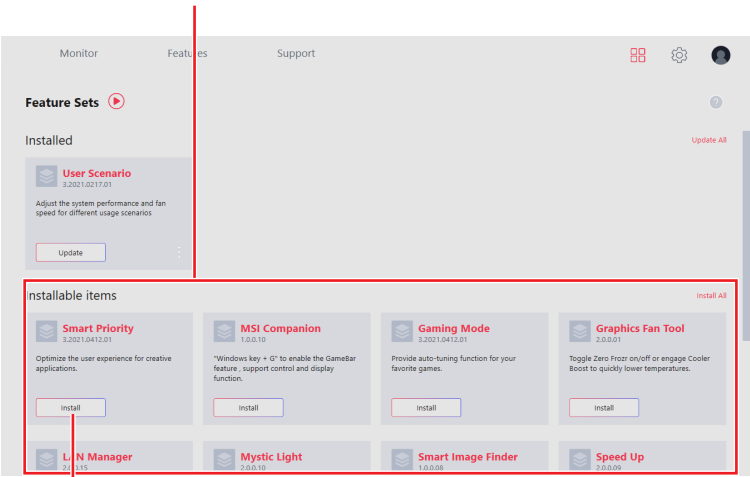


Click here to install

Gaming Mode

The Gaming Mode feature will optimize the computer system, monitor, cooler and other peripherals to provide the best gaming experience.

 Go to **Features > Gaming Mode**.

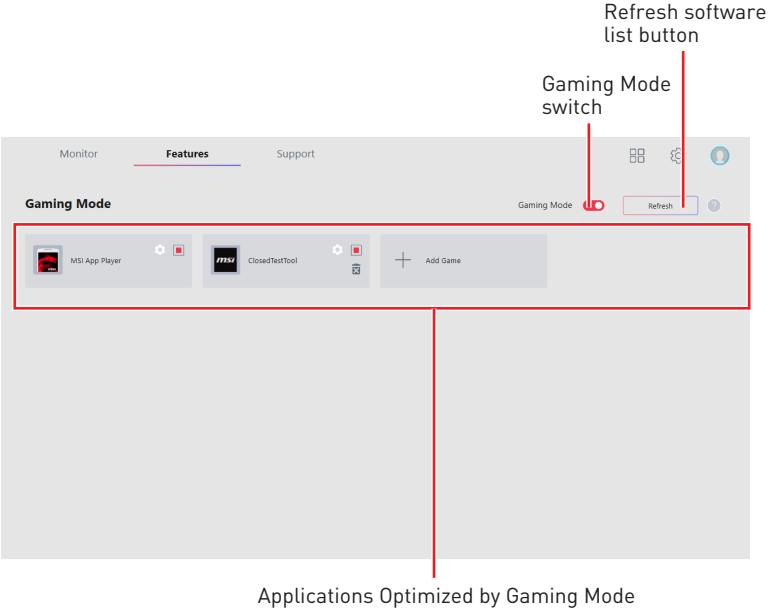


Important

Gaming Mode doesn't support PRO Series Motherboards.


Gaming Mode Option

 Game Mode switch and option settings are available in the upper right corner of each game icon. You can choose whether the game applies Game Mode, such as System Performance, True Color, Nahimic and Touchpad Disable while playing the game.

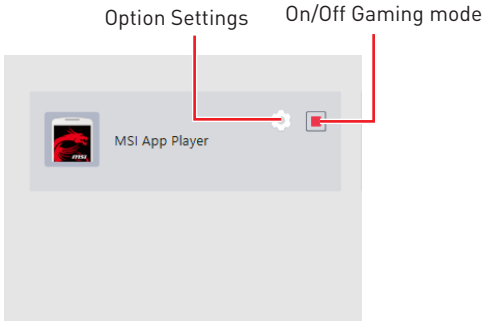


How to Add Games into Gaming Mode

 Click **Add Game** button. Then select the game's **.exe** file.

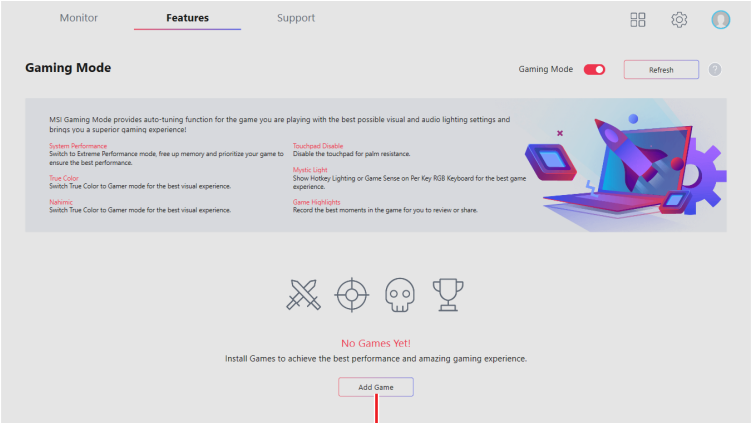


Add Game button

 Add Game button

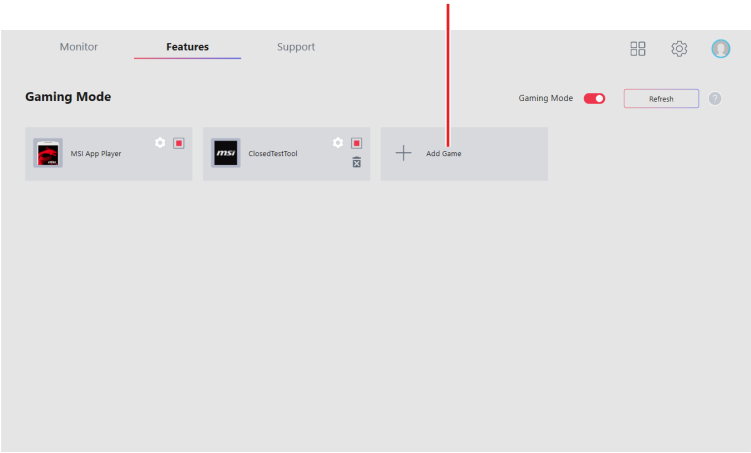


How to Remove Games from Gaming Mode

 1. Click **Remove Game** icon.



Remove Game button

 
2. When prompted, click **Yes** button to confirm this deletion, or click **Cancel** button to cancel this process.

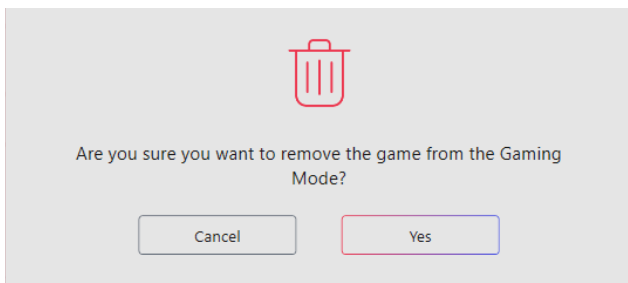


How to Enable Gaming Mode

You can enable the Gaming Mode to adjust settings for System Performance, True Color, Nahimic, Mystic Light and Game Highlights while playing the game.

 
1. Go to **Features > Gaming Mode**.

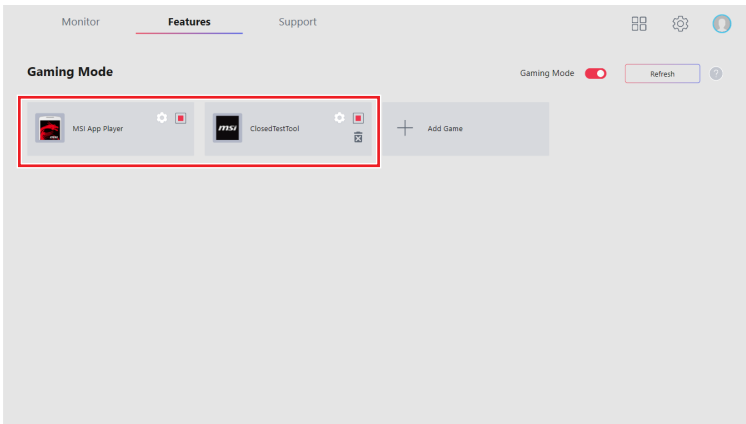

 2. Turn on the switch for the game.

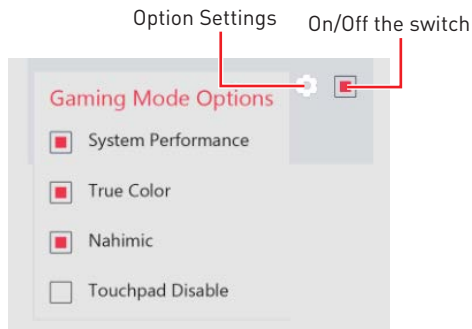

 3. Turn on Gaming Mode switch.

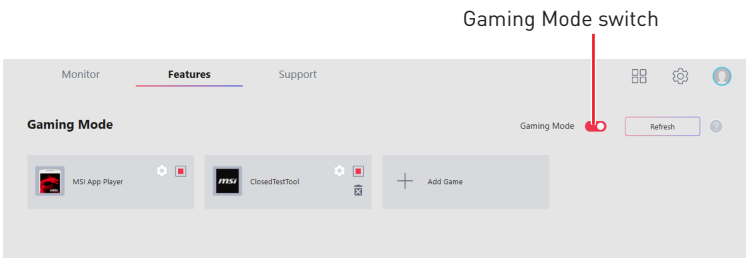

4. Play the game.

Smart Priority

The Smart Priority feature will optimize the computer system, monitor, cooler and other peripherals to provide the best experience while using creative applications.

 
Go to **Features > Smart Priority**.

User Priority Mode: User-defined software priority.

Real-Time Mode: The top level of the windows has best performance.

Smart Priority Mode: Automatically prioritize system resources to your most commonly used programs based on AI calculation.

Smart Priority main switch

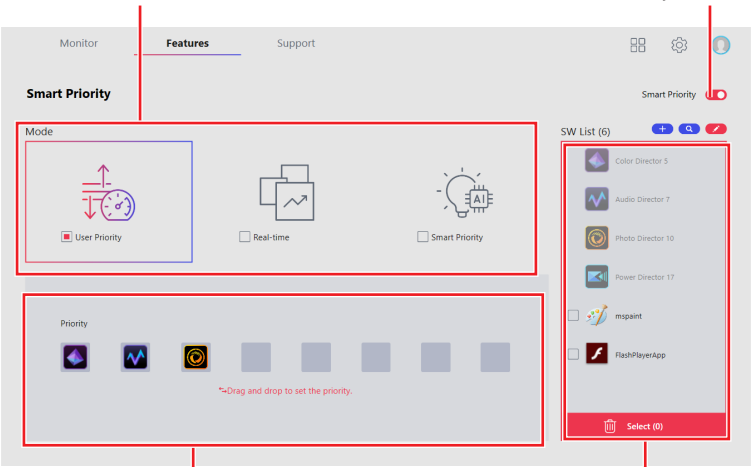

You can drag and drop to set the priority

List software supported by Smart Priority



Edit the software list

Refresh the software list

Add software to the software list



 
Important
Smart Priority doesn't support PRO Series Motherboards.

How to Enable Smart Priority


You can enable the Smart Priority for Processor Affinity, System Performance and Application Priority while using creative applications.

1. Go to **Features > Smart Priority**, and turn on Smart Priority main switch.

Turn on Smart Priority main switch

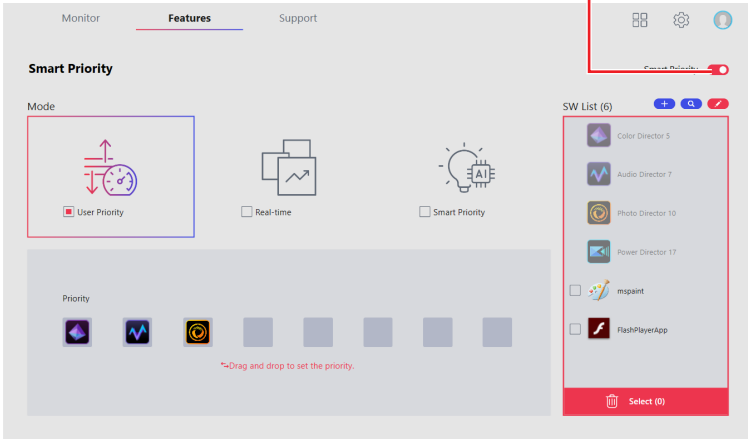

 2. Select one of the options.

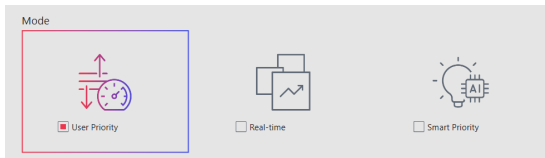

3. Run the application.

Important

 
In order to apply the settings, the Smart Priority must be enabled before running the software.

User Scenario


In addition to Gaming mode, users can choose from three scenarios and one customized option depending on different situations. Each scenario has default settings for CPU, DRAM, Fan, and Graphics Card. There is one more function called Software Control Mode, which can switch on/off only CPU and Fan settings in the selected mode.

Selecting User Scenario

1. Go to **Features > User Scenario**.
2. Turn on/off Software Control Mode in the upper right corner of the screen.

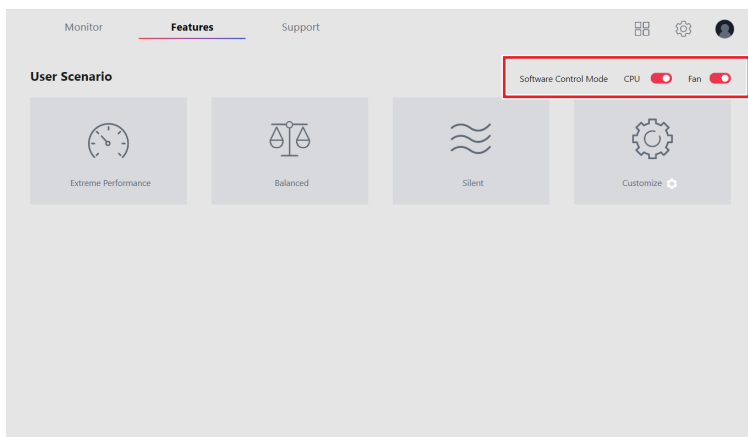

 3. Select one mode among Extreme Performance/ Balanced/ Silent/ Customize.

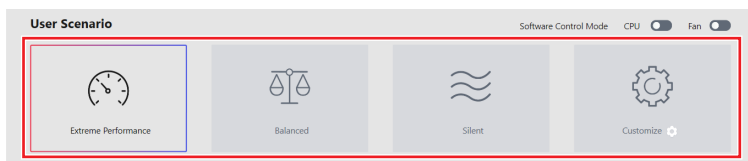

4. Restart your computer to apply the settings.
 - **Extreme Performance** – A configuration that boosts the highest possible performance for AAA games, and enables overclocking.
 - **Balance** - MSI recommended settings for most users.
 - **Silent** - A configuration that allows system to run smoothly with minimum loading.
 - **Customize** - Customize the performance level and fan speed as desired.

Canceling User Scenario

 
1. Click on the selected scenario again.




2. Restart your computer to apply the BIOS settings.

How to disable CPU/Fan settings when applying User Scenario

1. Turn off Software Control Mode in the upper right corner of the screen.

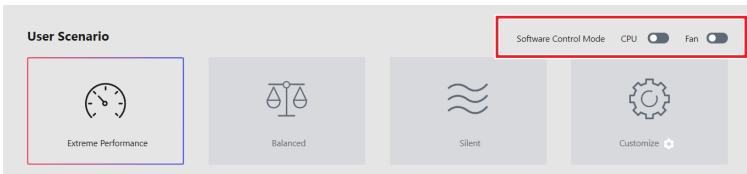

 2. Select one of the options to apply the mode except for CPU/Fan settings.

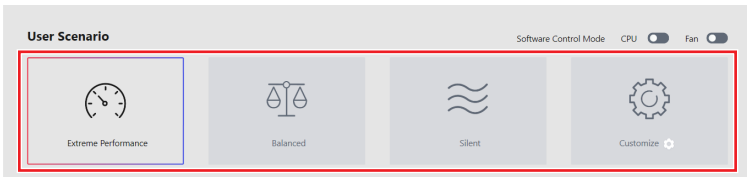


3. Restart your computer to apply the settings.

Important

- *Software Control Mode only controls the options in User Scenario, not including Gaming Mode.*
- *After turning on or off Software Control Mode, you need to select one of User Scenario modes to apply the settings.*
- *If you turn on Gaming Mode switch and also select one of User Scenario modes, the system will apply Gaming Mode settings first.*

Setting User Options

 In the lower right corner of User icon, click the setting  icon to customize user options.

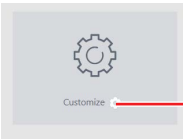


Click to set User Options

How to Adjust the CPU Frequency


- 1. Go to **Features > User Scenario**, click Customize.
- 2. In the MB section, click **CPU Frequency** setting .

 Click here

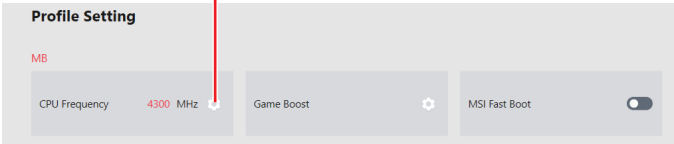

CPU frequency = Ratio * BCLK

 Click  /  to adjust CPU ratio and Base Clock frequency (BCLK). You can also fill out the value in the input box.

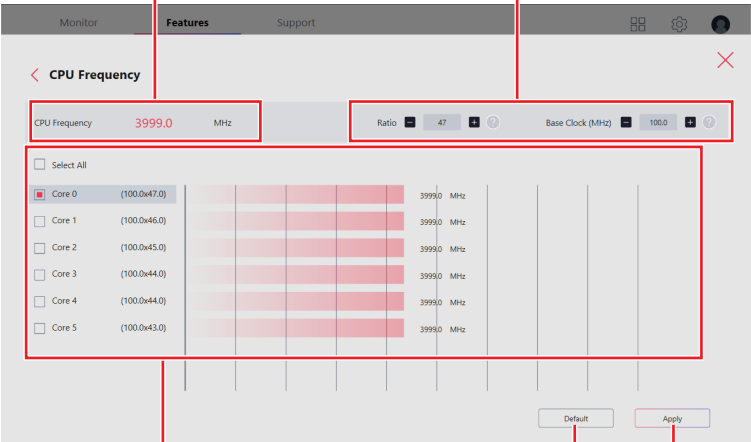


Select all or individual cores

Default values


Apply changes

How to Adjust the Motherboard Voltage

 - 1. Go to **Features > User Scenario**, click Customize.
- 2. In the MB section, click **Voltage** setting .

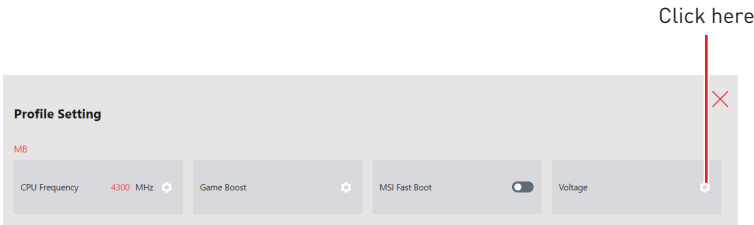

 Click   to adjust voltage value.
You can also fill out the value in the input box.

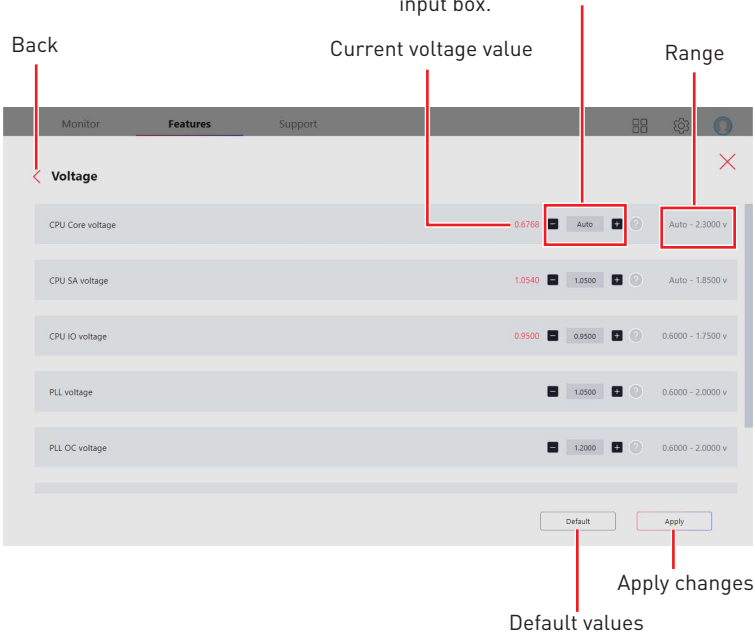


How to Use Game Boost

The GAME BOOST feature allows you to overclock your computer.

- 1. Go to **Features > User Scenario**, click Customize.
- 2. In the MB section, click **Game Boost** setting .



 For Motherboard with Game Boost

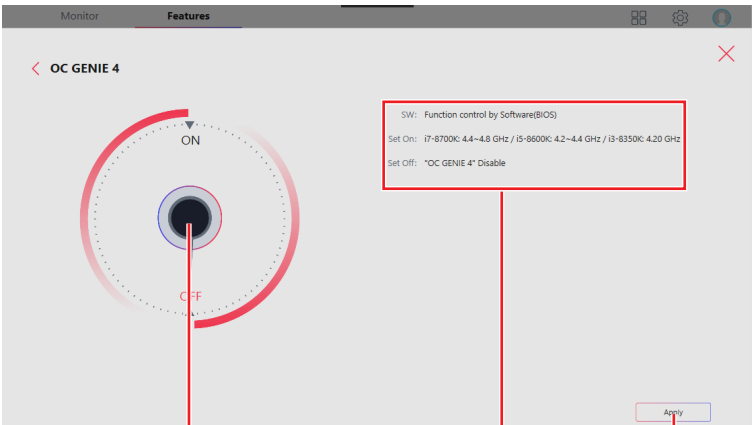


On/Off button to enable/disable
Game Boost feature

Apply changes

Function description

 For Motherboard with Game Boost 8 Stages

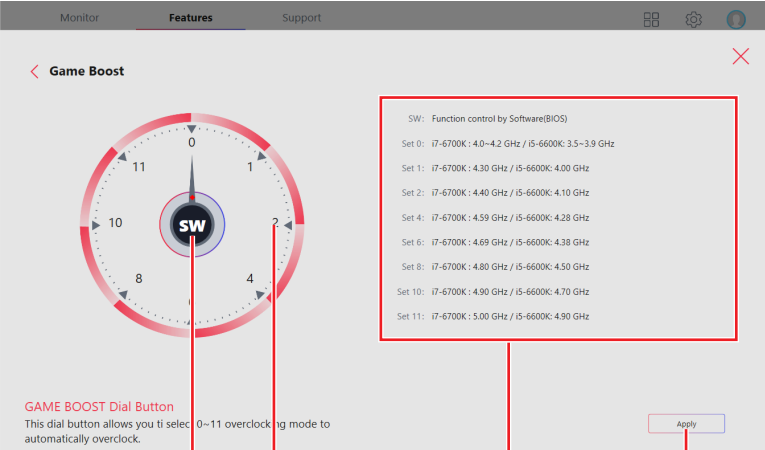


Click 0~11 number to select a stage from number 0 (default) to number 11 (extreme) for overclocking the processor.

GAME BOOST Dial Button allows you switch GAME BOOST control between software (SW) and hardware (HW) by clicking on the center button.

How to Adjust the GPU and GPU Memory Frequency


 
1. Go to **Features** > **User Scenario**, click Customize.

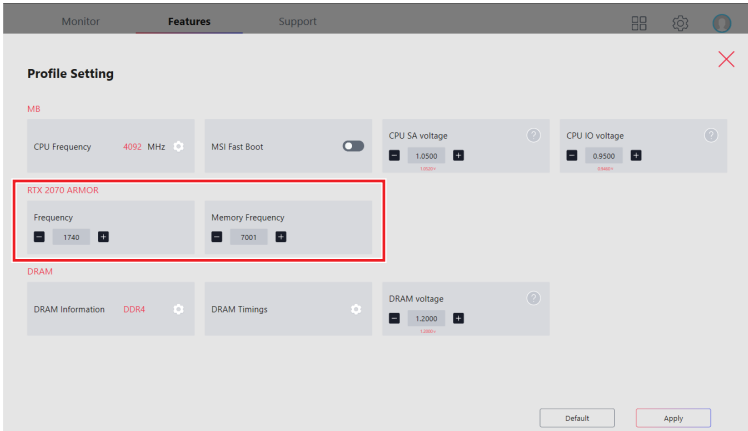

2. Click   to adjust GPU Frequency and GPU Memory Frequency. You can also fill out the value in the input box.
3. Click the Apply button to apply change.

How to Adjust the DRAM Timing

  - 1. Go to **Features > User Scenario**, click Customize.
- 2. In the DRAM section, click **DRAM Timings** setting .

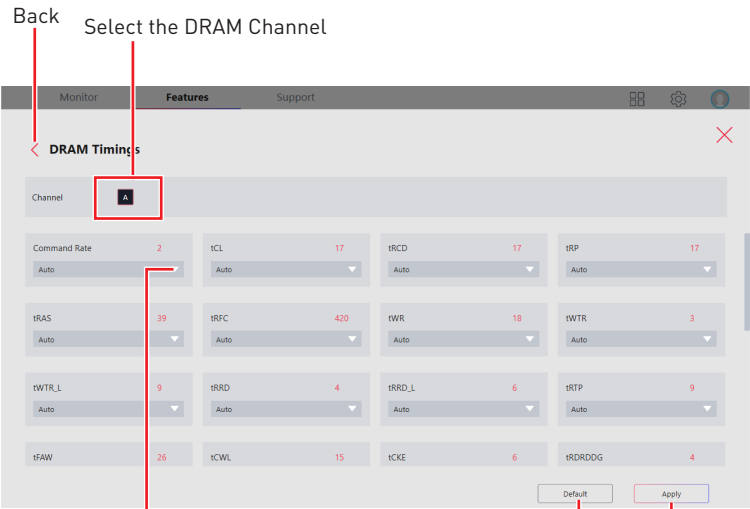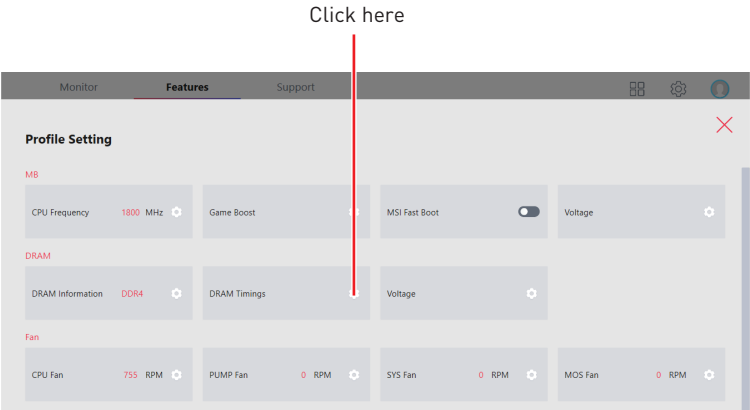


Click to select an available value from the drop-down menu

Apply changes


Default values

How to Adjust the DRAM Voltage

 - 1. Go to **Features** > **User Scenario**, click Customize.
- 2. In the DRAM section, click **Voltage** setting .

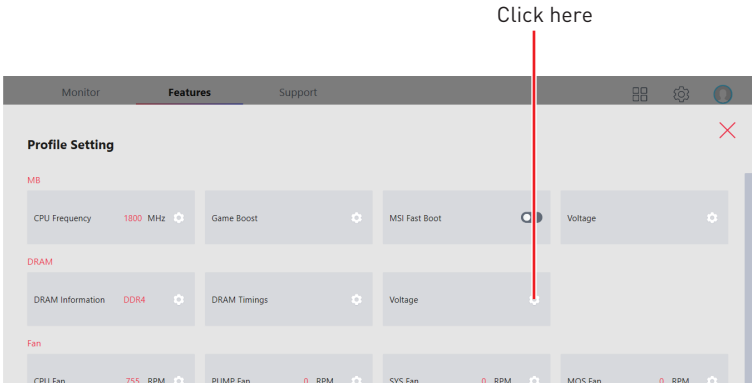

 Click   to adjust voltage value.
You can also fill out the value in the input box.

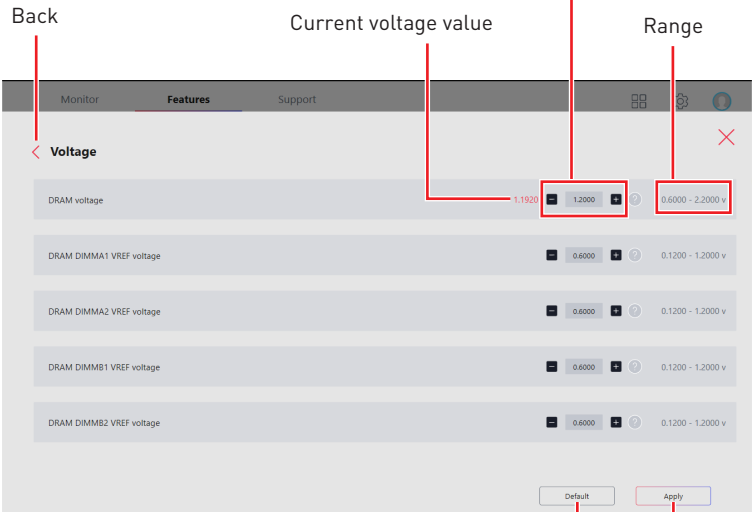

Apply changes

 
Adjusting the Fan Speed

Fan speed control panel provides Smart Fan and Manual Fan settings. You can switch the control mode by clicking the Smart Fan or Manual Fan tabs on the Fan control panel.

How to enter the fan speed control panel

- 1. Go to **Features > User Scenario**, click Customize.
- 2. In the Fan section, click **CPU/ PUMP/ SYS fan** setting .


Click here

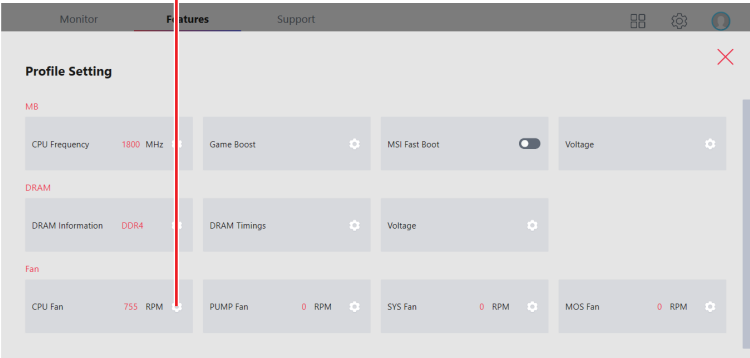

How to use the Smart Fan control panel

The Smart Fan control panel contains 4 dots which allow you to drag and adjust the Smart Speed slopes. The fan speed will change along with the Smart Speed curve.

 Fan Tune - click to automatically optimize the smart fan setting.

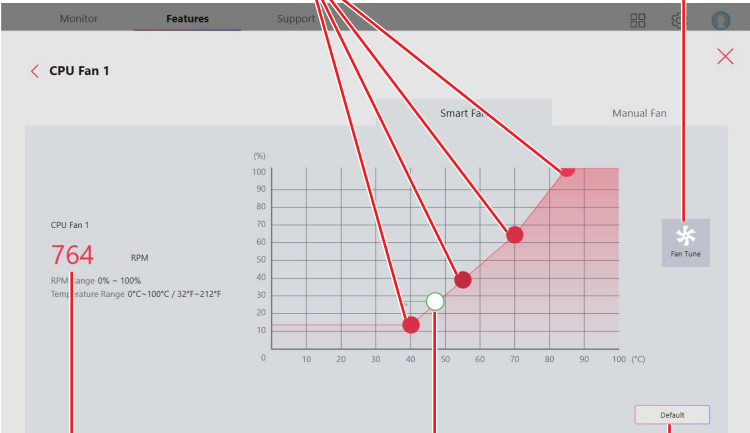


Current fan speed

The white dot will create strip chart in real time.

Default setting

How to use the Manual Fan control panel

 Fan Tune - click to automatically optimize the smart fan setting.

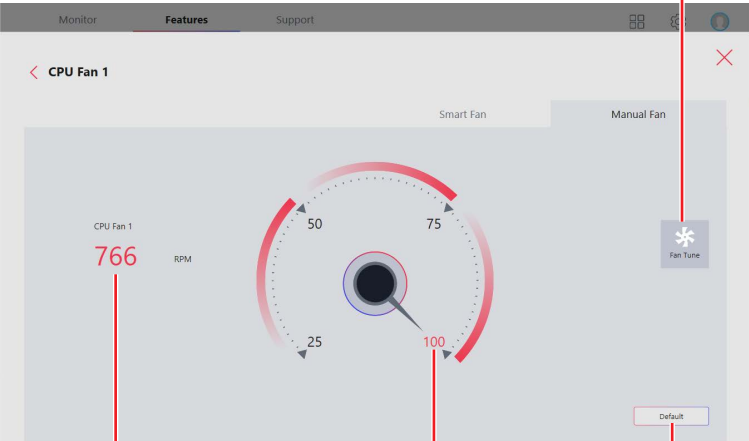

The screenshot shows a software interface for controlling a fan. At the top, there are tabs for 'Monitor', 'Features', and 'Support'. Below these, the title 'CPU Fan 1' is displayed with a back arrow. The main area contains a large circular speed dial with a needle pointing to 100. The dial has markings for 25, 50, 75, and 100. To the left of the dial, the text 'CPU Fan 1' is above the number '766', which is above 'RPM'. To the right of the dial, there are two tabs: 'Smart Fan' and 'Manual Fan'. Below the 'Manual Fan' tab is a button with a fan icon labeled 'Fan Tune'. At the bottom right, there is a button labeled 'Default'. Red lines connect the text labels to their corresponding elements in the interface.

Current fan speed

 
Click the percentage to manually control the fan speed.

Default setting

How to Enable MSI Fast Boot

The MSI Fast Boot feature can decrease computer startup time.


1. Go to **Features** > **User Scenario**, click Customize.
2. In the MB section, turn on **MSI Fast Boot** switch.

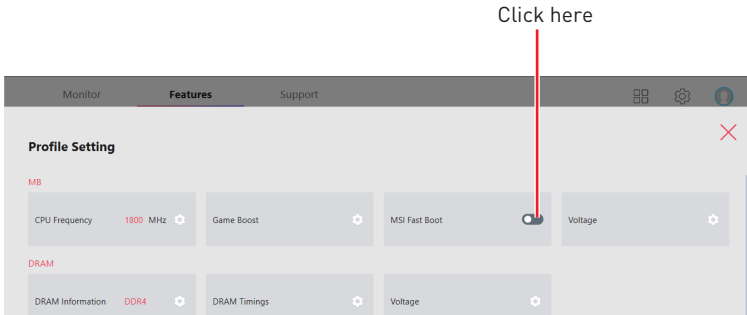

3. Click the Apply button to apply changes.
4. Reboot your computer, and MSI Fast Boot will be enabled.

Hardware Monitoring

 Hardware Monitoring feature provides a custom hardware monitor gadget to display the system status.

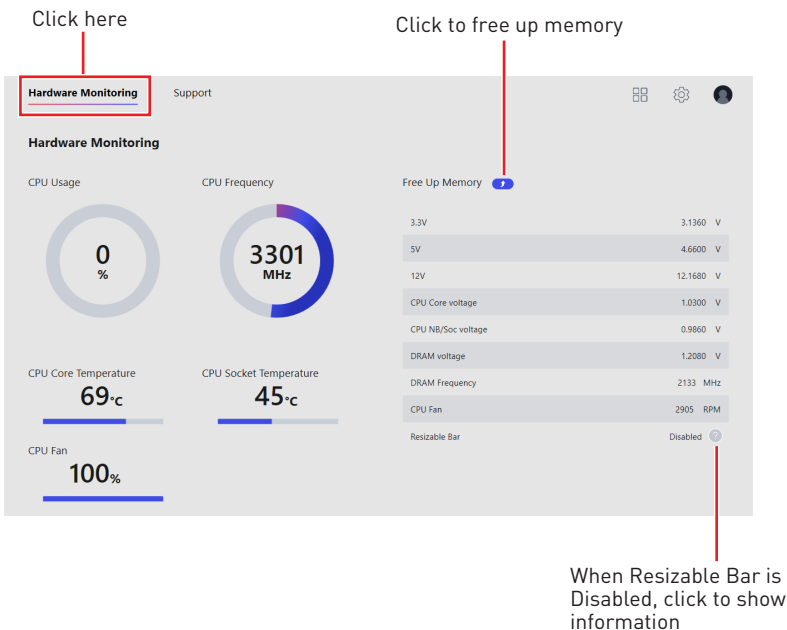

Hardware Requirements for Resizable Bar:

- MSI Motherboard:
 - Intel Z390/ H310/ B360/ H370/ Z370/ X299/ Z490/ B460/ H410/ Z590/ B560/ H510
 - AMD B550/ X570/ A520/ X470/ B450/ X470/ B450/ X399/ TRX40
- MSI Graphics card:
 - NVIDIA 3000 series
 - AMD 6000 series



Important

Resizable Bar will be available when the computer hardware meets one of the above requirements.

FROZR AI Cooling (optional)

FROZR AI Cooling feature will use AI technology to detect CPU & GPU temperatures and automatically adjust fan duty of system fans to a proper value.

Supported Hardware:

- Motherboard:
 - Support PCIe 4.0 slots
- Graphics card:
 - MSI NVIDIA 3000 series and AMD 6000 series graphics cards



Important

FROZR AI Cooling will be available when the computer hardware meets both of the above requirements.

How to enable FROZR AI Cooling

 
1. Go to **Features > FROZR AI Cooling**.
2. Select one among Performance/ Silent/ Manual Mode.
 - **Performance** - Boost extreme performance with higher fan speed.
 - **Silent** - Adjust fan speed for best cooling and silence.
 - **Manual** - Customize fan speed as desired.

On/Off the switch

On - To use FROZR AI Cooling to control system fans

Off - To apply User Scenario Customize settings to control system fans

Choose one mode from the drop-down menu

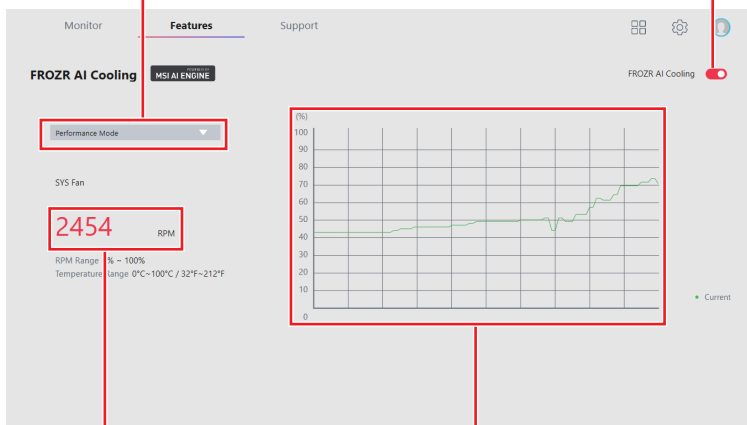

Current fan speed

Current fan speed curve

 
Setting Manual Mode for FROZR AI Cooling

- 1. Go to **Features > FROZR AI Cooling**.
- 2. Select Manual Mode from the drop-down menu.



- 3. Fill out CPU&GPU temperatures and the corresponding fan duty for different three stages.

Blue curve - GPU fan curve
Red curve - CPU fan curve
Green curve - Realtime system fan curve

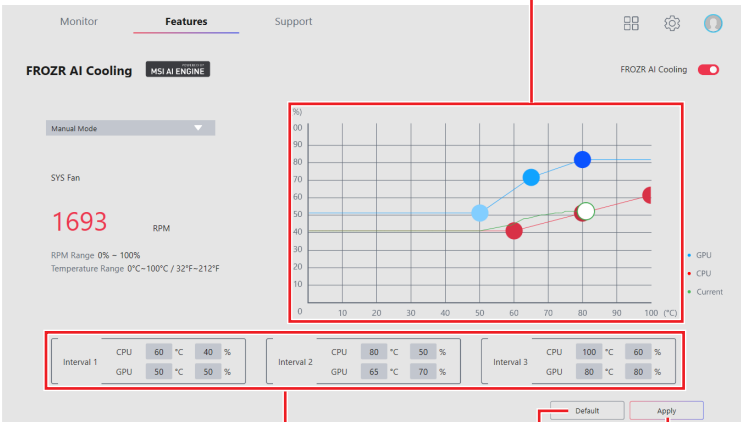

Fill out temperatures and fan duty for three stages

Click to apply for Default settings

Click to apply for Manual Mode settings

Game Highlights

Game Highlights feature will automatically capture clips of amazing gameplay moments. It looks for certain events which occurs in games, and saves the captured videos in your local folder.

Go to **Features > Game Highlights**.

 


Important

Game Highlights feature only supports certain series Motherboards. In addition, this function is currently available in Fortnite, League of Legends, Apex Legends, Valorant, PUBG, Overwatch, Heroes of the Storm.

How to Share Game Highlights to Social Media


Game Highlights feature supports uploading videos directly to social media, such as YouTube, Twitter, and Discord.

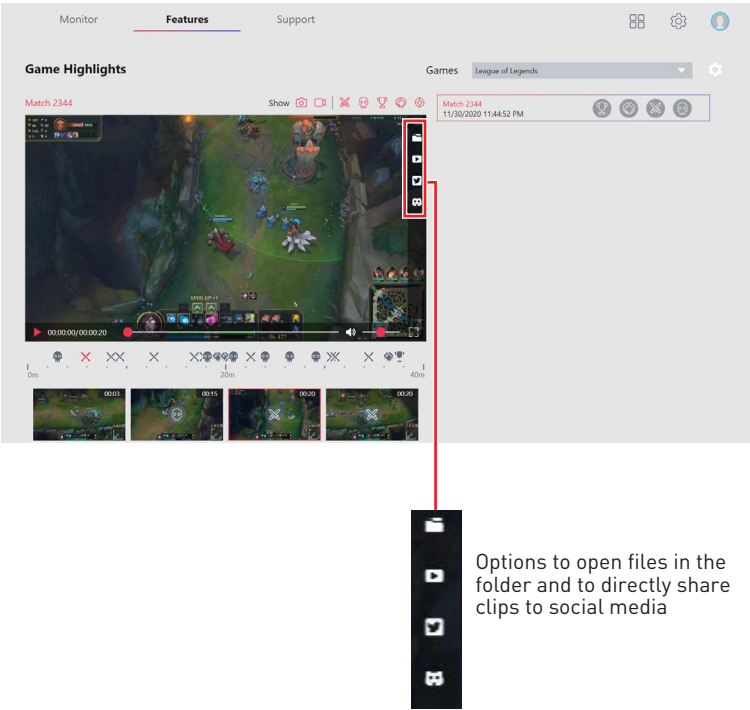

How to Remove Game Highlights

You can choose to delete game highlight video which includes several clips or to remove one single game highlight clip from the whole game video.

 Click here to remove the game highlight video

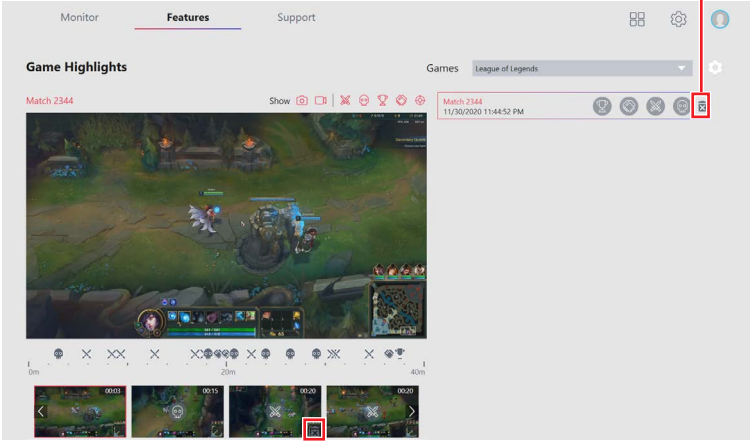

The screenshot shows the 'Game Highlights' section of a software interface. At the top, there are tabs for 'Monitor', 'Features', and 'Support', with 'Features' being the active tab. Below the tabs, the 'Game Highlights' title is followed by a 'Games' dropdown menu set to 'League of Legends'. A 'Match 2344' is selected, showing a game video player and a list of highlight clips. A red box highlights a trash icon in the top right corner of the interface, with an arrow pointing to it from the text 'Click here to remove the game highlight video'. Another red box highlights a trash icon in the bottom right corner of the highlight clips list, with an arrow pointing to it from the text 'Click here to remove the game highlight clip'.

 
Click here to remove the game highlight clip

Installing MSI Companion


Before you enable Game Highlights function, you should install MSI Companion first.

1. Go to **Features > Game Highlights**.
2. When a prompt window appears, click **Download MSI Companion app**.


Click here

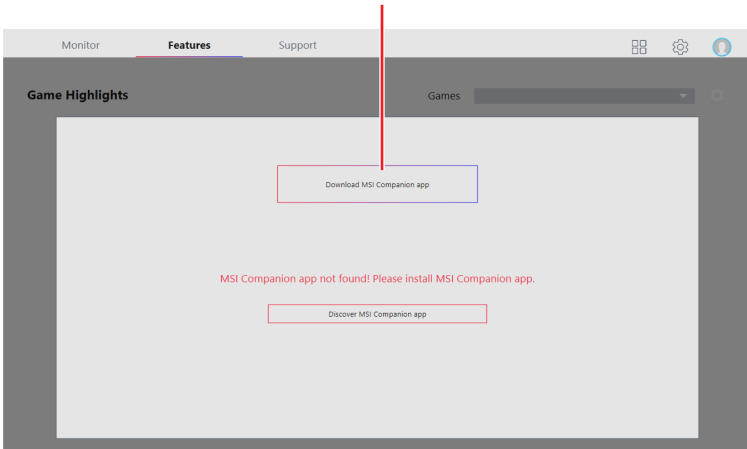

 
3. Execute **MSI Companion-Installer.exe**, and click **Next** to continue the process.

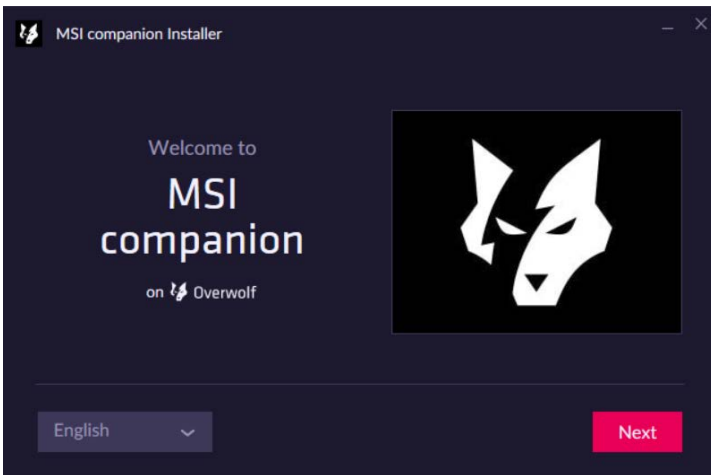

 4. Select **I have read and accepted Overwolf's terms and Privacy Policy**.

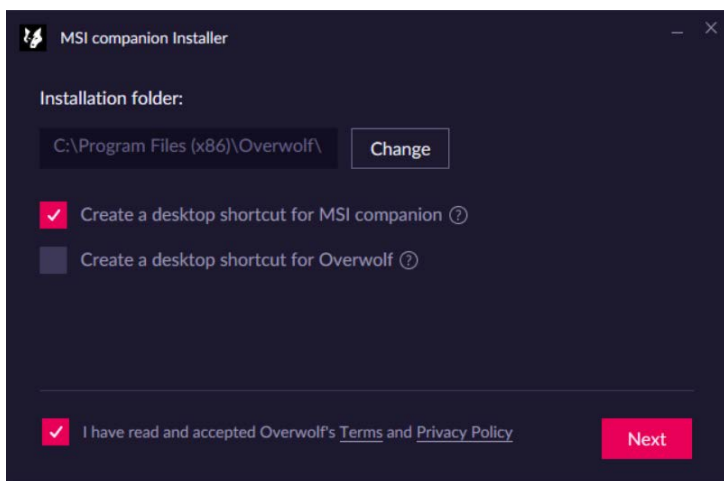

 5. After finishing MSI companion and Overwolf Installation, click **Launch** to activate MSI companion.

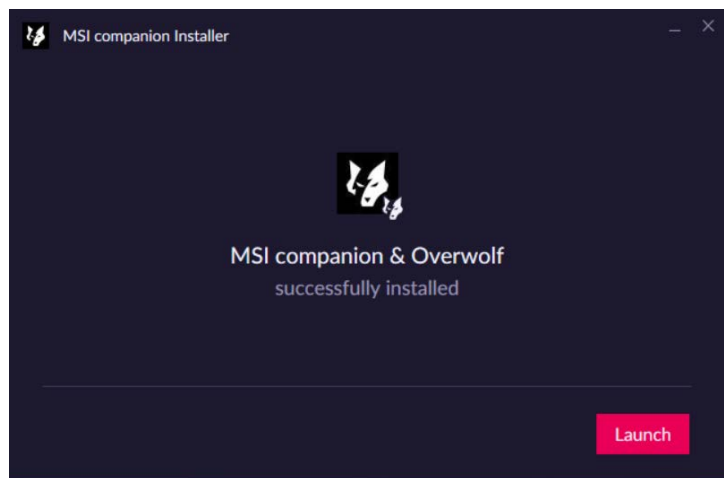

How to Activate MSI Companion

 
You can activate MSI companion by one of the following methods:

- Open Overwolf in System Tray, and click MSI Companion .
- Press ctrl + tab in games to open Overwolf, and click MSI Companion .
- Click MSI Companion  on the desktop.


Setting MSI Companion

After activating MSI Companion app, you can adjust settings about Control and Display from the pop-up window.

On Control tab

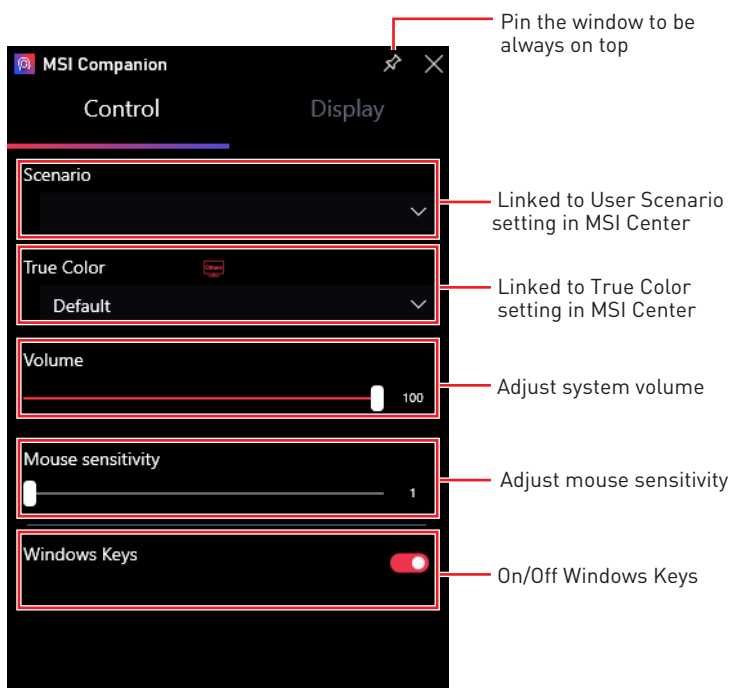

On Display tab

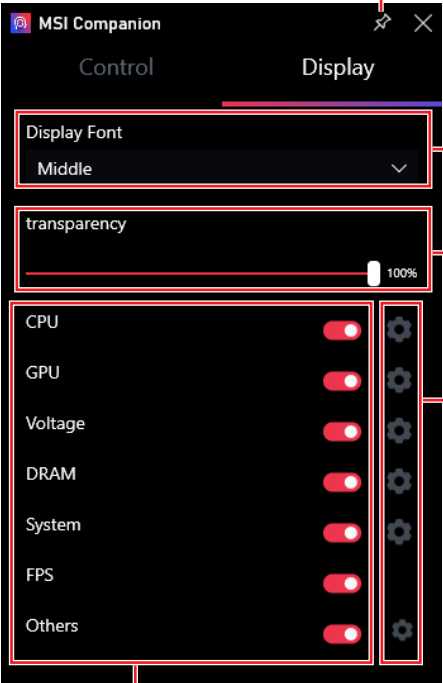 

The screenshot shows the 'Display' tab in the MSI Companion application. It features a 'Control' section with 'Display Font' set to 'Middle' and a 'transparency' slider at 100%. Below these is a list of system performance metrics: CPU, GPU, Voltage, DRAM, System, FPS, and Others, each with a toggle switch and a settings gear icon. A red box highlights the entire settings area.


Pin the window to be always on top

Adjust font size for system monitor

Adjust transparency for monitor background


Click the setting icon to choose the detailed items you want to display on the screen

 Select the system performance you want to display on the screen

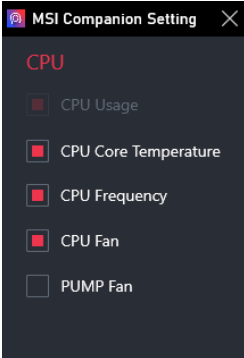

The screenshot shows the 'MSI Companion Setting' window, specifically the 'CPU' section. It lists several options with checkboxes: CPU Usage, CPU Core Temperature, CPU Frequency, CPU Fan, and PUMP Fan. The 'CPU' title is highlighted in red.

 System monitor

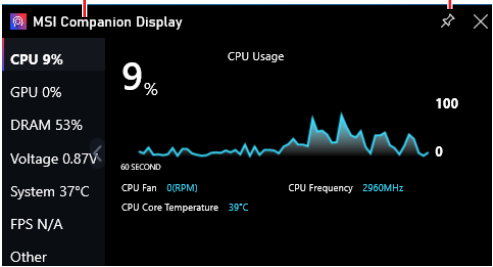


The screenshot shows the 'MSI Companion Display' window. On the left is a sidebar with system metrics: CPU 9%, GPU 0%, DRAM 53%, Voltage 0.87V, System 37°C, FPS N/A, and Other. The main area displays a large '9%' for CPU Usage, a line graph for CPU Usage over 60 seconds, and real-time data for CPU Fan (0/RPM), CPU Frequency (2960MHz), and CPU Core Temperature (39°C).

Pin the window to be always on top

Setting Game Highlights

- Go to **Features > Game Highlights**, and click setting .

 
Click here

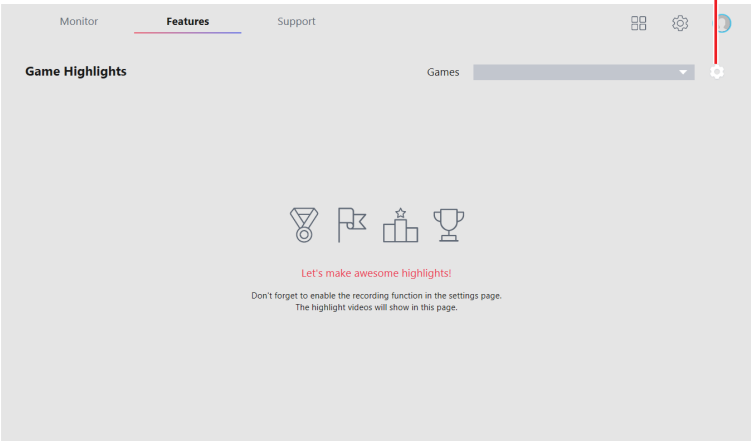

- Adjust settings for Games, Capture, and Storage.


On Games tab

 On/Off Game Highlights

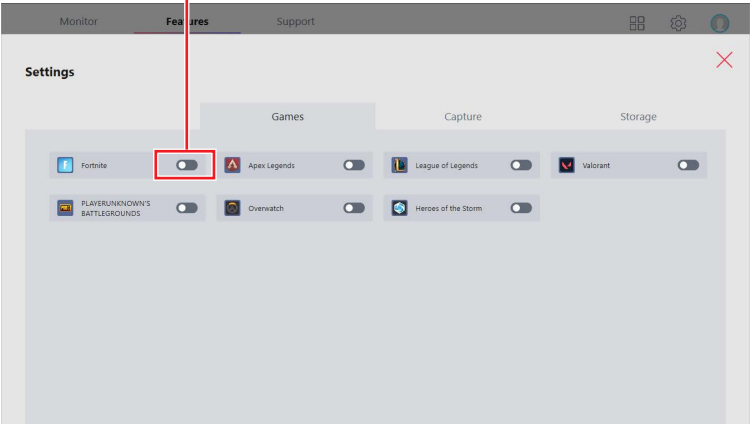


On Capture tab

 Adjust hotkey settings
for manual capture

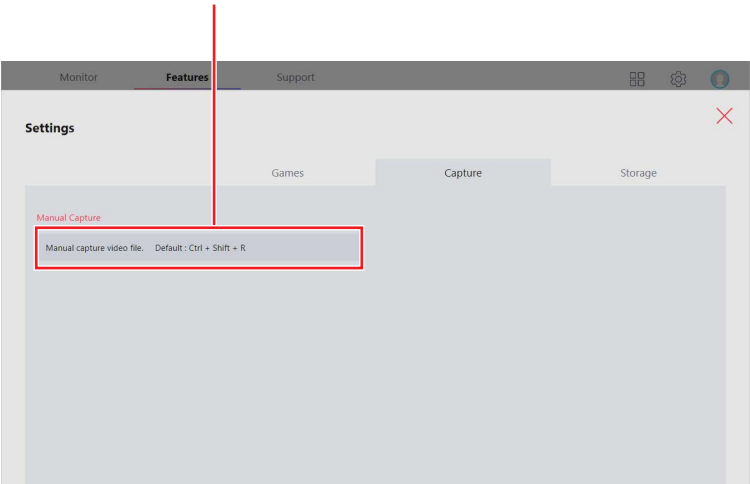

On Storage tab

 Select Auto Manage/ Manual
Manage for file size and disk
space settings

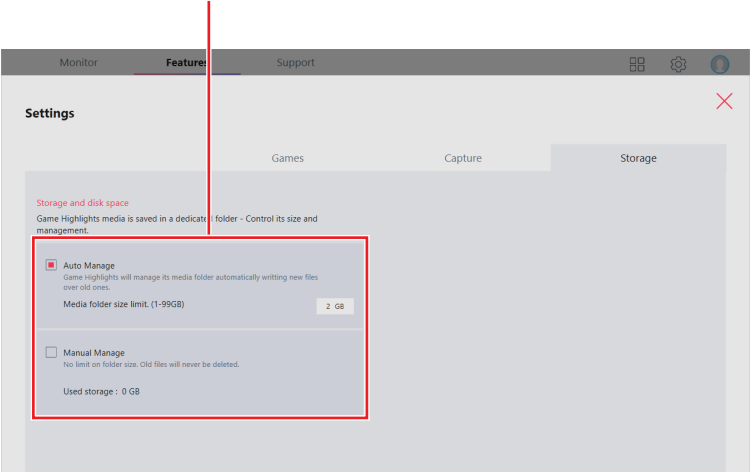


True Color

With True Color function, you can adjust the best screen gamma, saturation, brightness and contrast settings for your eyes.

The True Color feature supports games in windowed mode.

 Go to **Features > True Color**.

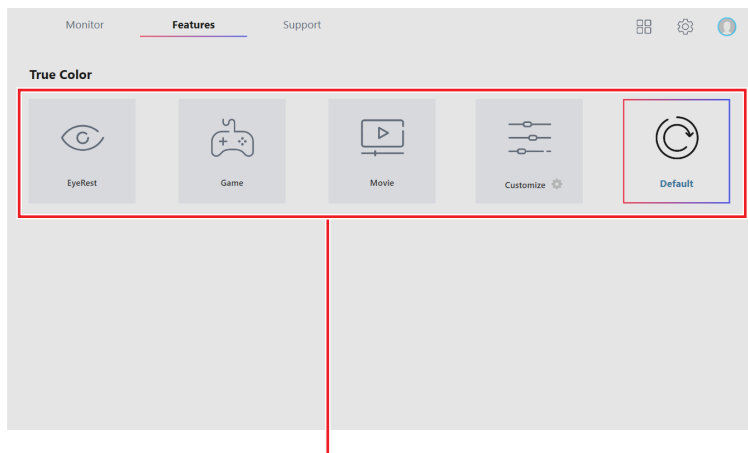

Select one of screen color settings

True Color Preset Options

 
When you click the preset option, the screen settings will be immediately applied to your computer. The detailed options are as follows:

- **EyeRest** - reduces blue light of your computer screen for eye care.
- **Gaming** - enhances the contrast of the screen.
- **Movie** - enhances the dynamic contrast of the screen.
- **Customize** - allows you to adjust gamma, contrast and color balance of your computer screen. Please refer to the instructions on page 41.
- **Default** - uses the system default setting.


How to customize screen color

The True Color control panel has a **Customize** feature that allows you to customize your own colors.

1. Click the setting  icon in the lower right corner of Customize icon.

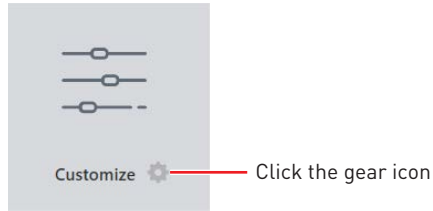

 2. Click and drag the sliders to adjust the Gamma, Level, Brightness and Contrast on Red, Green and Blue tabs.

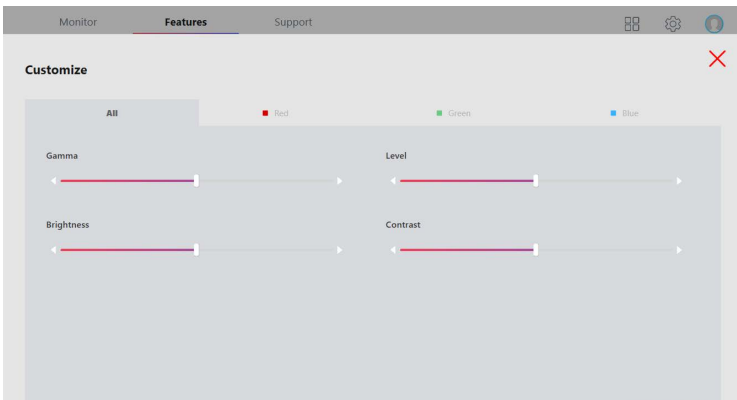


3. Click the Apply button to save the settings.

LAN Manager

LAN Manager is applied to Windows 10 network traffic shaping. It keeps your internet speed stable and faster during heavy uploads/downloads and reduces the ping value of online games. If your motherboard has a Wi-Fi module, it can also provide virtual access point functionality for your mobile device for traffic shaping.

To use LAN Manager:

 1. Install the LAN driver.
2. Connect your computer to the internet.
3. Go to **Features > LAN Manager**.

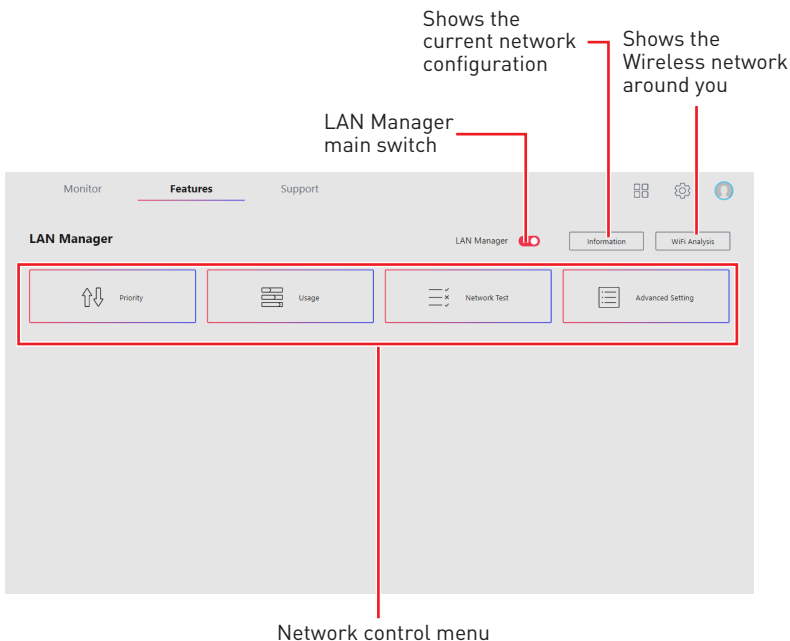


Network Control Menu

Other relevant settings on the LAN Manager Control Panel are as follows:


- **Priority** - customizes application network bandwidth priorities.
- **Usage** - displays the application network usage status.
- **Network Test** - allows you to set up bandwidth control.
- **Advanced Setting** - allows you to expand RWIN to accelerate download speed. You can also block IP address and set up virtual access point.

Setting Network Speed

 
- 1. Select the **Network Test** control panel.

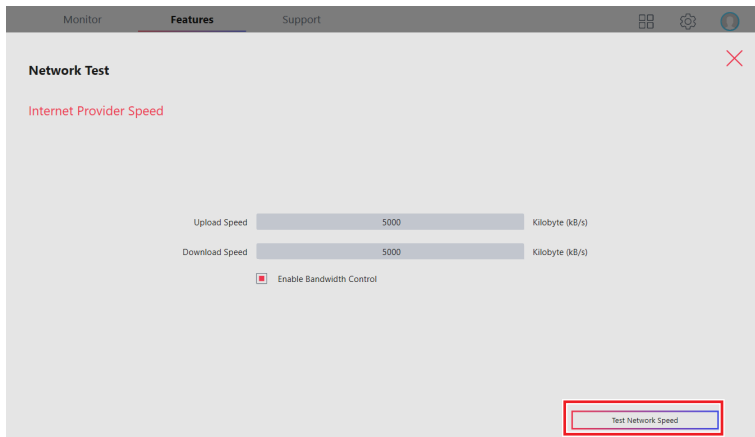

 - 2. Click **Test Network Speed**.
- 3. cFos Speed Test web page will be opened.

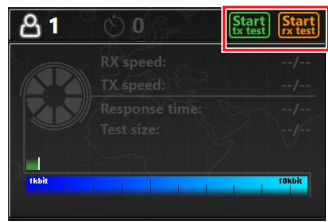

 
- 4. Click **Start tx test** to test **Upload speed**, and click **Start rx test** to test **Download speed**.
- 5. Fill in the speed test results in the **Upload speed** and **Download speed** input boxes.
- 6. Check the **Enable Bandwidth Control** checkbox.

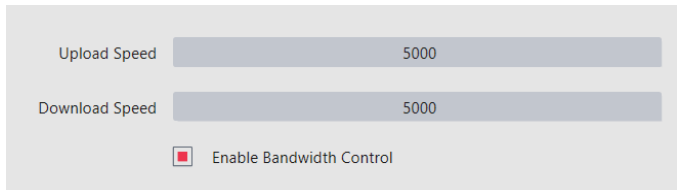


Customizing Application Priorities

The Priority control panel displays what application is currently using network bandwidth.

 
- 1. Test and set the network speed as described previously.
- 2. Select the **Priority** control panel.

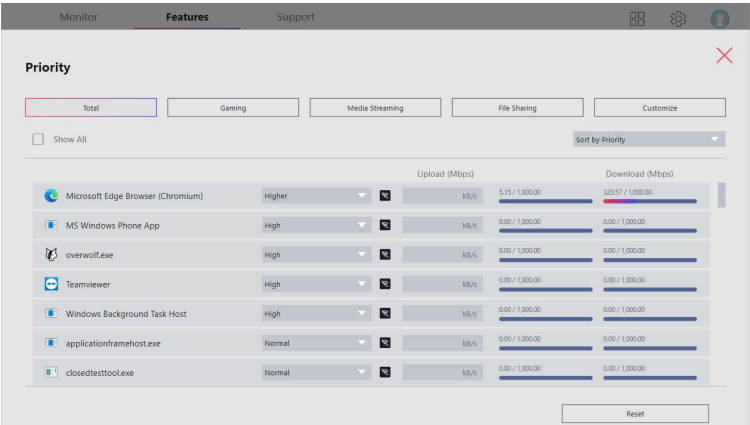

 - 3. Use the category bar to filter the displayed applications categories.



 
- 4. Click the drop-down menu next to the application name to select the priority of the application.

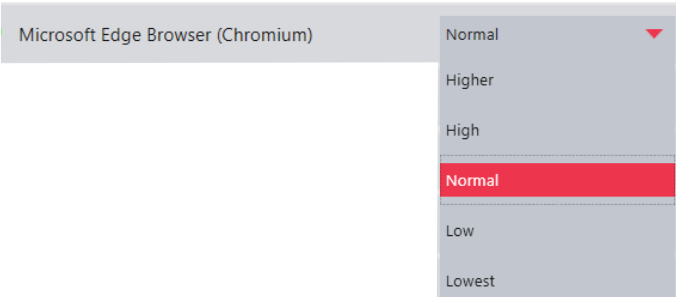


Note: To stop some applications from using bandwidth, you can click  to block the application.

Mystic Light

 Mystic Light feature allows you to control LED light effects of MSI & partner products. For some earlier products, you can go to product download page to download the applicable LED control software.

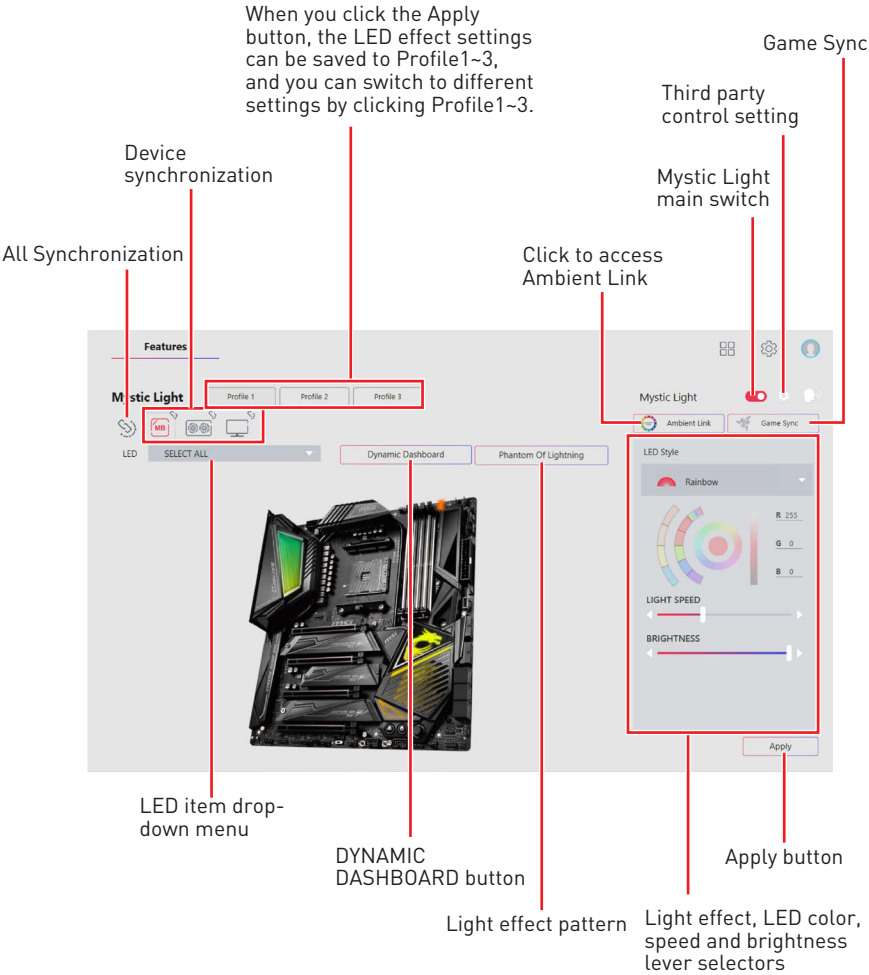

 - Device synchronization** - In this section, you may synchronize LED light effect to your devices.



- All synchronization** - Click the big chain icon on the left side of all the devices.



 
- To synchronize devices** - Click the chain icon above device icon. When the chain icon turns red, it indicates that the device has synchronized LED effect settings with other devices.



Chain icon - indicates the device has been synchronized.

Broken-chain icon - indicates the device is not synchronized.

- Individual** - You can also change settings for one single device. To do that, click the chain icon and the color will turn gray as below.

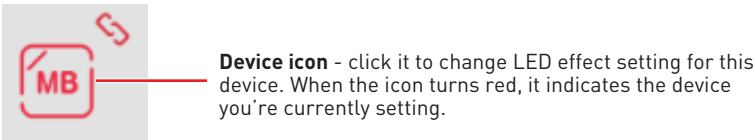


Device icon - click it to change LED effect setting for this device. When the icon turns red, it indicates the device you're currently setting.

- LED item drop-down menu** - Click to select the LED item on the device. The LED effects vary depending on your LED item selection.

LED	SELECT ALL
	IO Cover
	PCH
	JRGB1
	JRAINBOW1
	JRAINBOW2
	JCORSAIR-LED RGB STRIP
	JCORSAIR-HD RGB FAN
	JCORSAIR-SP RGB FAN
	JCORSAIR-LL RGB FAN
	SELECT ALL

 - **Light effect drop-down menu**

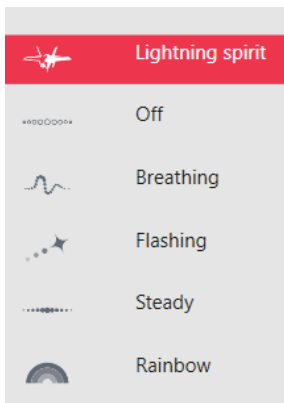

Click it to select LED light effects. Please note that the options about light effects would be more or less depending on the devices you have. It will only list the light effects which are available for all applicable devices.

- **LED Color selector** - In this section, you may select the color for one single light effect (Stack, Breathing, Flashing etc.).

The outer arc is a custom color picker and the inner arc is the default color picker that cannot be changed. You can simply change the LED color by clicking on the color on the outer or inner arc. To store a custom color, click one of the color slots on the outer arc to store the color of your choice.

 


You can specify a color by editing an RGB (red, green, blue) color value between 0 and 255.

Drag the brightness slider up to increase brightness or drag down to decrease brightness.

Use the Hue Circle to choose the color you want. The color you choose will be displayed on the center circle.

- **Effect speed and brightness level**

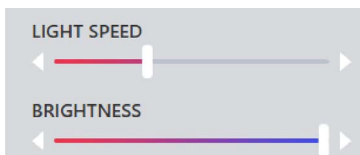

Drag the sliders to adjust the LED light effect switching speed and light brightness.

Please note that these functions will only be available if your device supports it.

Ambient Link

With the Ambient Link feature, it will provide visual color feedback on Philips Hue and Nanoleaf depending on what is happening in games. To use Ambient Link, you need to follow the instructions below to complete the link setup.

Supported Motherboards

- MEG Z690 GODLIKE
- MEG Z690 ACE
- MEG Z690 UNIFY
- MEG Z690 UNIFY-X
- MEG Z690I UNIFY
- MPG Z690 CARBON WIFI
- MPG Z690 CARBON EK X
- MPG Z690 FORCE WIFI
- MPG Z690 EDGE WIFI DDR4
- MPG Z690 EDGE TI WIFI DDR4
- MPG Z690 EDGE WIFI
- MPG Z690 EDGE TI WIFI
- MAG Z690 TOMAHAWK WIFI DDR4
- MAG Z690 TORPEDO
- MAG Z690 TORPEDO EK X
- MAG Z690 TOMAHAWK WIFI
- PRO Z690-A WIFI DDR4
- PRO Z690-A WIFI
- PRO Z690-A DDR4
- PRO Z690-A
- MAG H670 TOMHAWK WIFI DDR4
- Z690-S01
- PRO Z690-P DDR4
- MAG Z690M MORTAR WIFI
- PRO Z690-P WIFI
- PRO H670-A WIFI DDR4
- PRO B660M-A CEC WIFI DDR4
- PRO B660M-A CEC WIFI
- MPG B660I EDGE WIFI
- MAG B660 TOMAHAWK WIFI DDR4
- MAG B660 TOMAHAWK WIFI
- MAG B660 TOMAHAWK EVA e-PROJECT
- MAG B660M MORTAR DDR4
- MAG B660M MORTAR WIFI DDR4
- MAG B660M MORTAR
- MAG B660M MORTAR WIFI
- MAG B660M BAZOOKA DDR4
- MAG B660M BAZOOKA
- PRO B660M-A WIFI DDR4
- PRO B660M-A WIFI
- PRO B660M-A DDR4
- PRO B660M-A WIFI DDR4
- PRO B660M-A
- PRO B660M-G DDR4
- PRO B660M-B DDR4
- B660M PLUS DDR4
- PRO B660M-G
- PRO B660M-B
- B660M PLUS
- PRO H610M-G DDR4
- PRO Z690-P WIFI
- PRO H670-A WIFI DDR4
- PRO H610M-G
- B660M PLUS
- PRO B660-A DDR4
- PRO B660-A
- PRO H610M 12VO

- MEG Z590 GODLIKE
- MEG Z590 ACE
- MEG Z590 ACE GOLD EDITION
- MEG Z590I UNIFY
- MPG Z590 GAMING CARBON WIFI
- MPG Z590 CARBON EK X
- MPG Z590 GAMING EDGE WIFI
- MPG Z590 GAMING EDGE WIFI SP
- MAG Z590 TOMAHAWK WIFI
- MPG Z590M GAMING EDGE WIFI
- MEG Z590 UNIFY
- MEG Z590 UNIFY-X
- MAG B560 TOMAHAWK WIFI
- MAG B560M MORTAR WIFI
- MPG B560I GAMING EDGE WIFI
- MEG X570S ACE MAX
- MPG X570S CARBON MAX WIFI
- MPG X570S CARBON EK X
- MPG X570S EDGE MAX WIFI
- MPG X570S GAMING PLUS MAX
- MAG X570S TOMAHAWK MAX WIFI
- MPG X570 GAMING PRO CARBON WIFI
- MEG X570 GODLIKE
- MEG X570 ACE
- MEG X570 UNIFY
- PRESTIGE X570 CREATION
- MPG X570 GAMING EDGE WIFI
- MAG X570 TOMAHAWK WIFI
- MAG A520M VECTOR WIFI
- MAG A520M BAZOOKA WIFI
- MPG B550 GAMING CARBON WIFI
- MPG B550 GAMING EDGE WIFI
- MPG B550I GAMING EDGE WIFI
- MPG B550I GAMING EDGE MAX WIFI
- MAG B550M MORTAR WIFI
- MEG B550 UNIFY
- MEG B550 UNIFY-X
- MAG B550M VECTOR WIFI
- MAG B550 TOMAHAWK MAX WIFI
- MAG B550M MORTAR MAX WIFI
- Creator TRX40
- MEG Z490 GODLIKE
- MEG Z490 ACE
- MEG Z490 UNIFY
- MPG Z490 GAMING CARBON WIFI
- MPG Z490M GAMING EDGE WIFI
- MEG Z490I UNIFY
- MPG Z490 GAMING EDGE WIFI
- MAG B460M MORTAR WIFI
- MPG B460I GAMING EDGE WIFI
- B450I GAMING PLUS AC
- X470 GAMING M7 AC
- X470 GAMING PRO CARBON AC
- B450 GAMING PRO CARBON AC
- B450 GAMING PRO CARBON MAX WIF
- B450 GAMING PRO CARBON
- B450M BAZOOKA MAX WIFI
- MEG Z390 GODLIKE
- MEG Z390 ACE
- MPG Z390 GAMING PRO CARBON AC
- MPG Z390 GAMING EDGE AC
- MAG Z390 TOMAHAWK
- Z390I CORSAIR
- MPG Z390M GAMING EDGE AC
- MPG Z390 GAMING PLUS
- MAG Z390M MORTAR

- MPG Z390I GAMING EDGE AC
- B360I GAMING PRO AC
- Creator X299
- MPG X299M GAMING EDGE
- MEG X299 CREATION
- X299 GAMING M7 ACK
- 299 XPOWER GAMING AC
- 299 GODLIKE GAMING
- 299 GODLIKE GAMING
- 299 GAMING PRO CARBON AC
- 299 GAMING PRO CARBON
- 299 TOMAHAWK AC
- 299 TOMAHAWK ARCTIC AC
- 299M GAMING PRO CARBON AC

Network Requirements

- The router is broadcasting a 2.4GHz network.
- The Wi-Fi network is using WPA/WPA2 security.
- The router is configured for any of the Wi-Fi modes a/b/g/n.

Philips Hue Setup (optional)

1. Plug in your Hue bridge and it will automatically power up.
2. Connect it to the router LAN port.
3. Wait for the two lights to come on and you are good to go. (Left is power light and center is local network)

 
Nanoleaf Setup (optional)

- The router is compatible with Bonjour (mDNS).


Ambient Link Control Panel

Game Mode and **Ambient Mode** can only be activated one at a time in the Ambient Link control panel.


- **Game Mode tab**

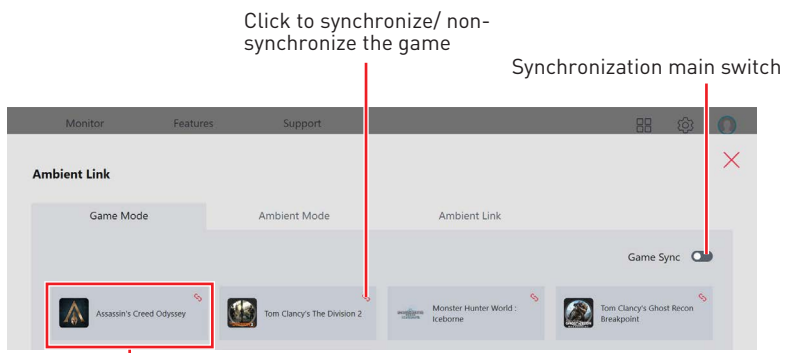


Click to access the game control panel

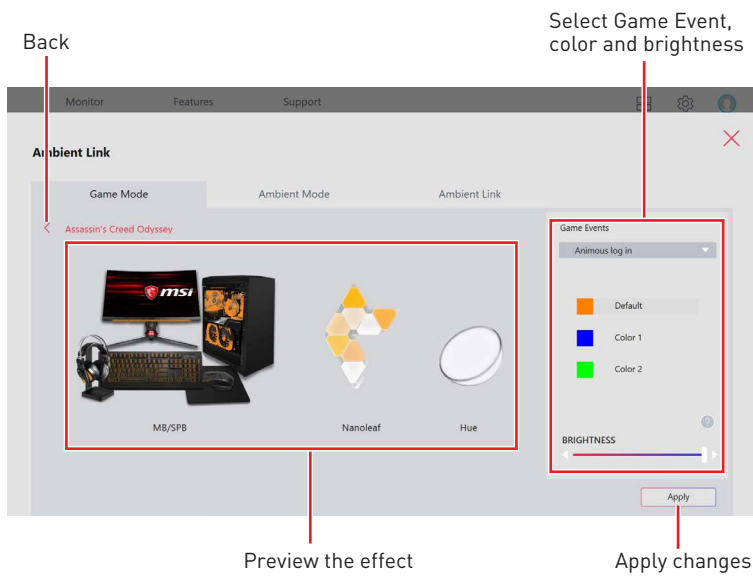 

• **Ambient Mode tab**

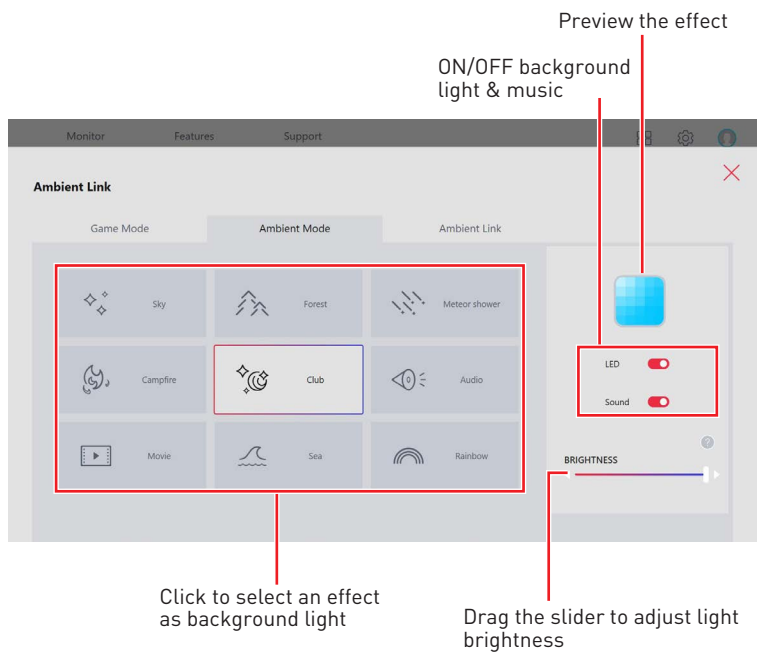 


• **Ambient Link tab**

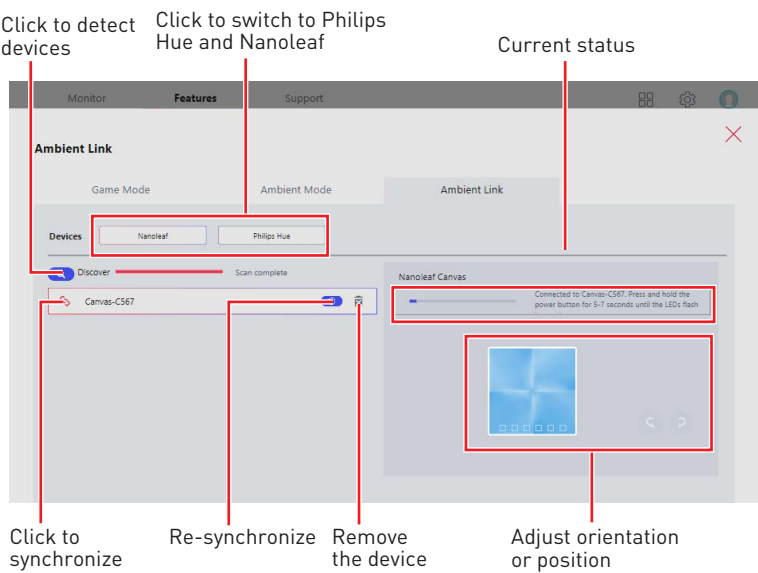 

DYNAMIC DASHBOARD Control Panel (optional)

Click DYNAMIC DASHBOARD button to open the DYNAMIC DASHBOARD control panel.

 Enabled DYNAMIC DASHBOARD

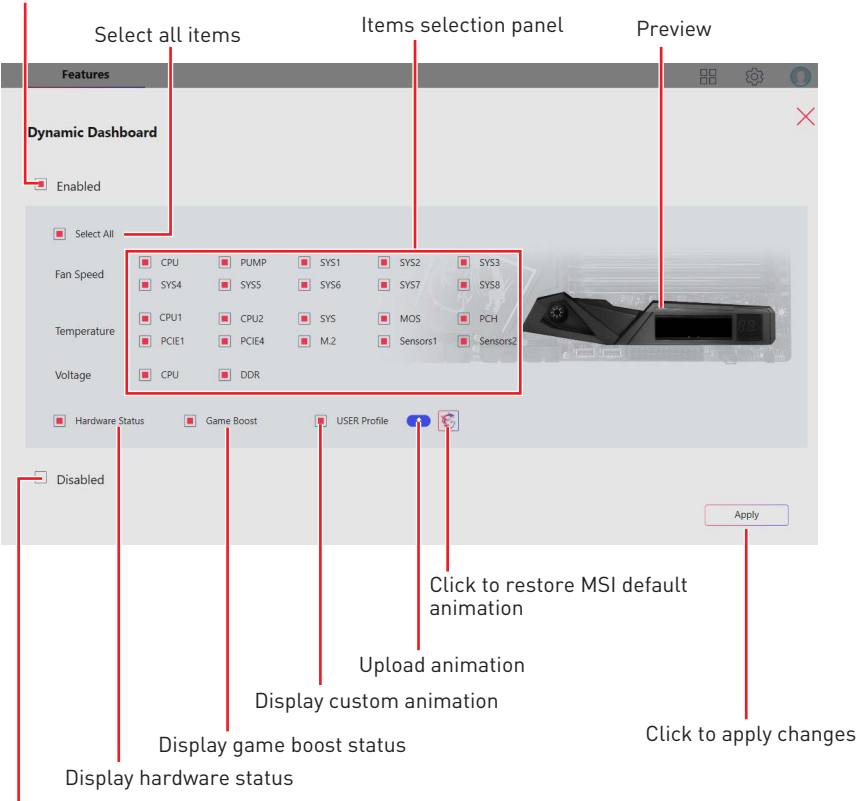

Disabled DYNAMIC DASHBOARD

Selecting Display Items

1. Select **Enabled** in the upper left corner of the control panel.
2. Select items you want to show on the DYNAMIC DASHBOARD.
3. Click **Apply** to apply your changes.

Uploading Custom Animation

Click the Upload  icon and select a .gif animation file.

.GIF File Restriction

Dimensions: 256 x 64

DPI: 72

Size: max 128KB

256px

64px



Restoring MSI Default Animation

Click the dragon  icon to restore the MSI default animation.

Fan Speed/ Temperature/ Voltage State

Available Items:

Fan Speed : CPU fan / Water pump fan / System fan speed

Temperature : CPU / System / MOS / PCH / PCIe / M.2 / Sensors temperature

Voltage : CPU / Memory voltage



Hardware Information



GAME BOOST State



When you use the GAME BOOST Knob, DYNAMIC DASHBOARD will display the CPU frequency information.

Stage 0

Stage 1~11

GAME BOOST Disabled

 
5.4 ~5.7 GHz



Game Boost is only available on K CPUs and speeds may vary based on CPU model.

DYNAMIC DASHBOARD II Control Panel (optional)

Click DYNAMIC DASHBOARD button to open the DYNAMIC DASHBOARD control panel.

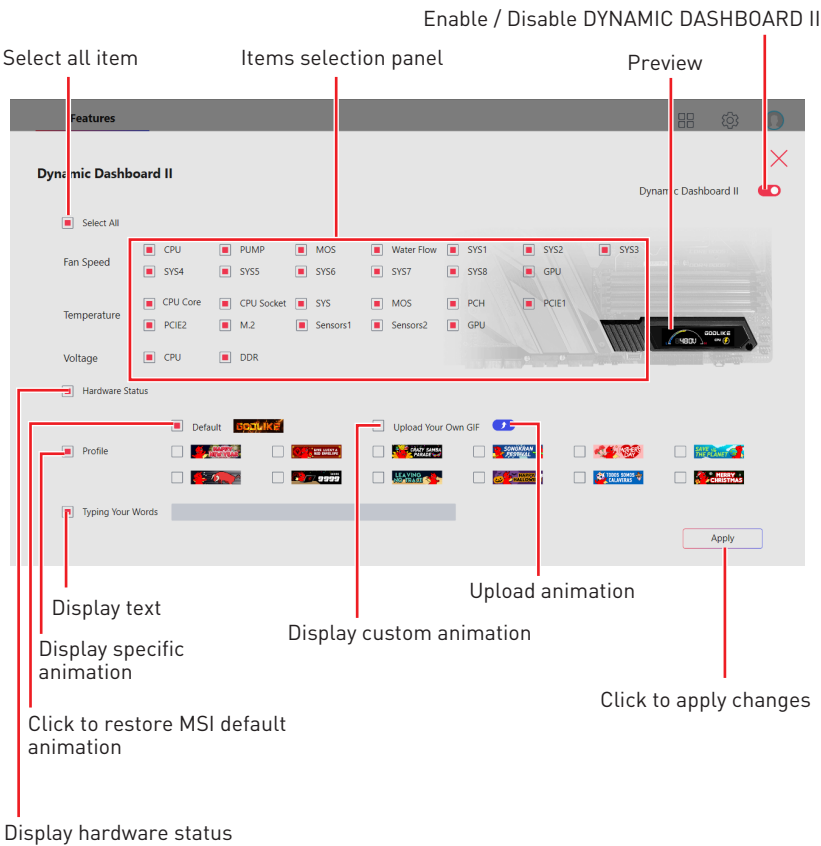

Selecting Display Items

1. Click the switch in the upper right corner of the control panel to enable it.
2. Select items you want to show on the DYNAMIC DASHBOARD II.
3. Click **Apply** to apply your changes.

Uploading Custom Animation

Click the Upload  icon and select a .gif animation file.

.GIF File Restriction

Dimensions: 176 x 48

DPI: 72~93

Size: max 1024KB



 
Fan Speed/ Temperature/ Voltage State

Available Items:

Fan Speed : CPU fan / Water pump fan / System fan speed

Temperature : CPU / System / MOS / PCH / PCIe / M.2 / Sensors temperature

Voltage : CPU / Memory voltage

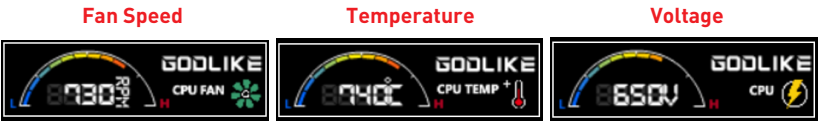


Hardware Information



Gaming Gear

This panel allows you to control MSI's gaming gear and supported third-party devices.

 Go to **Features > Gaming Gear**.

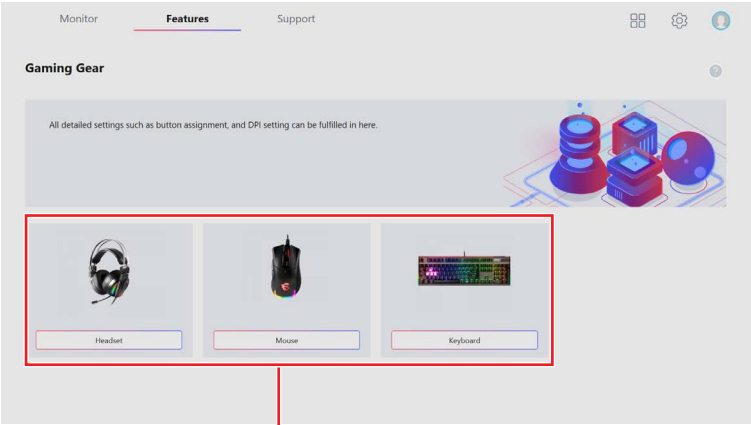

Supported devices will be displayed here. Click buttons to enter the control panel of the device.

Gaming Dial (optional)

Certain series of desktops have the Gaming Dial for controlling system settings and monitoring the system status.



Rotate:

- selecting function menus and items
- adjusting function values
- entering into from function menus

Short Press (OK):

- entering submenus
- confirming a selection or setting

 
Long Press (Exit):

- return upper menu
- exit monitor function


Setting Gaming Dial

Go to **Features > Gaming Gear**.

Select **Gaming Dial**

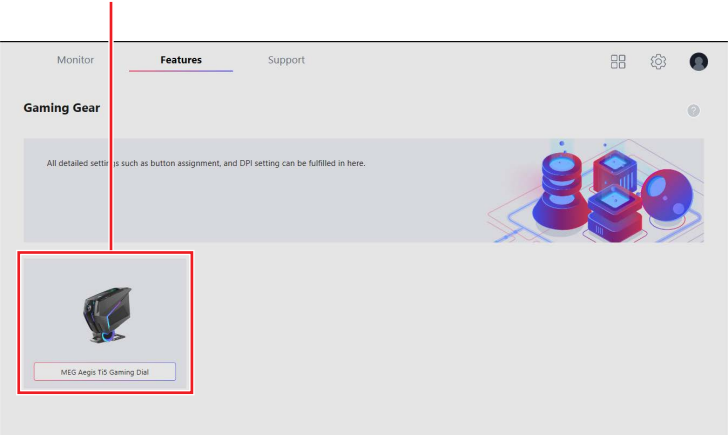

Gaming Dial Control Panel

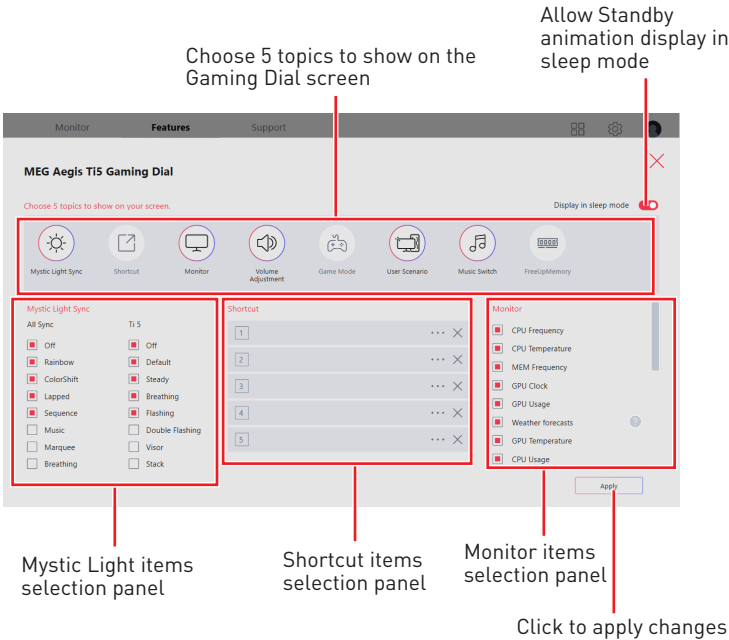 


Topics

- **Mystic Light** - Switch Mystic Light effect by Gaming Dial.
- **Shortcut** - Fast execution customize program (.exe file) by Gaming Dial.
- **Monitor** - Show Display Hardware information on Gaming Dial Screen.
 - Note 1: Weather forecasts function need an internet connection and allow location service.
 - Note 2: When execution monitor function, standby animation will not display.
- **Nahimic** - Switch Nahimic's profiles by Gaming Dial.
- **Volume Adjustment** - Easy to adjust OS volume by Gaming Dial.
 - Note: Volume adjustment is the default idle function.
- **Game Mode** - Switch Game mode on/off by Gaming Dial.
- **User Scenario** - Switch User Scenario by Gaming Dial.
- **Music Switch** - Adjust Media player function (Play/ Pause/ Next track/ Previous track) by Gaming Dial.
- **FreeUpMemory** - Execute Free Up Memory function by Gaming Dial.

Uploading Your Own Animation

 Click the Upload  icon and select .jpg animation files.

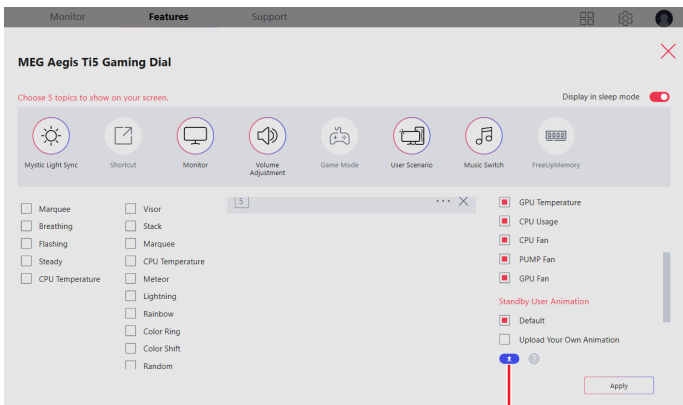

Click to upload .jpg animation files

.JPG File Restriction

Dimensions: 240 x 240

Animation speed: 24 FPS

 
 
Size: max 3.0 MB



MSI Sound Tune (optional)

The AI-powered noise cancellation is trained through a deep neural network (DNN), which is generated with more than 500 million data and simulated the way the human brain works. When a sound is detected, the model automatically recognizes and separates the vocal sound from background noises. Hence, filtering out all the unwanted noise. This feature greatly improves the users' communication experience.


Go to **Features > MSI Sound Tune**.

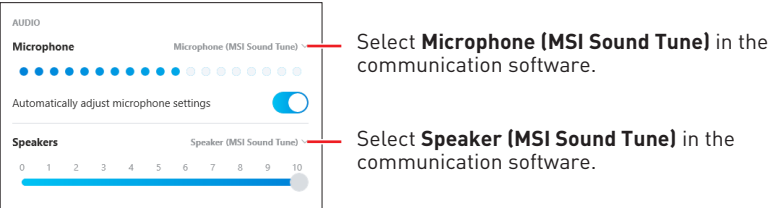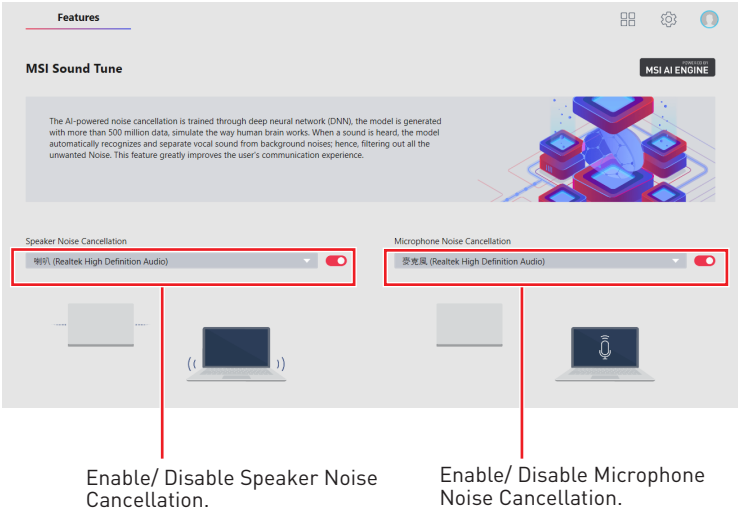

Devices Speed Up

Devices Speed Up allows you to improve USB data transfer speed and speed up data storage performance.

 Go to **Features > Devices Speed Up**.

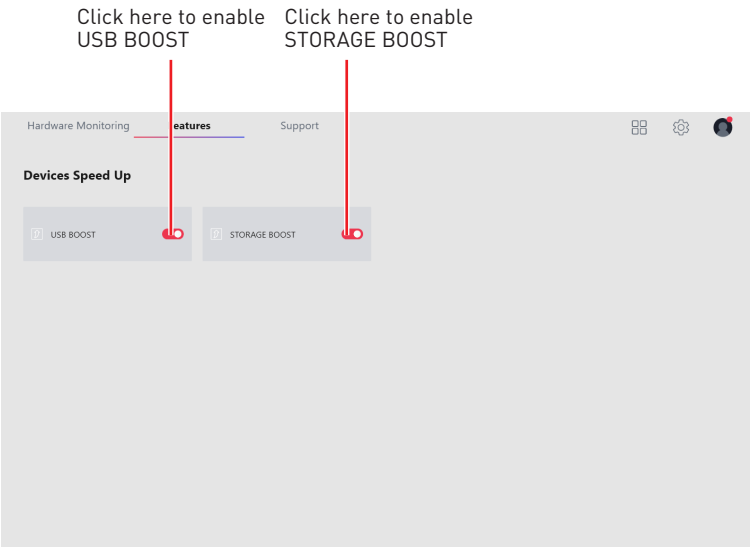

Devices Speed Up Options

USB BOOST - supports faster data transfer rates of the USB storage devices.

STORAGE BOOST - supports faster access speed of storage device.

Super Charger

 
Super Charger provides charging function for iPad, iPhone and iPod.

iPad has a different power requirement: 1.6A power supply rather than the 0.5A current available with conventional USB interfaces. That is why computer cannot charge your iPad even with power on. The MSI Super Charger is a Windows resident program capable of changing power supply mode of your USB port. Once iPad is connected to your USB port, the Super Charger will send a signal to initiate its charging circuit.


Enabling Super Charger

Go to **Features > Super Charger**.


Super Charger function will be enabled automatically after installing Super Charger.



 If your motherboard has a Super Charger Port (please refer to the motherboard user manual), the following dialog will appear. And **Turn On** the switch.



 When you shutdown, hibernate, or put your computer to sleep, Super Charger Port will be still able to provide charging function.

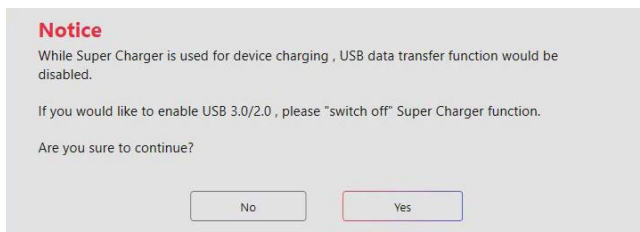

When a warning prompt window appears, click **Yes**  to continue.



Important

When Super Charger is enabled, the Super Charger Port will be changed to Charging mode, therefore, the data syncing will be disabled.

 
Smart Image Finder

With Microsoft Azure technology, Smart Image Finder can automatically add related tags to all the images. You can search for the images by the tags. You can also add or remove tags if you want.


Using Smart Image Finder

- 1. Go to **Features > Smart Image Finder**.
- 2. Click the folder  icon to import a folder.


Click here

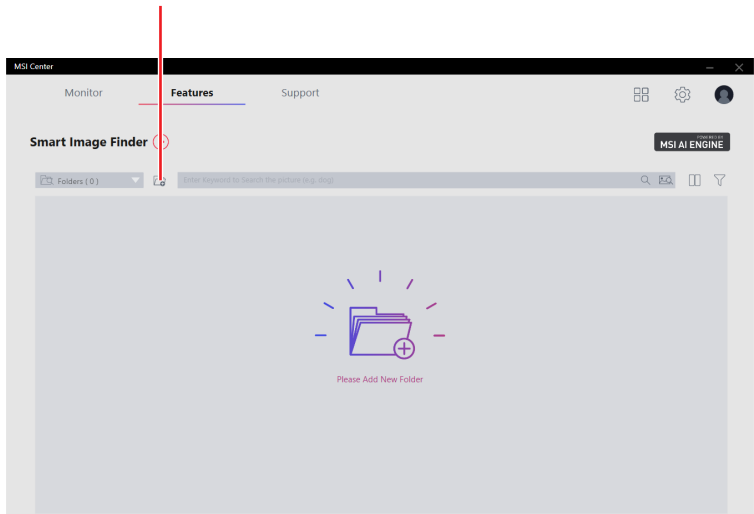

 
- 3. Select a folder.

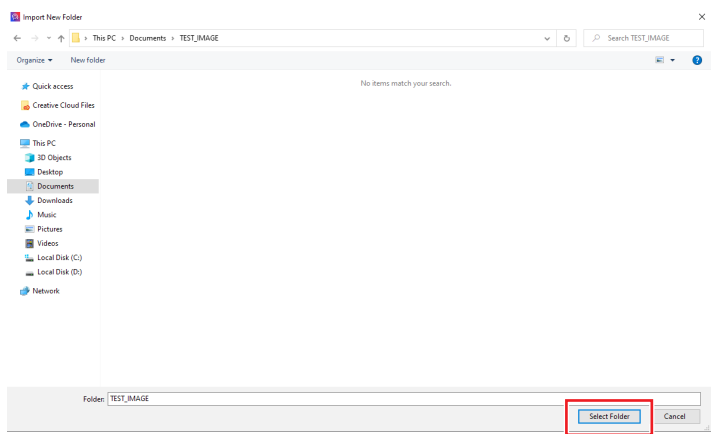

 4. Wait for the image analysis.

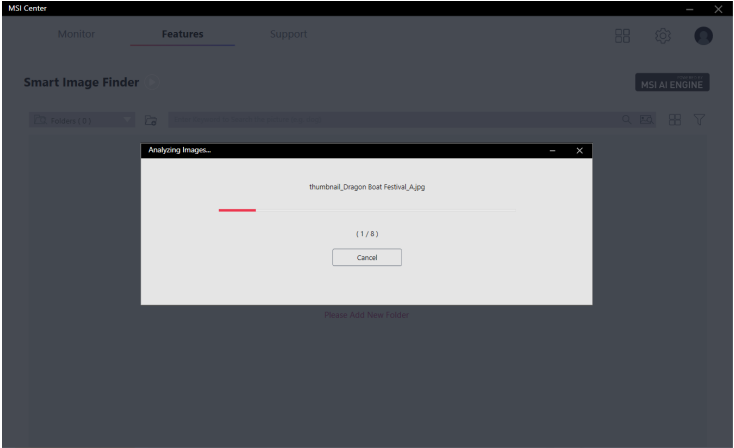


 5. After the analysis, the images in the folder will be shown below.

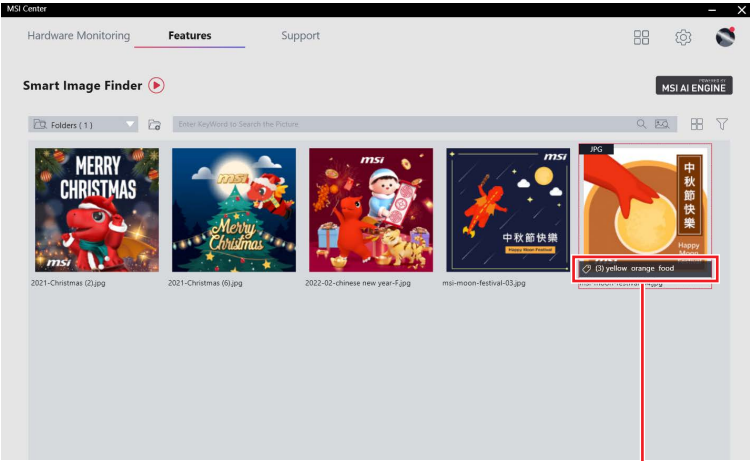

Mouse over the image to see the tags

 6. Search for the images by using the search bar.

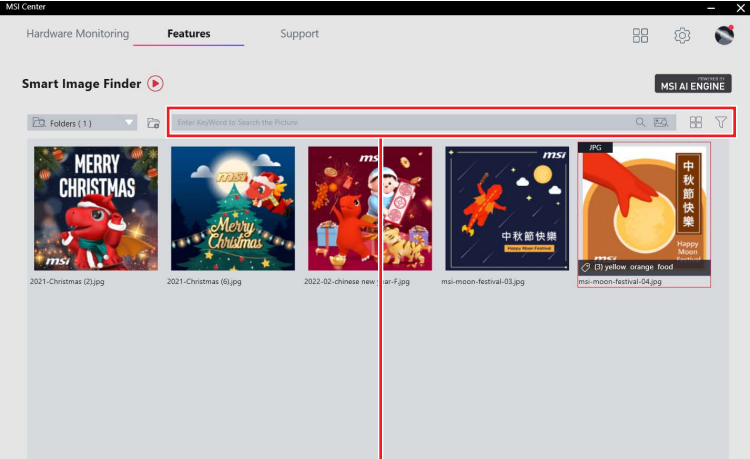

Search by tags

Search by images

Change the layout of images

Advanced search by filters

Add or Remove Tags on Images

To zoom in/out of the image

To delete the image

Double click on the image you want to edit

The screenshot displays the MSI Center application window. The 'Features' tab is active, showing a gallery of images. The first image in the gallery is 'msi-moon-festival-04.jpg', which depicts a hand holding a moon cake with the text '中秋節快樂' (Happy Moon Festival) and 'msi'. Below the image, there are three tags: 'food', 'orange', and 'yellow'. A second, smaller version of the same image is shown on the right side of the interface. Annotations with red lines point to various UI elements: 'To zoom in/out of the image' points to the zoom controls at the top of the image; 'To delete the image' points to the delete icon (trash can) at the bottom right of the image; 'Double click on the image you want to edit' points to the image itself; 'Click here to add tags' points to the plus icon next to the tag input field; and 'Right click on the tag to delete it' points to the 'x' icon on the 'food' tag.

Click here to add tags

Right click on the tag to delete it

System Diagnosis (optional)

System Diagnosis allows you to easily check the usage of your storage devices. You can see how much disk/ memory space is being used and choose to clean up disk and free up memory. You can also see the usage and the health status of SSD.

 
The health status of SSD

Healthy - 51%~100%

Good - 21%~50%

Replacement is recommended - 11%~20%


Replacement is strongly recommended - under 10%

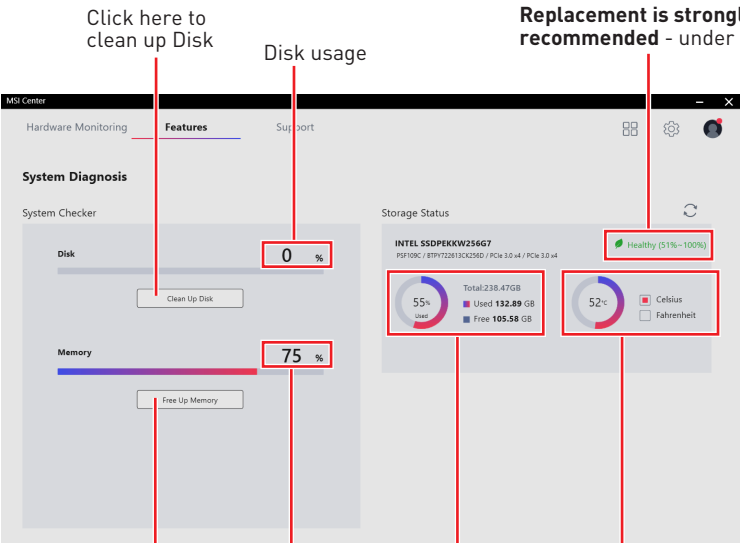

Coreliquid (optional)


Certain series of MSI liquid cooling products have a dynamic LCD display controller. Coreliquid feature allows you to change LCD display items of controller and adjust the fan settings. In addition, you can adjust the radiator RGB fan through Mystic light feature.

 Go to **Features > Coreliquid**.

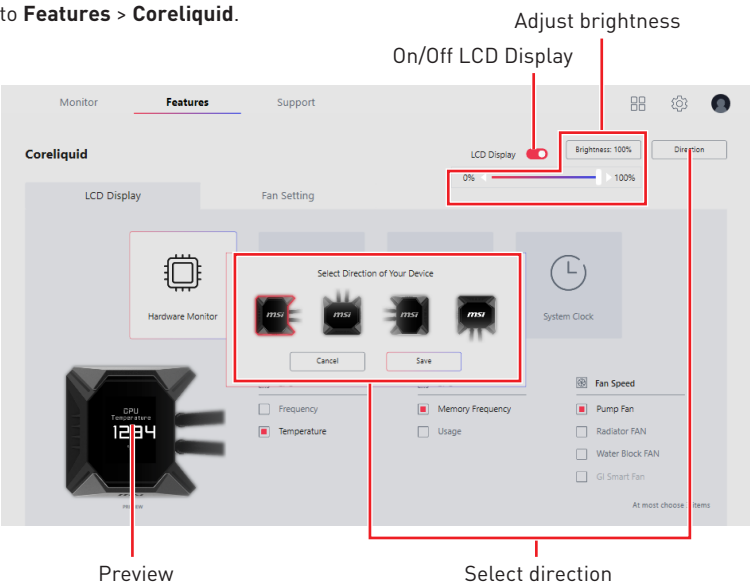

Displaying hardware monitor

 Click **Hardware Monitor**

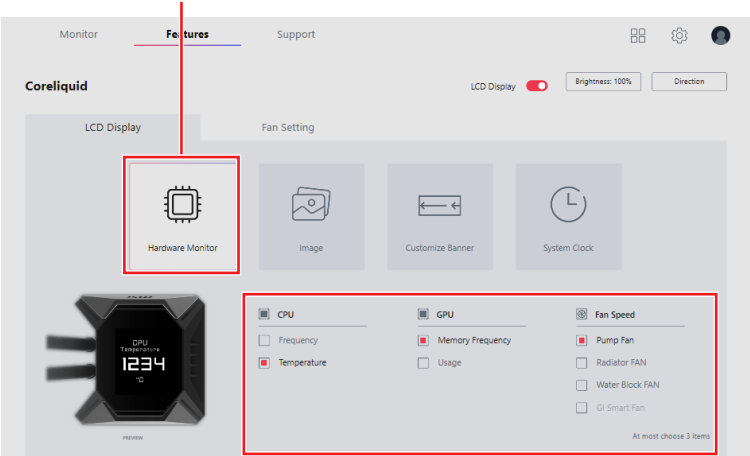

Check the items you'd like to display. Please note that **GI Smart Fan** can be checked when you select **GI Mode** in **Fan Setting** tab.

Displaying image

Click **Image**

Select default images

Supported image format

If you'd like to apply a customized image, click **+** to add an image. And to remove an image, click the certain image and then click **Delete** below the image.

 
Displaying customized banner

Click **Customize Banner**

Select background images

Edit text

Displaying system clock

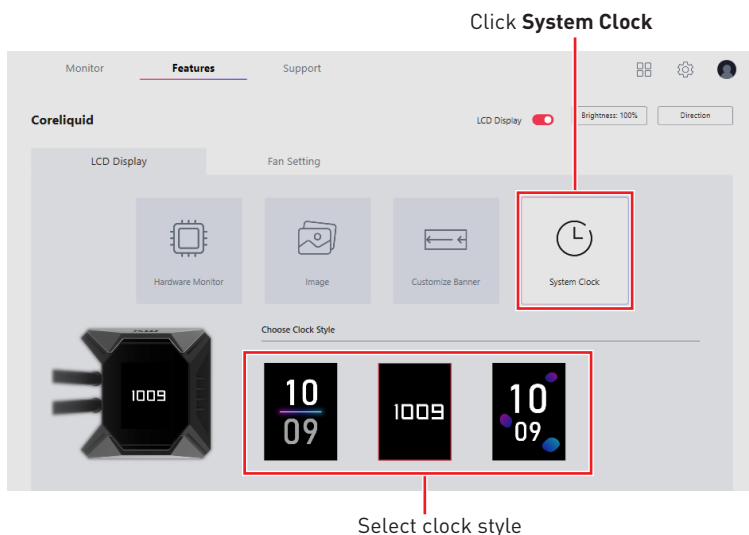


Selecting liquid cooling system fan mode



To control liquid cooling system fans, choose one fan mode you'd like to apply.


- **Balance** - Default setting for most users.
- **Silent** - Adjust fan speed for best cooling and silence.
- **Game Mode** - Enhances the heat dissipation performance.
- **Customize** - Customize the performance level and fan speed as desired.
- **GI Mode** - Automatically adjust the fan speed through the AI algorithm.

 Setting customized fan mode

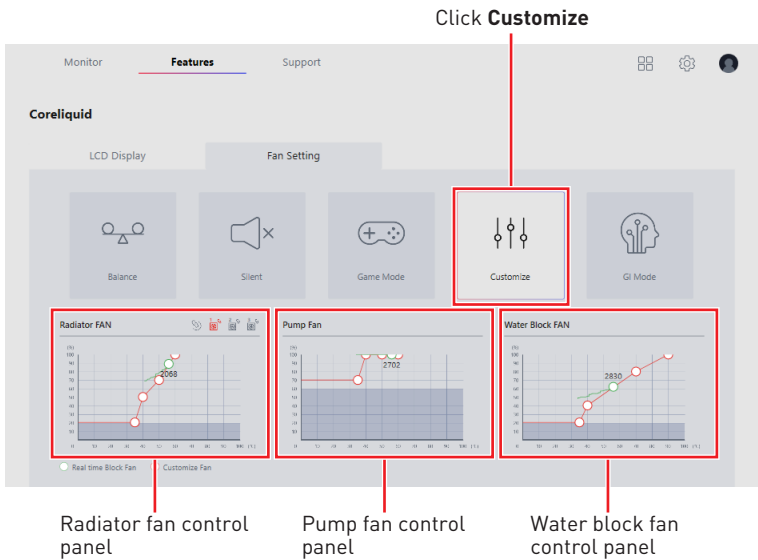

The fan control panel contains 4 dots which allow you to drag and adjust the Smart Speed slopes. The fan speed will change along with the Smart Speed curve.

 
Red chain: Synchronize settings for all radiator fans.
Gray chain: Adjust each radiator fan setting independently.

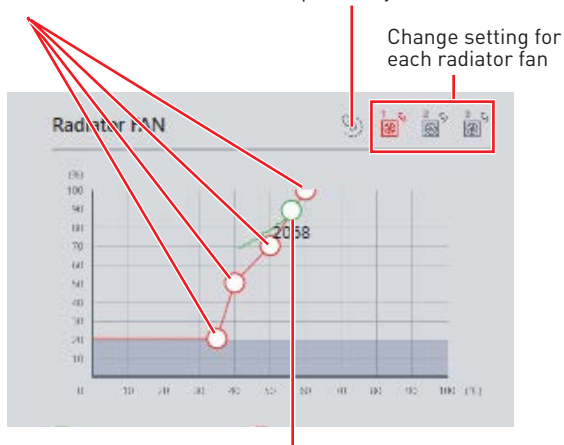

Product Registration


Register your MSI product to get exclusive updates, quicker service and product support.

 Click here to enter **My Device**

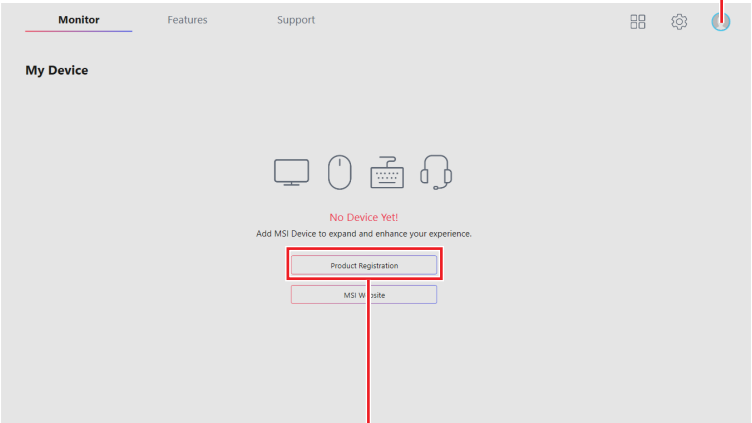


Click here to register
your product

 Display your devices

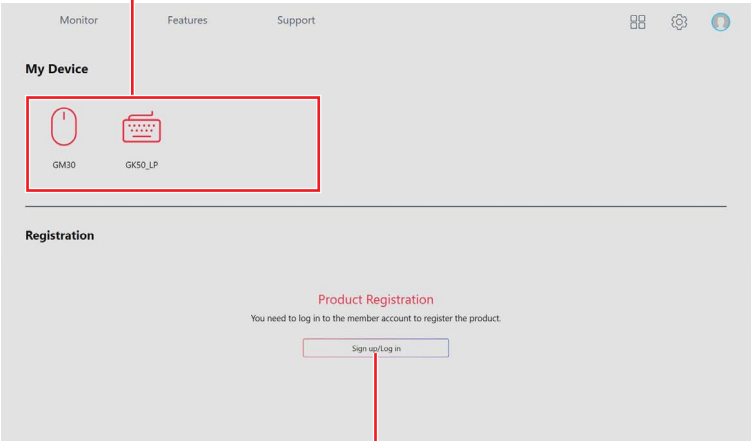

Click here to login

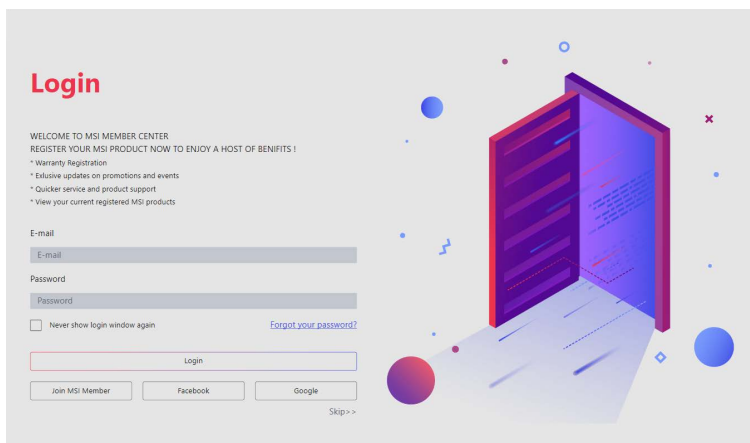 

The image shows the MSI Login page. On the left, there is a login form with fields for E-mail and Password, a checkbox for "Never show login window again", and a "Login" button. Below the login button are three buttons: "Join MSI Member", "Facebook", and "Google". A "Skip >>" link is at the bottom right of the form. To the right of the form is a large, stylized graphic of a glowing blue and purple rectangular prism with various geometric shapes and lines around it.

Login

WELCOME TO MSI MEMBER CENTER
REGISTER YOUR MSI PRODUCT NOW TO ENJOY A HOST OF BENEFITS !

- * Warranty Registration
- * Exclusive updates on promotions and events
- * Quicker service and product support
- * View your current registered MSI products

E-mail
E-mail

Password
Password

 
☐ Never show login window again [Forgot your password?](#)

Login

Join MSI Member Facebook Google

Skip >>

Login to your MSI account on this My Devices tab. If you don't have an MSI account, please click the **Join MSI Member** button or use Facebook, Google Plus to login.

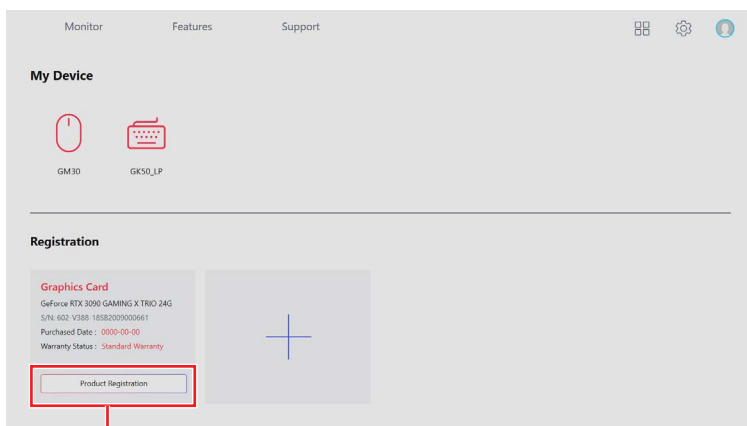

The image shows the MSI My Device page. At the top, there are tabs for "Monitor", "Features", and "Support". Below the tabs, there are two icons: a mouse icon labeled "GM30" and a keyboard icon labeled "GK50_LP". Below these icons, there is a "Registration" section. In this section, there is a box for "Graphics Card" with details: "Geforce RTX 3090 GAMING X TRIO 24G", "S/N: 602-V288-1858202000661", "Purchased Date: 0000-00-00", and "Warranty Status: Standard Warranty". Below this box is a "Product Registration" button, which is highlighted with a red rectangle. To the right of the "Product Registration" button is a large plus sign icon.

Monitor Features Support

My Device

GM30 GK50_LP

Registration

Graphics Card
Geforce RTX 3090 GAMING X TRIO 24G
S/N: 602-V288-1858202000661
Purchased Date: 0000-00-00
Warranty Status: Standard Warranty

Product Registration

 
Click **Product Registration** button and fill in the product registration form.

Live Update

Live Update feature allows you to scan system and download the latest drivers, BIOS and utilities. With Live Update, you don't need to search the drivers on websites, and don't need to know the models of motherboard and graphics cards. Live Update will download the appropriate drivers automatically.

To use Live Update:

- 1. Connect your computer to the internet.
- 2. Go to **Support > Live Update**.

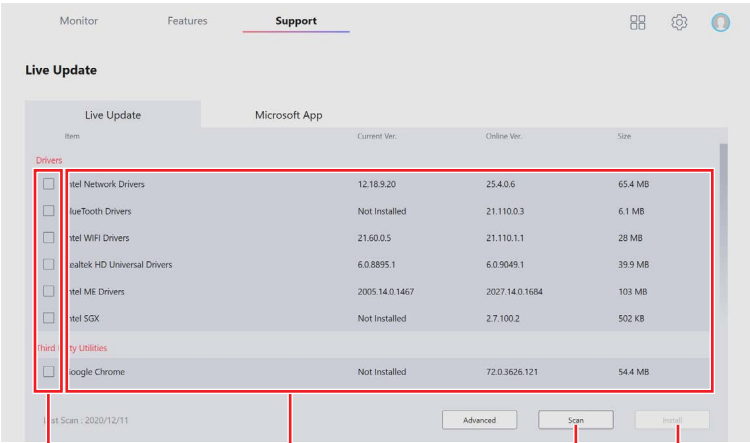

Select which item you want to update.

Utilities and drivers list

Click to scan the system

Click to install

System Info

The System Info provides information about your computer drivers, BIOS and utilities versions.

 
To open System Info:

- 1. Go to **Support > System Info**.

To export system information:

- 1. Go to **Support > System Info**.
- 2. Click **Export System Info** button in the upper right corner.
- 3. Browse to the location where you want to save the new text file, and then click **Save**.

Click to export system information to a text file.

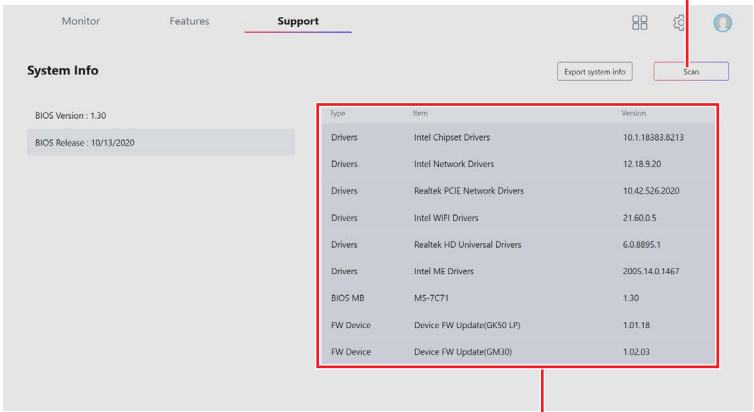


Shows drivers, BIOS and utilities versions.

Microsoft APP

The Microsoft App feature detects installed drivers and displays a relative Microsoft application download links.

To install Microsoft App:

 1. Go to **Support > Microsoft App**.
2. Click the Get it from Microsoft icon  on the right side of the item.
3. Download and install the application from Microsoft Store.

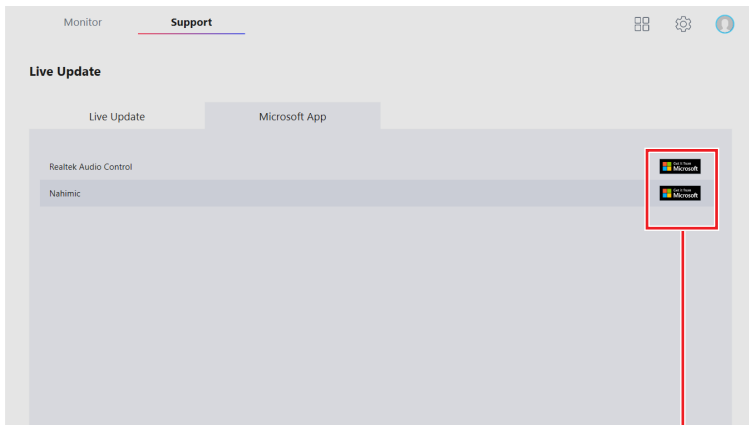

Click to install

Notices

msi Micro-Star Int'l Co.,Ltd.

The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

Copyright

© Micro-Star Int'l Co.,Ltd. 2022 All rights reserved.

Revision History

Version 1.0, 2021/01, First release

Version 1.1, 2021/05, Add Coreliquid feature

Version 1.2, 2021/07, Add Resizable Bar, Update MSI Companion, Smart Priority, Hardware Monitoring

Version 1.3, 2022/06, Add Smart Image Finder & System Diagnosis, change Speed Up to Devices Speed Up, and remove Duet Display