

MAG Series

MAG 274QRF-QD-E2 (3CC2)

User Guide

Contents

Getting Started	3
Package Contents	. 3
Installing the Monitor Stand	. 4
Adjusting the Monitor	. 5
Monitor Overview	. 6
Connecting the Monitor to PC	. 9
DSD Setup 1	10
Navi Key	10
Hot Key 1	10
DSD Menus1	11
Gaming1	12
Professional1	14
Image 1	15
Input Source 1	15
PIP/PBP 1	16
Navi Key 1	17
Settings1	17
Specifications1	19
Preset Display Modes2	21
Froubleshooting	22
Safety Instructions	23
ΓÜV Rheinland Certification2	25
Regulatory Notices	26

Revision

V1.1, 2024/11

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents


Monitor	MAG 274QRF-QD-E2		
Documentation	Quick Start Guide		
Accessories	Stand with Screw(s)		
	Stand Base with Screw(s)		
	Screw(s) for Wall Mount Bracket(s)		
	External Power Supply		
	Power Cord		
Cables	USB Upstream Cable (Optional) (for USB Type-B Upstream Port)		
	Premium High Speed HDMI™ Cable (Optional)		
	DisplayPort Cable (Optional)		

Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

Installing the Monitor Stand

- 1. Leave the monitor in its protective foam packaging. Align the stand bracket to the monitor groove.
- 2. Tighten the stand bracket with screws.
- 3. Connect the base to the stand and tighten the base screw to secure the base.
- **4.** Make sure the stand assembly is properly installed before setting the monitor upright.

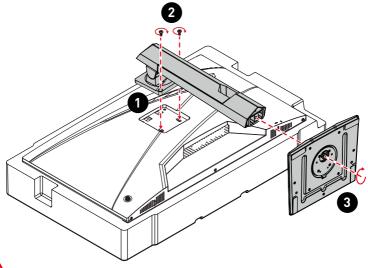

/ Important

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!





Adjusting the Monitor

This monitor is designed to maximize your viewing comfort with its adjustment capabilities.


Important

- Avoid touching the display panel when adjusting the monitor.
- Please slightly tilt the monitor backwards before pivoting it.

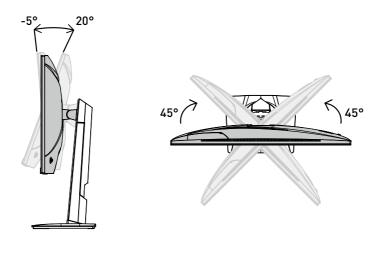


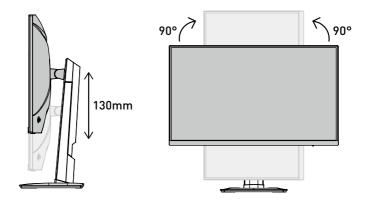

Monitor Overview

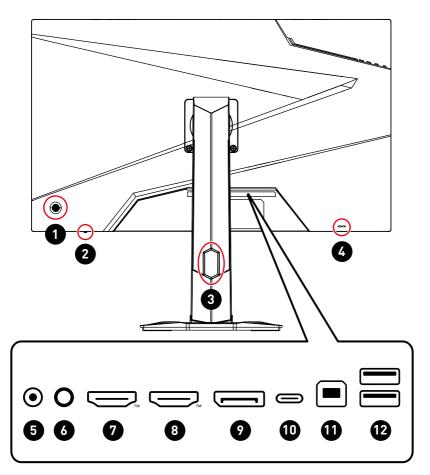


1	Power Button & Navi Key		
2	Power LED		
	Lit in white after the monitor is turned on. If no signal is turn into orange. Lit in orange when the monitor is in S		
3	Cable Routing Hole		
4	Kensington Lock		
5	Power Jack		
6	Headphone Jack		
7			
	Supports HDMI™ CEC, 2560x1440@144Hz as specified	in HDMI™ 2.0b.	
	Important		
	To ensure optimal performance and compatibility, please use only HDMI™ cables certified with the official HDMI™ logo when connecting this monitor. For more information, please visit https://www.hdmi.org/resource/cables.		
8			
	Supports 2560x1440@144Hz as specified in HDMI™ 2.0b.		
	Important		
	To ensure optimal performance and compatibility, plea cables certified with the official HDMI™ logo when con For more information, please visit <u>https://www.hdmi.o</u>	necting this monitor.	
9	DisplayPort		
	Supports 2560x1440@180Hz as specified in DisplayPor	t 1.4a.	
10	USB Type-C Port	USB Type-C	
	This port supports DisplayPort Alternate (DP Alt) Mode and up to 20V/3.25A (65W) power delivery.	Power Delivery 5V / 3A (15W)	
		9V / 3A (15W)	
	Important	12V / 3A (36W)	
	Your USB Type-C Port signal source and cable	15V / 3A (45W)	
	must support DisplayPort Alternate Mode to enable video output to the monitor.	20V / 3.25A (65W)	

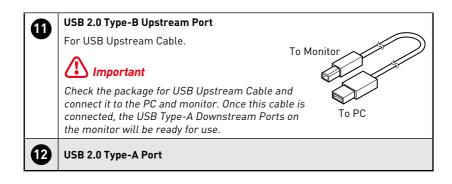

Connecting the Monitor to PC

- **1.** Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- 3. Assemble the external power supply & power cord. (Figure A)
- 4. Connect the external power supply to the monitor power jack. (Figure B)
- **5.** Plug the power cord into the electrical outlet. (Figure C)
- **6.** Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

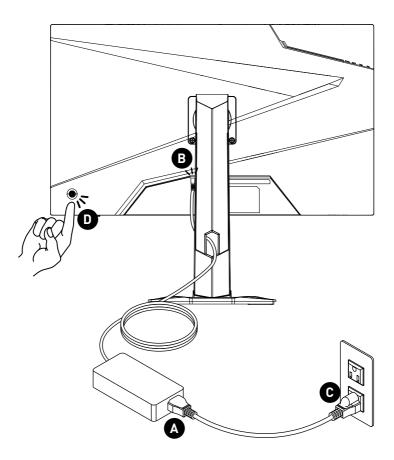

OSD Setup


This chapter provides you with essential information on OSD Setup.



All information is subject to change without prior notice.

Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

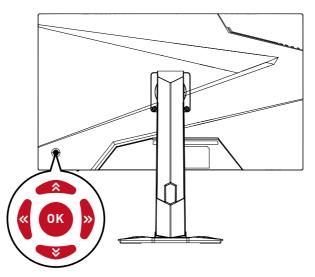

Up/Down/Left/Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus

Press (OK):

- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

Hot Key

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

OSD Menus

8 m	Sī 2560 x 1440	180 HZ	HDR OFF	Adaptive-Sync ON	DP
🗪 Gam	ning	Game Mode		✓ Premium Color	
☆ Prof	fessional	Night Vision		User	
🖾 Ima	ge	Response Time		FPS	Exit
ى (Inpu	ut Source	MPRT	077	Racing	(💿)
E PIP/	/PBP	Refresh Rate		RTS	Move
රල්) Nav	ri Key	Alarm Clock		RPG	
ۇي Sett	ings	KVM			Enter
		•			FW .001

Important

The following settings will be grayed out when HDR signals are received:

- Night Vision
- MPRT
- Low Blue Light
- HDCR

- Brightness
- Contrast
- Color Temperature
- PIP/PBP

Gaming

1st Level Menu	2nd/3rd Le	vel Menu	Description	
Game Mode	Premium C	olor	Use Up or Down Button to select and preview mode effects. Press the OK Button to confirm and apply your	
	User			
	FPS		 Press the OK Buillon mode type. 	n to confirm and apply your
	Racing]	
	RTS		-	
	RPG		-	
Night Vision	OFF			zes background brightness
	Normal		and is recommende	d for FPS games.
	Strong			
	Strongest		-	
	A.I.			
Response Time	Normal		Setting to Fastest w	
	Fast		 response time and help improve blurred images when playing very fast games. 	
	Fastest			
MPRT	OFF		• MPRT is available when the refresh rate is over	
	ON		85Hz.Activating MPRT will	Laffact.
			Affected Function	Function Status
			» Response Time	
			» Brightness	Unable to select
			» Adaptive-Sync	
			» HDCR	Set to OFF
			» PIP/PBP » Screen Size 1:1	Set to Auto
		L (1 T		
Refresh Rate	Location	Left Top	Location is adjustable in OSD Menu. Press the OK Button to confirm and apply your Refresh Rate Location.	
		Right Top Left Bottom		
			 This monitor follows and works at the Opera System's preset Screen Refresh Rate. 	
		Right Bottom		
	Customize		-	
	OFF		-	
	ON			

1st Level Menu	2nd/3rd Lev	vel Menu	Description	
Alarm Clock	Location			e, press the OK Button to
		Right Top	activate the timer.	- 11
		Left Bottom		ally restore their preset ny AC power loss and
		Right Bottom	reconnection.	
		Customize		
	OFF			
	15:00	00:01 ~ 99:59		
	30:00	1		
	45:00	1		
	60:00			
KVM	Auto			itor to automatically switch
	Upstream		between USB input s mice or other USB d	ources, such as keyboards, evices.
	Туре С		 Users can also desig Type-C as the only U 	nate Upstream port or USB ISB signal source.
Screen Assistance	None		• Users can adjust Screen Assistance in any	
	Icon		mode.	
	Position			
	Reset			
Adaptive-Sync	OFF		Adaptive-Sync preve	-
	ON		Activating Adaptive-	,
			Affected Function	Function Status
			» MPRT » PIP/PBP	Set to OFF
			» Screen Size 1:1	Set to Auto

Professional

1st Level Menu	2nd Level Menu	Description
Pro Mode	Eco	• Use Up or Down Button to select and preview mode
	User	effects.
	Anti-Blue	 Press the OK Button to confirm and apply your mode type.
	Movie	
	Office	
	sRGB	
	Adobe RGB	
	Display P3	
Low Blue Light	OFF	• Low Blue Light protects your eyes against blue light.
	ON	When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.
		When Pro Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.
HDCR	OFF	HDCR enhances image quality by increasing the
	ON	contrast of images. Activating HDCR will affect:
		Affected Function Function Status
		» Brightness Unable to select
		» MPRT Set to OFF
MPRT	OFF	• MPRT is available when the refresh rate is over 85Hz.
	ON	Activating MPRT will affect:
		Affected Function Function Status
		 » Response Time » Brightness Unable to select
		 » Adaptive-Sync » HDCR » PIP/PBP
		» Screen Size 1:1 Set to Auto
Image Enhancement	OFF	Image Enhancement enhances image edges to improve
	Weak	their acutance.
Medium		
	Strong	
	Strongest	

Image

1st Level Menu	2nd/3rd Level Menu		Description	
Brightness	0-100		 Properly adjust Brightness according to the surrounding lighting. 	
Contrast	0-100		• Properly adjust Contrast to relax your eyes.	
Sharpness	0-5		 Sharpness improves clarity and details of images. 	
Color Temperature	Cool Normal Warm		• Use Up or Down Button to select and preview	
			 mode effects. Press the OK Button to confirm and apply you 	
			 Press the OK Button to confirm and apply you mode type. 	
	Customization	R (0-100)		
		G (0-100)		
		B (0-100)		
Screen Size	Auto		• Users can adjust Screen Size in any mode, an	у
	4:3		 resolution and any screen refresh rate. Activating Screen Size 1:1 will affect: 	
	16:9 1:1		Affected Function Function Status	
			Attracted Function Function Status » MPRT	

Input Source

1st Level Menu	2nd Level Menu	Description
HDMI™ 1		Users can adjust Input Source in any mode.
HDMI™ 2		
DP		
Туре С		
Auto Scan	OFF	Users can use the Navi Key to select Input Source at
	ON	 below status: While "Auto Scan" is set to "OFF" with the monitor at power saving mode; While "No Signal" message box is shown on the monitor.

PIP/PBP

1st Level Menu	2nd/3rd Level Menu		Description	
OFF			PIP (Picture in Picture	
PIP	Source	HDMI™ 1	simultaneously displa sources on one scree	
		HDMI™ 2	displayed on the full s	creen at the same
		DP	time as one or more o displayed in inset wind	
		Туре С	PBP (Picture by Picture)	
	PIP Size	Small	feature that displays t side-by-side on the so	
		Medium	Display Switch allows	users to switch
		Large	between primary and sources.	secondary input
	Location	Left Top	• If there is only one sig	
		Right Top	Switch and Audio Swit	5,
		Left Bottom	Activating PIP/PBP wi Affected Function	Il affect: Function Status
		Right Bottom	» Response Time	Unable to select
	Display Swi	tch	» MPRT	
	Audio Switc	h	» Adaptive-Sync	Set to OFF
PBP	Source 1	HDMI™ 1	» HDMI™ CEC	Set to OFF & unable to select
		HDMI™ 2	» PIP: Screen Size 1:1	Set to Auto &
		DP	» PBP: Screen Size	unable to select
		Туре С		
	Source 2	HDMI™ 1		
		HDMI™ 2		
		DP		
		Туре С		
	Display Swi	tch		
	Audio Switc	h		

Navi Key

1st Level Menu	2nd Level Menu	Description
Up	OFF	• All Navi Key items can be adjusted via OSD Menus.
Down	Brightness	
Left	Game Mode	
Right	Screen Assistance	
	Alarm Clock	
	Input Source	
	PIP/PBP Mode	
	Refresh Rate	
	Info. On Screen	
	Night Vision	
	KVM	

Settings

1st Level Menu	2nd Level Menu	Description
Language	繁體中文	• Users have to press the OK Button to confirm and
	English	 apply the Language setting. Language is an independent setting. Users' own
	Français	language setting will override the factory default.
	Deutsch	When users set Reset to Yes, Language will not be changed.
	Italiano	
	Español	
	한국어	
	日本語	
	Русский	
	Português	
	简体中文	
	Bahasa Indonesia	
	Türkçe	
	(More languages coming soon)	
Transparency	0~5	Users can adjust Transparency in any mode.
OSD Time Out	5~30s	• Users can adjust OSD Time Out in any mode.
RGB LED	OFF	Users can adjust RGB LED to ON or OFF.
	ON	

1st Level Menu	2nd Level Menu	Description		
Power Button	OFF	• When set to OFF, users can press the power button to turn off the monitor.		
	Standby	 When set to Standby, users can press the power button to turn off the panel and backlight. 		
Info. On Screen	OFF	• The information of the monitor status will be shown		
	ON	on the right side of the screen.		
HDMI™ CEC	OFF	• HDMI™ CEC (Consumer Electronics Control)		
	ON	supports Sony PlayStation [®] , Nintendo [®] Switch [™] , Xbox Series X S consoles and various audio-visual devices that are CEC-capable.		
		 If HDMI[™] CEC is set to ON: 		
		 The monitor will automatically power on when the CEC device is turned on. The CEC device will enter power saving mode when the monitor is turned off. 		
Type C PD Charge		OFF	• Type-C PD Charge enables users to charge their	
	ON	devices through a USB Type-C connector, which car deliver up to 65W (20V/3.25A).		
Reset	YES	 Users can Reset and restore settings to original OSD Default in any mode. 		
	NO			

Specifications

Monitor	MAG 274QRF-QD E2	
Size	27 inch	
Curvature	Flat	
Panel Type	Rapid IPS	
Resolution	2560x1440 (WQHD)	
Aspect Ratio	16:9	
Brightness	• Typical SDR: 400 nits	
	• Peak HDR: 400 nits	
Contrast Ratio	1000:1	
Refresh Rate	180Hz	
Response Time	• 1ms (MPRT)	
	• 1ms (GTG)	
I/O	• Headphone Jack x 1	
	• HDMI™ Connector x 2	
	• DisplayPort x 1	
	• USB Type-C Port (DP Alt Mode) x 1	
	USB 2.0 Type-B Upstream Port x1	
	• USB 2.0 Type-A Port x2	
View Angles	178°(H) , 178°(V)	
DCI-P3*/ sRGB	95%/150%	
Surface Treatment	Anti-glare	
Display Colors	1.07B (8 bits + FRC)	
Monitor Power Options	19V === 6.32A	
External Power Supply	120.08W, 19V	
Power Input	100~240Vac, 50~60Hz	
Power Output	19V === 6.32A	
Adjustment (Height)	0 ~ 130mm	
Adjustment (Tilt)	-5° ~ 20°	
Adjustment (Swivel)	-45° ~ 45°	
Adjustment (Pivot)	-90° ~ 90°	
Kensington Lock	Yes	
VESA Mounting	Plate Type: 75 x 75 mm	
Dimension (W x H x D)	613.5 x 402.1 x 196.5 mm	

Monitor		MAG 274QRF-QD E2	
Weight	Net	6.05 kg	
	Gross	13.3 kg	
Environment Operating		• Temperature: 0°C to 40°C	
		 Humidity: 20% to 90%, non-condensing 	
		• Altitude: 0 ~ 5000m	
	Storage	• Temperature: -20°C to 60°C	
		• Humidity: 10% to 90%, non-condensing	

* Based on CIE1976 test standards.

Preset Display Modes

Important

All information is subject to change without prior notice.

Chandand	Deschalter	Resolution		MAG 274QRF-QD E2	
Standard	Resolution			DP/ USB-C	
VGA	640x480	@60Hz	V	V	
		ାର ପର୍ମମୟ	V	V	
		ଗ72Hz	V	V	
		ଗ75Hz	V	V	
Dos-Mode	720x480	@60Hz	V	V	
	720x576	@50Hz	V	V	
SVGA	800x600	@56Hz	V	V	
		@60Hz	V	V	
		ଗ72Hz	V	V	
		ଗ75Hz	V	V	
XGA	1024x768	@60Hz	V	V	
		ଗ70Hz	V	V	
		ି Marana Mar	V	V	
SXGA	1280x1024	@60Hz	V	V	
		ଗ75Hz	V	V	
WSXGA+	1680x1050	@60Hz	V	V	
QHD	2560x1440	@60Hz	V	V	
		@120Hz	V	V	
		ି 144Hz	V	V	
		@165Hz		V	
		@180Hz		V	
Video Timing	720P		V	V	
Resolution	1080P	@60Hz	V	V	
		@120Hz	V	V	
	2160P	@30Hz	V		
		@60Hz	V		
PBP Mode	1280x1440 @	1280x1440 @60Hz		V	

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.

- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.

- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.
- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards

at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.

- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 - 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)





Low Blue Light (Software Solution)

www.tuv.com

Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/(5/EU)).

(2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy



F

and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- **2.** This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828 www.msi.com

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, \mathbb{N}° 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

The terms HDMITM, HDMITM High-Definition Multimedia Interface, HDMITM Trade dress and the HDMITM Logos are trademarks or registered trademarks of HDMITM Licensing Administrator, Inc.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.

