



# **MSI CENTER**

## User Guide

(For MSI's Motherboards, Desktops and Components)

# Contents

<b>About MSI Center</b> .....	<b>5</b>
<b>Get Started</b> .....	<b>6</b>
System Requirements .....	6
Supported Hardware .....	6
Installing MSI Center.....	6
Launching MSI Center .....	8
How to completely remove MSI Center.....	8
<b>MSI Center Basics</b> .....	<b>9</b>
<b>Feature Sets</b> .....	<b>10</b>
<b>Gaming Mode (optional)</b> .....	<b>11</b>
Gaming Mode Option .....	11
How to Add Games into Gaming Mode.....	12
How to Remove Games from Gaming Mode .....	13
How to Enable Gaming Mode .....	14
<b>Smart Priority (optional)</b> .....	<b>15</b>
How to Enable Smart Priority.....	16
<b>MSI AI Engine (optional)</b> .....	<b>17</b>
How to Add Application in MSI AI Engine .....	18
How to enable MSI AI Engine animation .....	20
<b>Hardware Monitoring</b> .....	<b>21</b>
<b>User Scenario</b> .....	<b>22</b>
Selecting User Scenario .....	22
Canceling User Scenario.....	23
Setting User Options.....	24
How to Adjust the CPU Frequency .....	24
How to Adjust the Motherboard Voltage .....	25
How to Use Game Boost.....	26
How to Adjust the GPU and GPU Memory Frequency.....	28
How to Adjust the DRAM Timing .....	29
How to Adjust the DRAM Voltage .....	30
How to Enable MSI Fast Boot .....	31
<b>Cooling Wizard</b> .....	<b>32</b>
How to Adjust Fan settings.....	33
How to use Frozr AI Cooling.....	36
Setting fan mode for case .....	39
Setting fan speed for Power Supply Unit .....	42

How to use Graphics Fan Tool.....	43
<b>Game Highlights .....</b>	<b>44</b>
How to Share Game Highlights to Social Media .....	45
How to Remove Game Highlights.....	46
Installing MSI Companion .....	47
Setting MSI Companion .....	49
Setting Game Highlights.....	51
<b>True Color .....</b>	<b>53</b>
True Color Preset Options.....	53
How to customize screen color .....	54
<b>LAN Manager .....</b>	<b>55</b>
Network Control Menu .....	55
Setting Network Speed.....	56
Customizing Application Priorities.....	57
<b>Mystic Light.....</b>	<b>58</b>
Ambient Link.....	61
DYNAMIC DASHBOARD Control Panel (optional) .....	66
DYNAMIC DASHBOARD II Control Panel (optional) .....	68
<b>M-Vision Dashboard (optional) .....</b>	<b>70</b>
<b>Gaming Gear .....</b>	<b>73</b>
<b>Gaming Dial (optional) .....</b>	<b>74</b>
<b>HMI 2.0 (optional) .....</b>	<b>78</b>
Firmware Update.....	79
Hardware Monitor .....	81
Video/Image.....	82
System Clock .....	83
Live Weather .....	84
Set APP Shortcut .....	85
<b>MSI Sound Tune (optional) .....</b>	<b>86</b>
<b>Devices Speed Up .....</b>	<b>87</b>
<b>Super Charger .....</b>	<b>88</b>
<b>Smart Image Finder .....</b>	<b>89</b>
Using Smart Image Finder .....	89
Add or Remove Tags on Images.....	92
<b>System Diagnosis (optional).....</b>	<b>93</b>
<b>Coreliquid (optional).....</b>	<b>94</b>
<b>Case (optional) .....</b>	<b>98</b>

<b>Power Supply Unit (optional)</b> .....	<b>101</b>
<b>Product Registration</b> .....	<b>105</b>
<b>Live Update</b> .....	<b>107</b>
<b>System Info</b> .....	<b>108</b>
<b>Microsoft APP</b> .....	<b>109</b>
<b>Notices</b> .....	<b>110</b>
Copyright.....	110
Revision History.....	110



# About MSI Center

- Optimize game settings and enjoy a high quality gaming experience.
- System performance tuning, you can choose overclock or silent.
- Monitor system information.
- Adjust the best display settings for your eyes.
- Register your MSI products.
- Control the LED light effects and synchronize effects to your devices.
- Manage network connection settings.
- Use utilities to control special features.



## **Important**

- *The software features in this user guide vary by product.*
- *The screenshots for the UI in this user guide are for reference only and the actual UI design may vary.*

# Get Started

## System Requirements


- Operating System:
  - Windows 10/ Windows 11 64-bit

## Supported Hardware


- Motherboard:
  - MSI motherboards
- Graphics card:
  - MSI NVIDIA and AMD graphics cards

## Installing MSI Center


1. Go to MSI Website download **MSI Center**.
2. Extract the downloaded file.
3. Double-click on the extracted **MSI Center** setup program.




4. Click **Install** to continue the process.

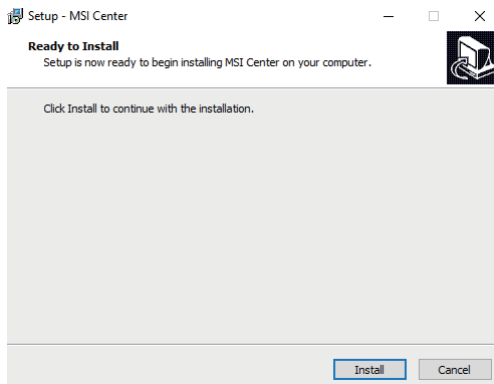


5. Open the Start menu, then right-click on MSI Center.
6. Hover over **More**.

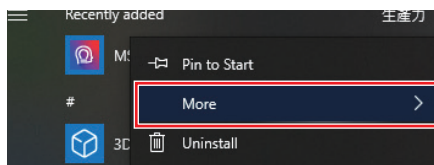


7. Select **Run as administrator**.

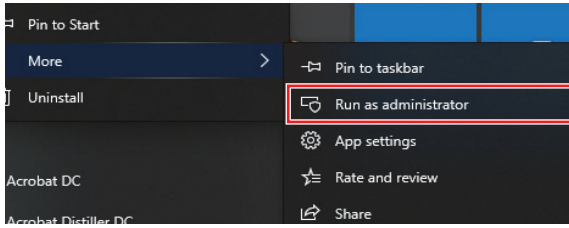

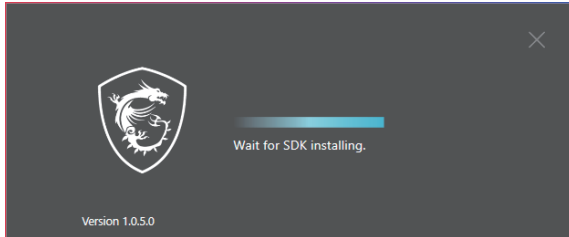

8. Please wait until the installation is complete.



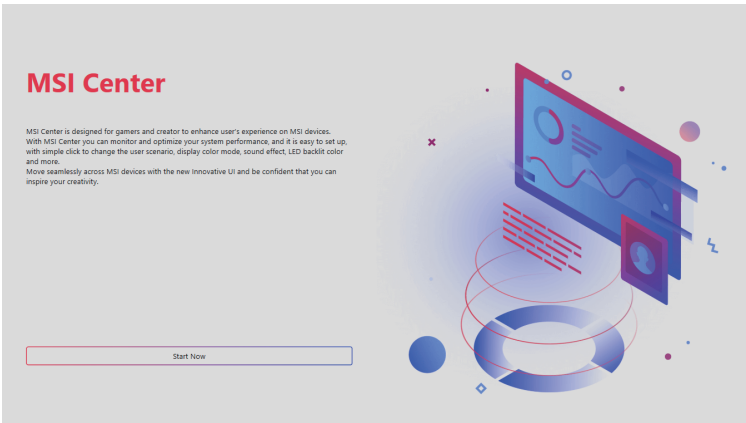

9. You can start to use MSI Center.




## Launching MSI Center


Open the Start  menu, then select MSI Center .

## How to completely remove MSI Center


1. Open the Start  menu, then select settings .
2. Select **Apps**.



3. Uninstall **MSI Center**.

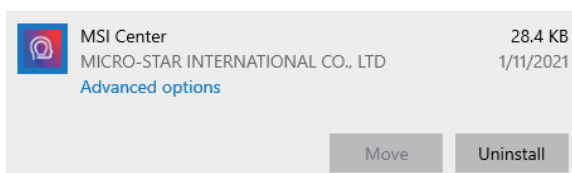

4. Uninstall **MSI Center SDK**.

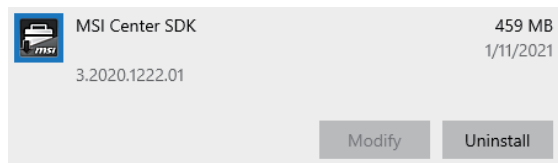


# MSI Center Basics



**Important**


The screenshots for the UI in this user guide are for reference only and the actual UI design may vary.

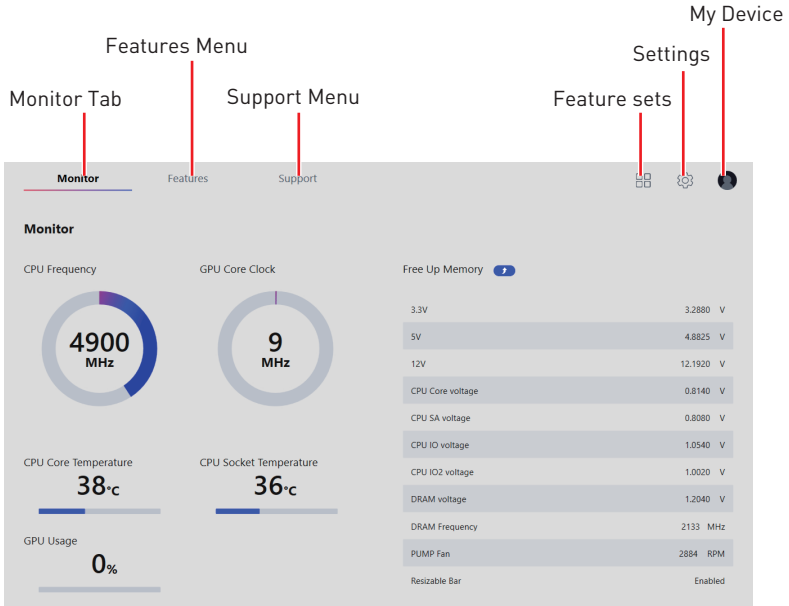

# Feature Sets

Feature Sets allows you to download, update, or uninstall MSI exclusive features. Therefore, you can choose the features you want to build your own MSI center.

The items you can download

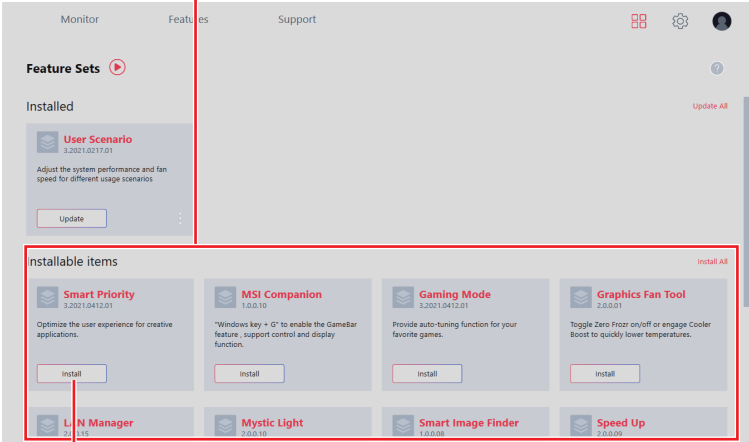


Click here to install

# Gaming Mode (optional)

The Gaming Mode feature will optimize the computer system, monitor, cooler and other peripherals to provide the best gaming experience.

Go to **Features > Gaming Mode**.

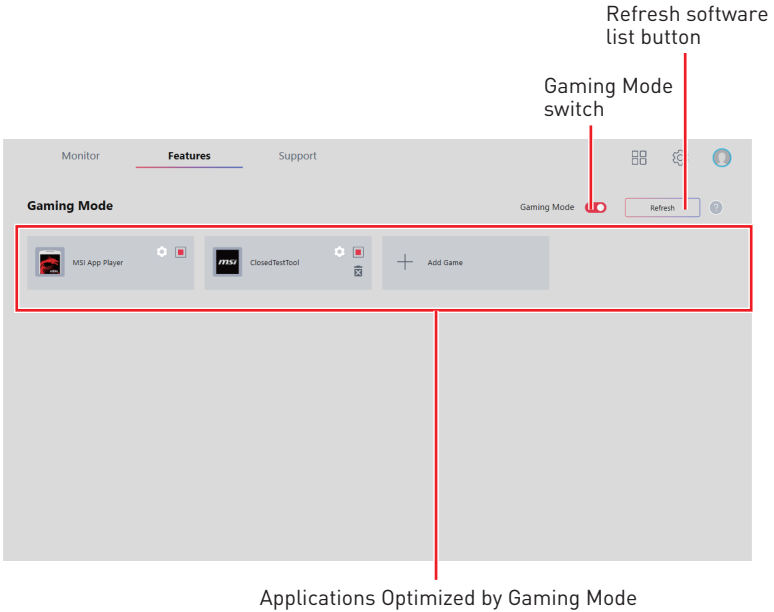


## Important

- Gaming Mode doesn't support PRO Series Motherboards.
- If MSI AI Engine is installed at the same time, Gaming Mode will not be available.
- Once Gaming Mode is deleted, it cannot be downloaded and installed through Feature Sets anymore.


## Gaming Mode Option

Game Mode switch and option settings are available in the upper right corner of each game icon. You can choose whether the game applies Game Mode, such as System Performance, True Color, Nahimic and Touchpad Disable while playing the game.

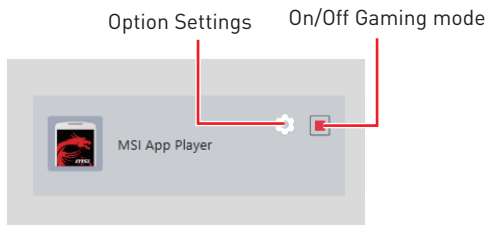


# How to Add Games into Gaming Mode

Click **Add Game** button. Then select the game's **.exe** file.

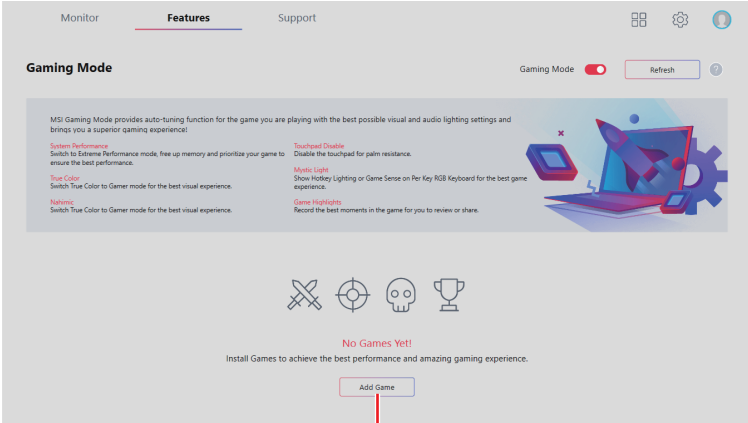

Add Game button


Add Game button

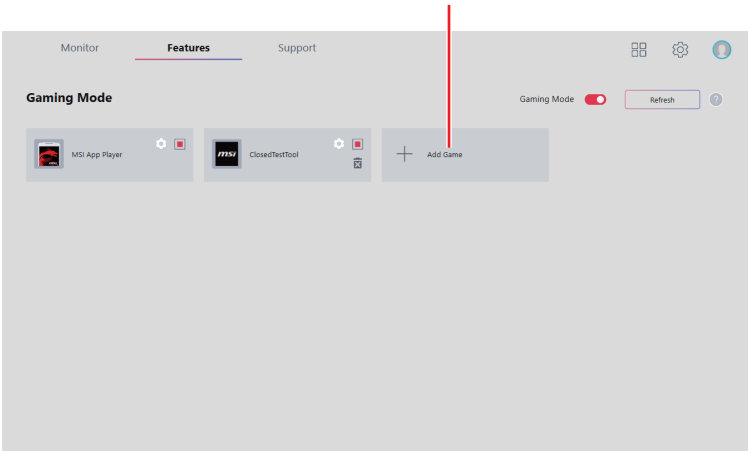




## How to Remove Games from Gaming Mode

1. Click **Remove Game** icon.



Remove Game button


2. When prompted, click **Yes** button to confirm this deletion, or click **Cancel** button to cancel this process.

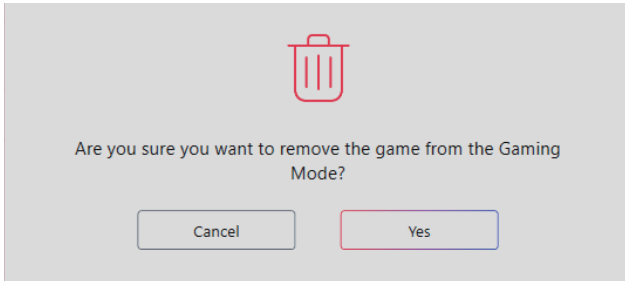


# How to Enable Gaming Mode

You can enable the Gaming Mode to adjust settings for System Performance, True Color, Nahimic, Mystic Light and Game Highlights while playing the game.


1. Go to **Features > Gaming Mode**.

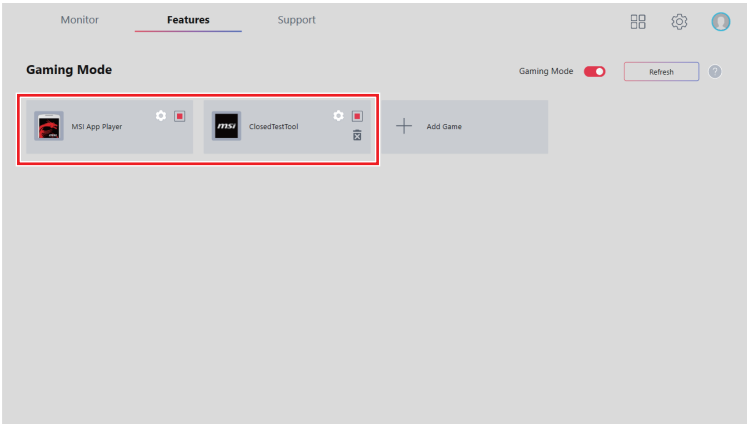

2. Turn on the switch for the game.

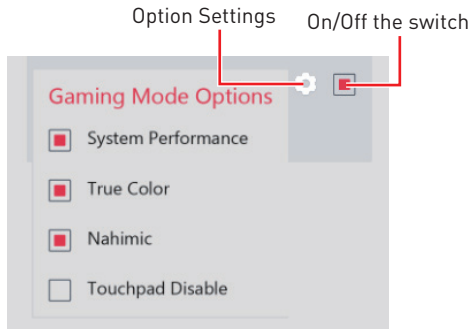

3. Turn on Gaming Mode switch.

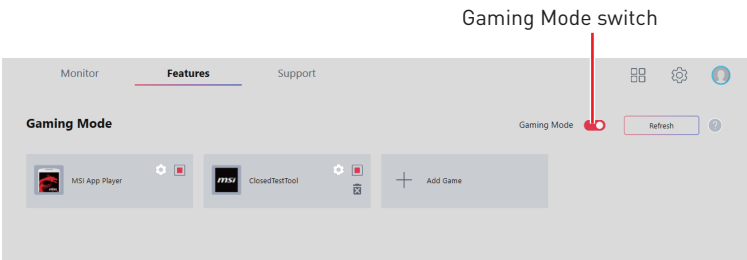

4. Play the game.

# Smart Priority (optional)


The Smart Priority feature will optimize the computer system, monitor, cooler and other peripherals to provide the best experience while using creative applications.

Go to **Features > Smart Priority**.

**User Priority Mode:** User-defined software priority.

**Real-Time Mode:** The top level of the windows has best performance.

**Smart Priority Mode:** Automatically prioritize system resources to your most commonly used programs based on AI calculation.

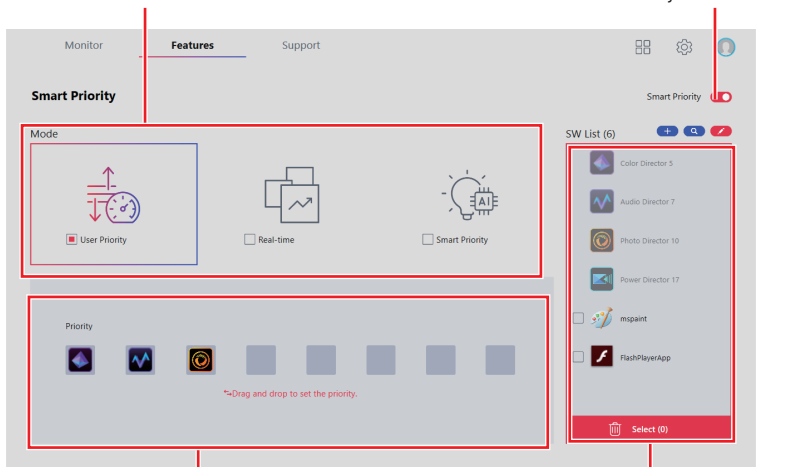

You can drag and drop to set the priority

List software supported by Smart Priority



Edit the software list

Refresh the software list

Add software to the software list

## **Important**


- Smart Priority doesn't support PRO Series Motherboards.
- If MSI AI Engine is installed at the same time, Smart Priority will not be available.
- Once Smart Priority is deleted, it cannot be downloaded and installed through Feature Sets anymore.

# How to Enable Smart Priority

You can enable the Smart Priority for Processor Affinity, System Performance and Application Priority while using creative applications.

1. Go to **Features > Smart Priority**, and turn on Smart Priority main switch.

Turn on Smart Priority main switch

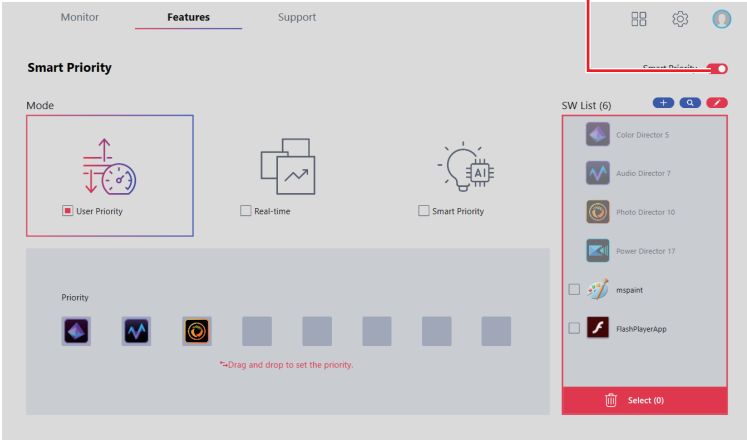

2. Select one of the options.



3. Run the application.

## Important


In order to apply the settings, the Smart Priority must be enabled before running the software.

# MSI AI Engine (optional)

The MSI AI Engine feature uses AI to analyze application usage patterns and needs, and then adjust computer settings to achieve optimal performance.

Go to **Features > MSI AI Engine**.

On/ Off the feature

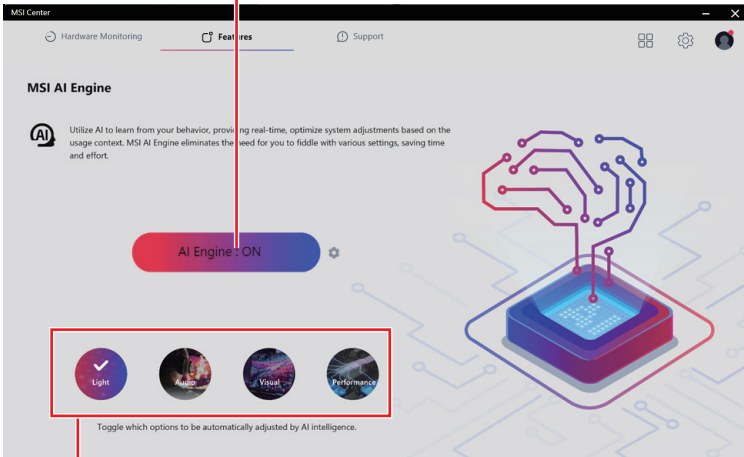

**Light:** Automatically adjust light settings through Mystic Light module.

**Audio:** Automatically adjust audio settings through Nahimic module.

**Visual:** Automatically adjust visual settings through True Color module.


**Performance:** Automatically adjust settings through User Scenario module.


## **Important**

*Light/ Audio/ Visual/ Performance will only be displayed if the corresponding control module is installed and the motherboard supports this feature.*


# How to Add Application in MSI AI Engine

Users can add applications to the specific mode, enabling AI to automatically improve performance when using the application.


1. Click the setting  icon.

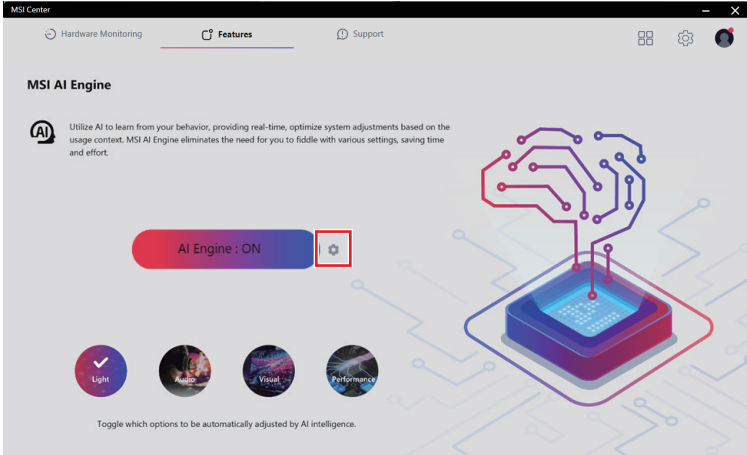


2. Click **Add APP**.

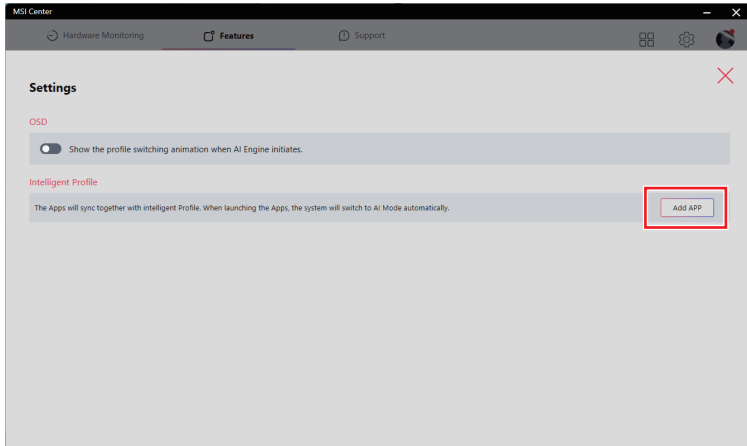


3. If you want to apply the following mode when using a specific application, click the Add icon under the mode to select the application.

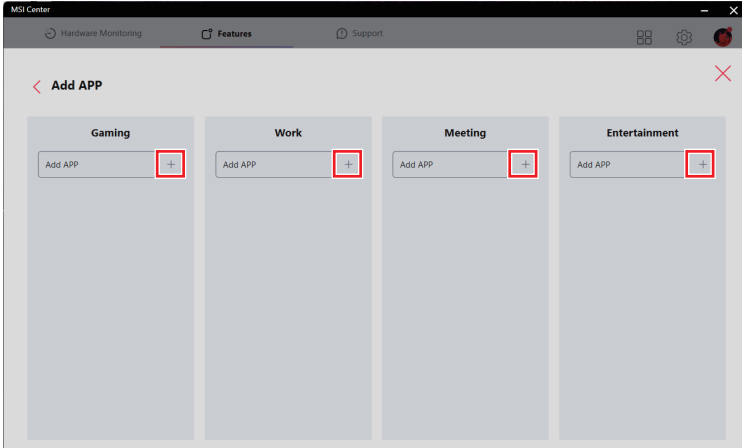


4. After the selection, MSI AI Engine will operate when using the application.


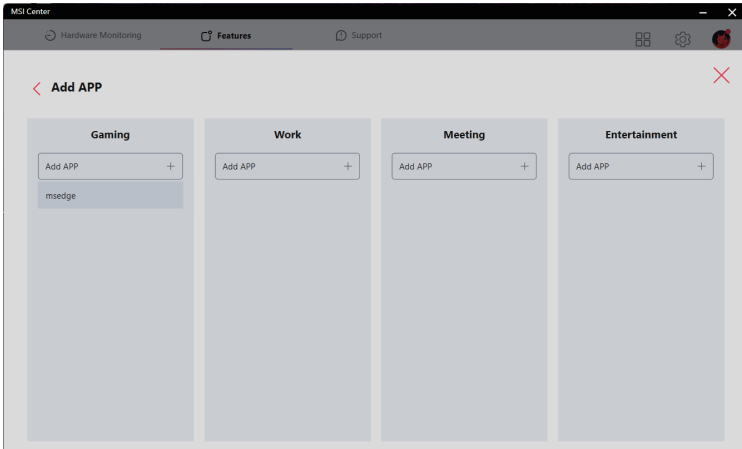


# How to enable MSI AI Engine animation

1. Click the setting  icon.

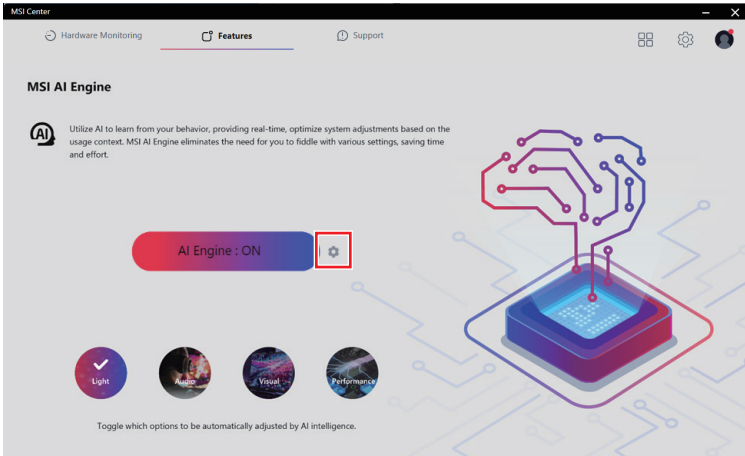


2. Switch on **OSD** option. When MSI AI Engine initiates, the animation will be shown in the lower right corner of the screen.

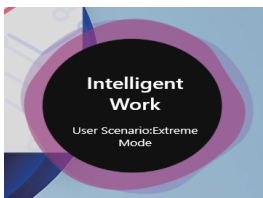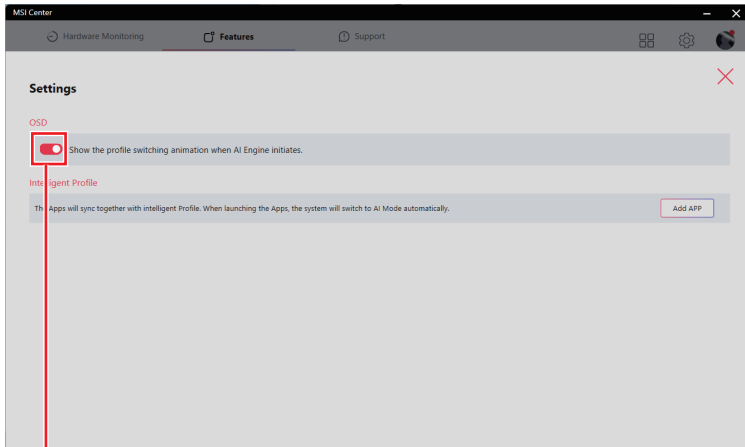



# Hardware Monitoring

Hardware Monitoring feature provides a custom hardware monitor gadget to display the system status.

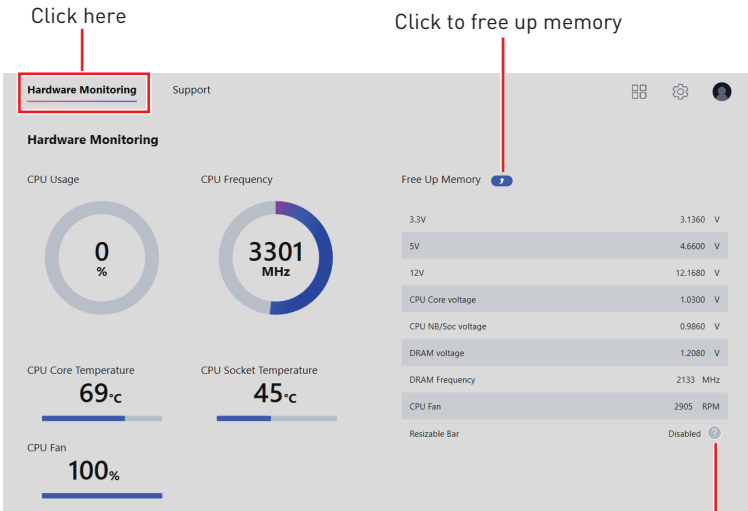

When Resizable Bar is Disabled, click to show information

## Hardware Requirements for Resizable Bar:

- MSI Motherboard:
  - Intel Z390/ H310/ B360/ H370/ Z370/ X299/ Z490/ B460/ H410/ Z590/ B560/ H510
  - AMD B550/ X570/ A520/ X470/ B450/ X470/ B450/ X399/ TRX40
- MSI Graphics card:
  - NVIDIA 3000 series
  - AMD 6000 series

### **Important**


*Resizable Bar will be available when the computer hardware meets one of the above requirements.*

# User Scenario


In addition to Gaming mode, users can choose from three scenarios and one customized option depending on different situations. Each scenario has default settings for CPU, DRAM, and Graphics Card. There is one more function called Software Control Mode, which can switch on/off only CPU and Fan settings in the selected mode.

## Selecting User Scenario

1. Go to **Features > User Scenario**.
2. Turn on/off Software Control Mode in the upper right corner of the screen.

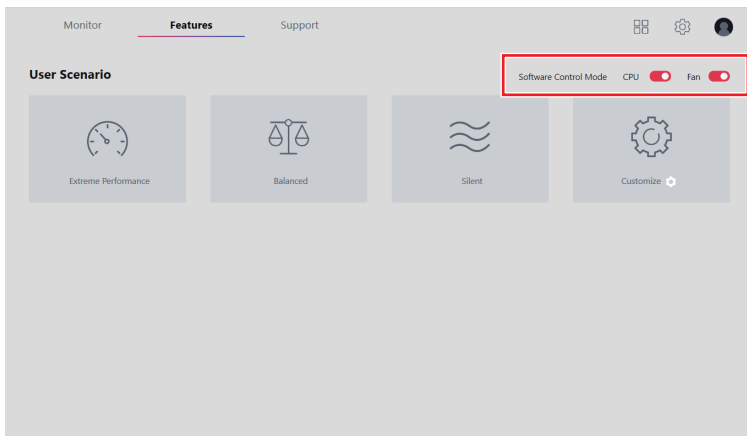

3. Select one mode among Extreme Performance/ Balanced/ Silent/ Customize.

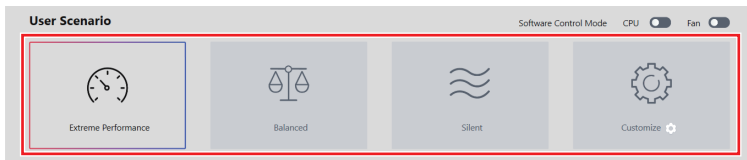

4. Restart your computer to apply the settings.
  - **Extreme Performance** – A configuration that boosts the highest possible performance for AAA games, and enables overclocking.
  - **Balance** - MSI recommended settings for most users.
  - **Silent** - A configuration that allows system to run smoothly with minimum loading.
  - **Customize** - Customize the performance level and fan speed as desired.

## Canceling User Scenario


1. Click on the selected scenario again.




2. Restart your computer to apply the BIOS settings.

## How to disable CPU/Fan settings when applying User Scenario

1. Turn off Software Control Mode in the upper right corner of the screen.

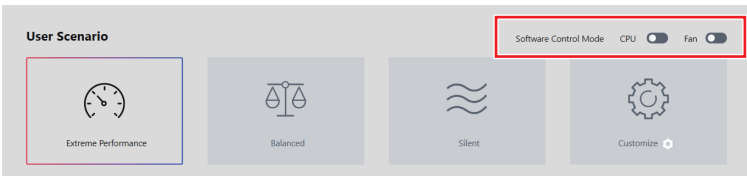

2. Select one of the options to apply the mode except for CPU/Fan settings.

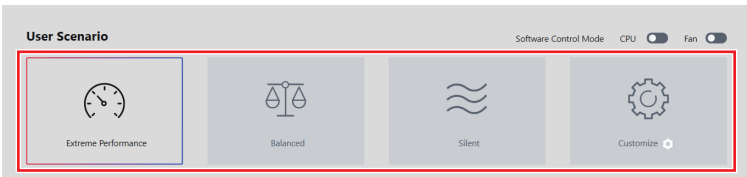


3. Restart your computer to apply the settings.

### **Important**

- *Software Control Mode only controls the options in User Scenario, not including Gaming Mode.*
- *After turning on or off Software Control Mode, you need to select one of User Scenario modes to apply the settings.*
- *If you turn on Gaming Mode switch and also select one of User Scenario modes, the system will apply Gaming Mode settings first.*


## Setting User Options


In the lower right corner of User icon, click the setting  icon to customize user options.

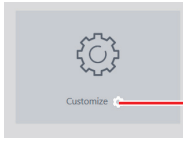



Click to set User Options


## How to Adjust the CPU Frequency

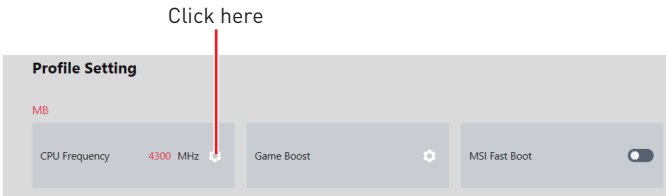1. Go to **Features > User Scenario**, click Customize.
2. In the MB section, click **CPU Frequency** setting .



CPU frequency = Ratio \* BCLK

Click  /  to adjust CPU ratio and Base Clock frequency (BCLK). You can also fill out the value in the input box.

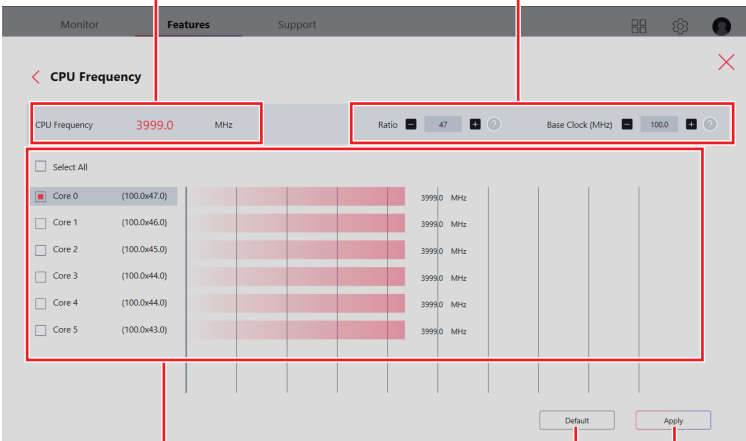


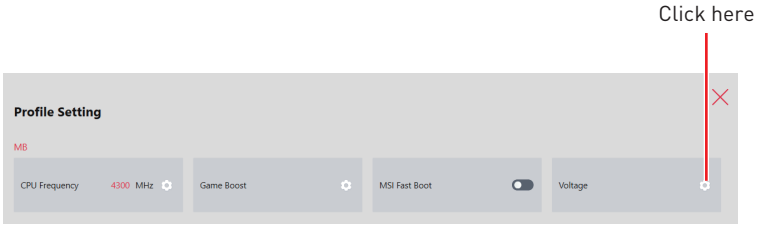
Select all or individual cores



Apply changes


Default values

# How to Adjust the Motherboard Voltage

1. Go to **Features > User Scenario**, click **Customize**.
2. In the MB section, click **Voltage** setting .




Click  /  to adjust voltage value. You can also fill out the value in the input box.

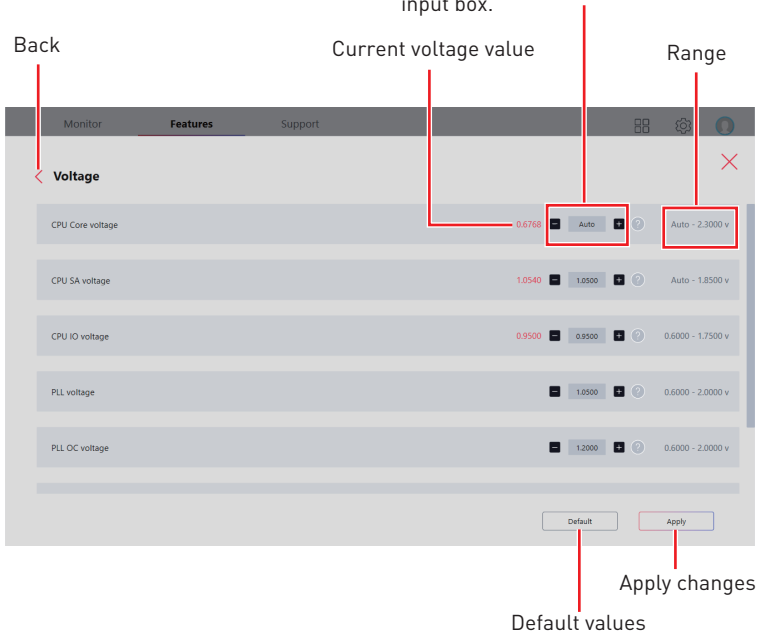


## How to Use Game Boost

The GAME BOOST feature allows you to overclock your computer.

1. Go to **Features > User Scenario**, click **Customize**.
2. In the MB section, click **Game Boost** setting .



## For Motherboard with Game Boost

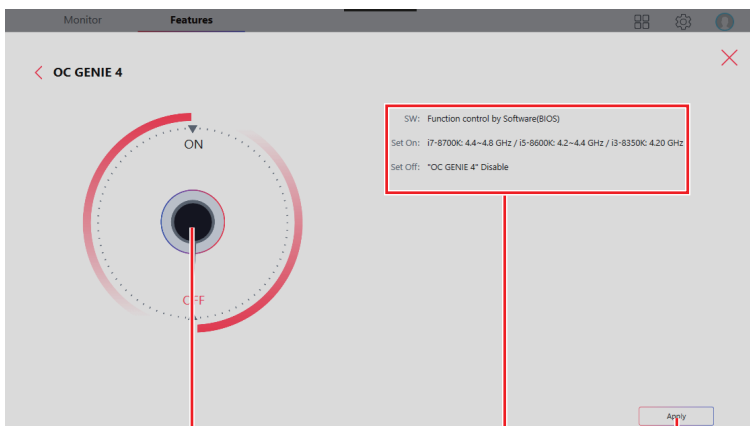


On/Off button to enable/disable Game Boost feature

Apply changes

Function description

## For Motherboard with Game Boost 8 Stages

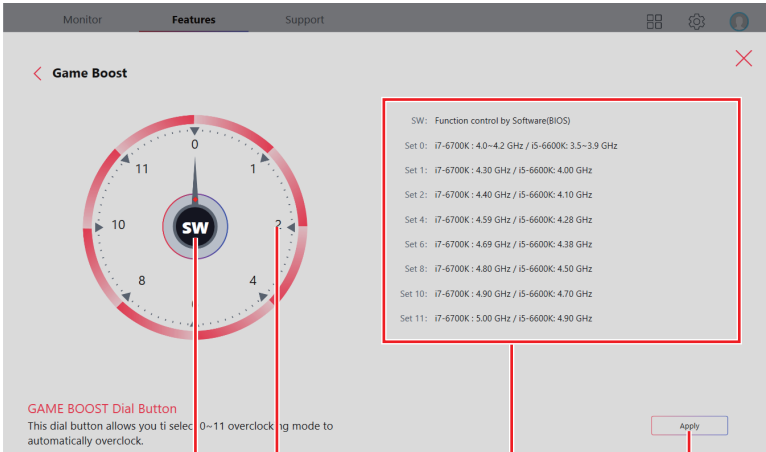

### GAME BOOST Dial Button

This dial button allows you to select 0~11 overclocking mode to automatically overclock.

Apply changes


Function description



Click 0~11 number to select a stage from number 0 (default) to number 11 (extreme) for overclocking the processor.

GAME BOOST Dial Button allows you switch GAME BOOST control between software (SW) and hardware (HW) by clicking on the center button.

# How to Adjust the GPU and GPU Memory Frequency

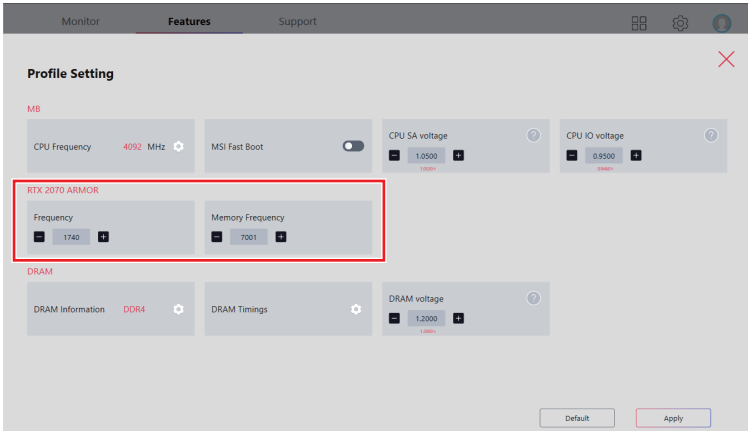
1. Go to **Features > User Scenario**, click Customize.




2. Click  /  to adjust GPU Frequency and GPU Memory Frequency. You can also fill out the value in the input box.
3. Click the Apply button to apply change.




# How to Adjust the DRAM Timing

1. Go to **Features > User Scenario**, click **Customize**.
2. In the DRAM section, click **DRAM Timings** setting .

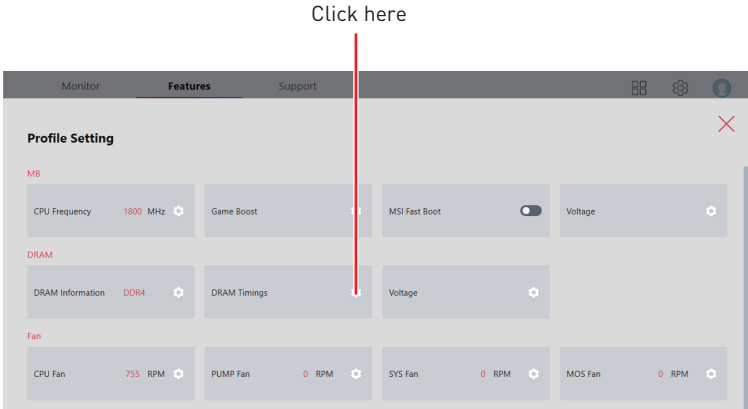


Back Select the DRAM Channel


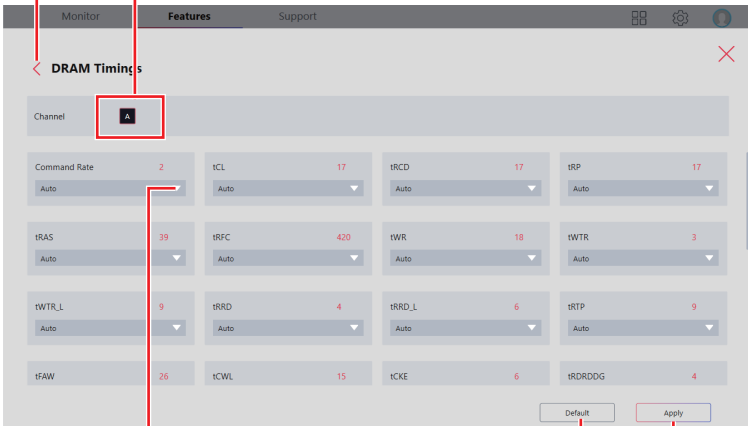


Click to select an available value from the drop-down menu

Apply changes  
Default values

# How to Adjust the DRAM Voltage


1. Go to **Features** > **User Scenario**, click **Customize**.
2. In the DRAM section, click **Voltage** setting .

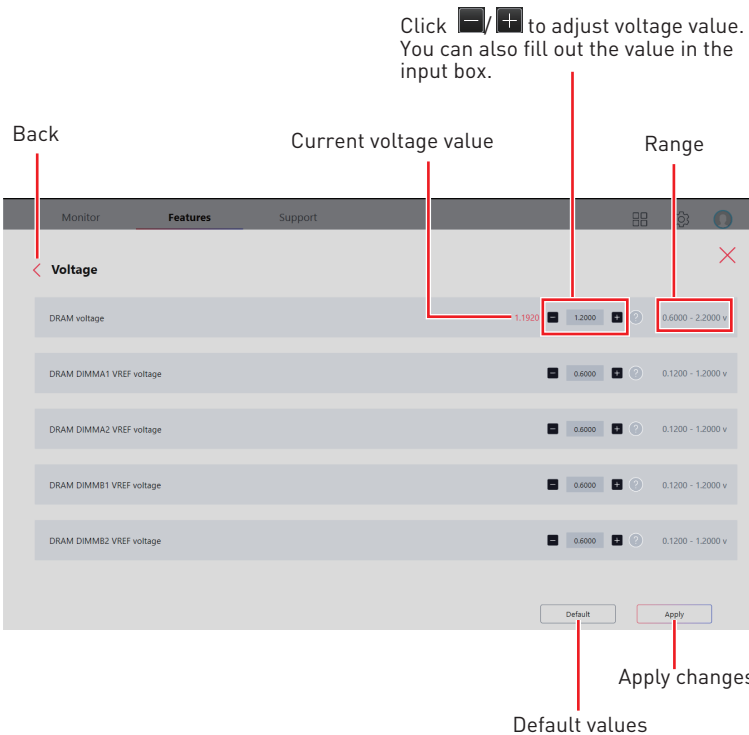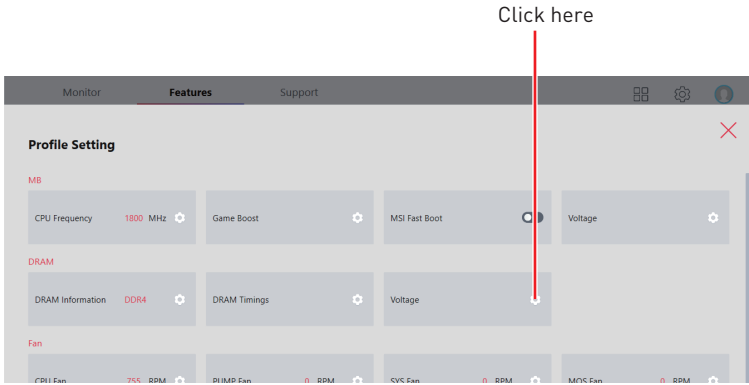

## How to Enable MSI Fast Boot

The MSI Fast Boot feature can decrease computer startup time.

1. Go to **Features > User Scenario**, click Customize.
2. In the MB section, turn on **MSI Fast Boot** switch.

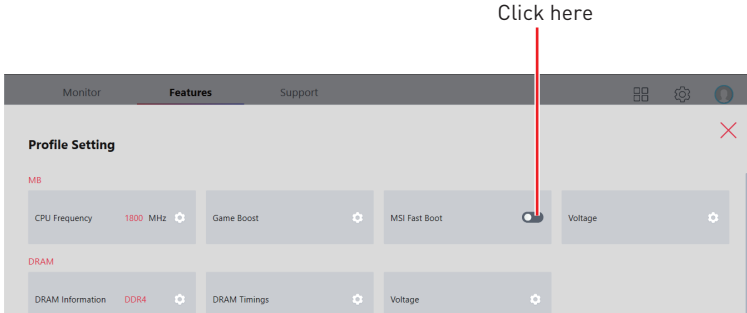


3. Click the Apply button to apply changes.
4. Reboot your computer, and MSI Fast Boot will be enabled.

# Cooling Wizard

This feature allows users to control the fan settings of all MSI products from one place. This makes it easier for users to manage fan settings and to make changes as needed.

Go to **Features > Cooling Wizard**.

Up to 5 profile settings  
can be added/saved

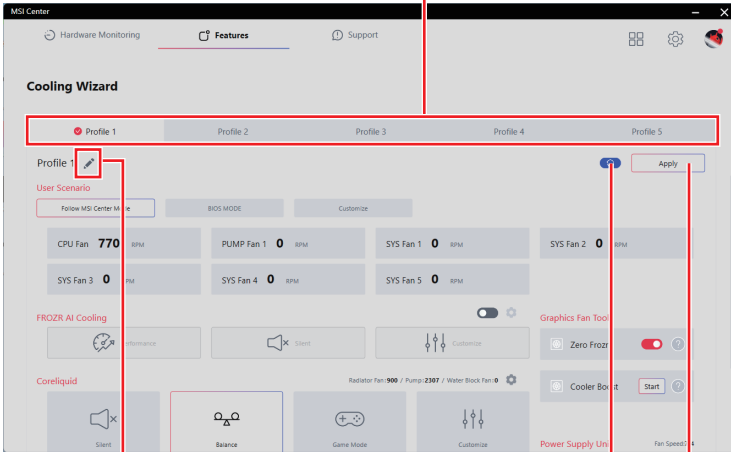


Rename profile

Reset to default  
fan setting

Click to apply


# How to Adjust Fan settings


1. Go to **Features > Cooling Wizard**.
2. In **User Scenario** section, select one fan mode you'd like to apply.
  - **Follow MSI Center Mode:** To adjust fan settings according to the mode selected by the user in the User Scenario.
  - **BIOS Mode:** To adjust fan settings by BIOS settings.
  - **Customize:** To customize fan settings by the user.

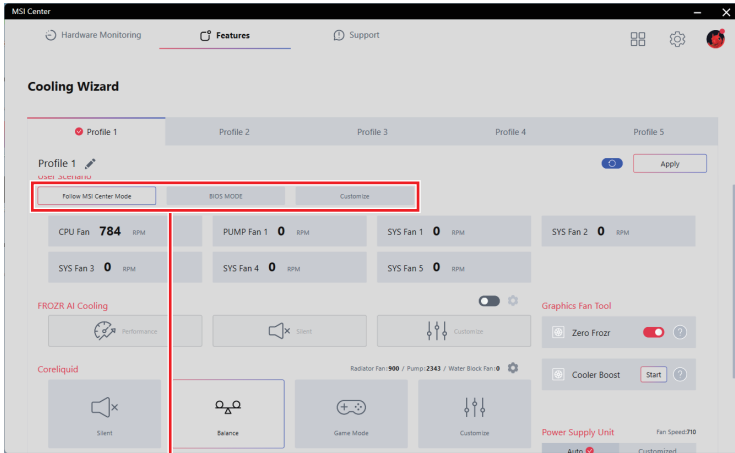

Select one mode

## How to use the Smart Fan control panel


1. Go to **Features > Cooling Wizard**.
2. In **User Scenario** section, select **Customize**.
3. Click the Setting icon  on the fan you want to adjust.

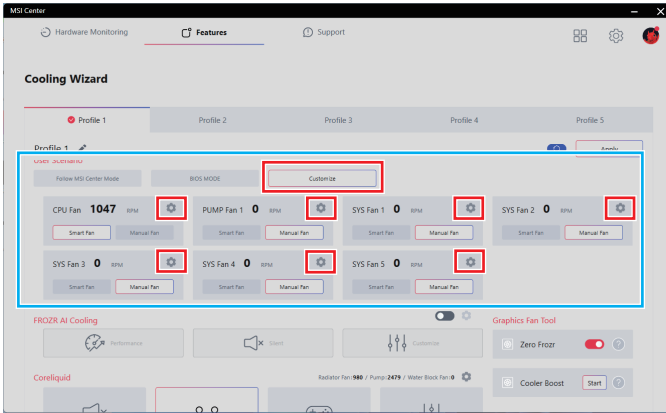

4. In **Smart Fan** tab, adjust settings as you want.
5. Click **Apply** to save the settings.

The Smart Fan control panel contains 4 dots which allow you to drag and adjust the smart speed slopes. The fan speed will change along with the smart speed curve.

Fan Tune - click to automatically optimize the smart fan setting.

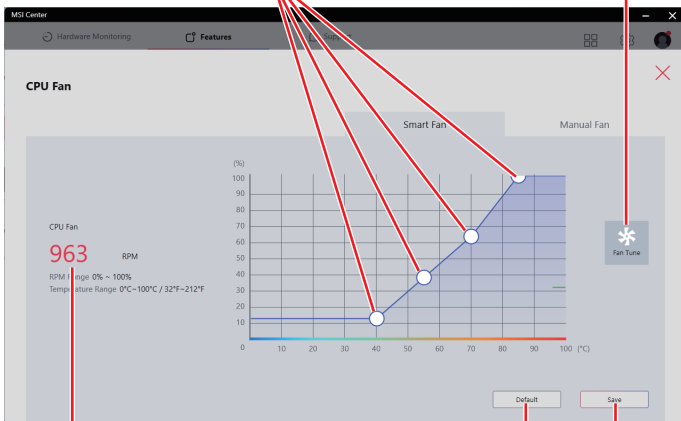


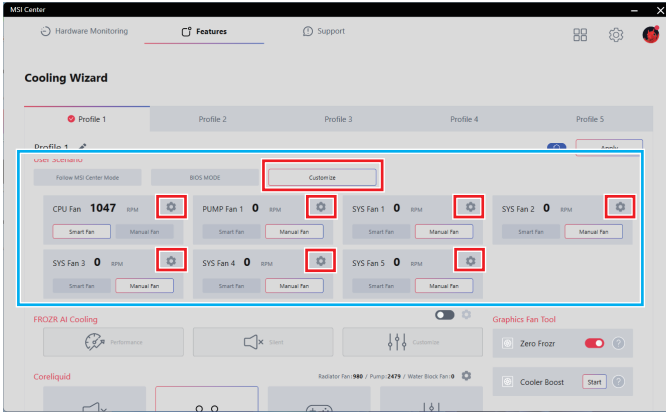
Current fan speed

Back to the default setting

Change and Save

## How to use the Manual Fan control panel

1. Go to **Features > Cooling Wizard**.
2. In **User Scenario** section, select **Customize**.
3. Click the Setting icon  on the fan you want to adjust.



4. In **Manual Fan** tab, adjust settings as you want.

Fan Tune - click to automatically optimize the smart fan setting.



Current fan speed

Back to the default setting

Click the percentage to manually control the fan speed.

Change and Save

# How to use Frozr AI Cooling

Frozr AI Cooling feature will use AI technology to detect CPU & GPU temperatures and automatically adjust fan duty of system fans to a proper value.

## Supported Hardware:

- Motherboard:
  - Support PCIe 4.0 slots
- Graphics card:
  - MSI NVIDIA 3000 series and AMD 6000 series graphics cards



### Important

Frozr AI Cooling will be available when the computer hardware meets both of the above requirements.


1. Go to **Features > Cooling Wizard**.
2. On/Off the Frozr AI Cooling switch.
3. In **Frozr AI Cooling** section, select one fan mode you'd like to apply.
  - **Performance** - Boost extreme performance with higher fan speed.
  - **Silent** - Adjust fan speed for best cooling and silence.
  - **Customize** - Customize fan speed as desired.

On/Off the switch

**On** - To use Frozr AI Cooling to control system fans


**Off** - To apply User Scenario Customize settings to control system fans

Select one mode

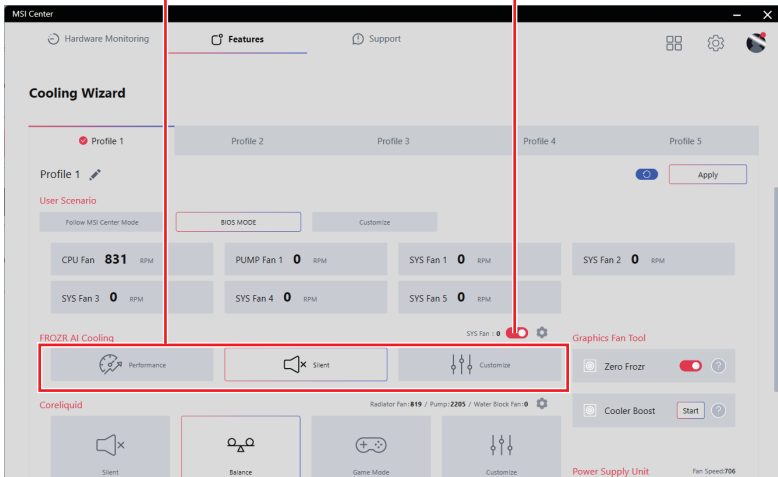




## How to customize fan mode for Frozr AI Cooling

1. Go to **Features > Cooling Wizard**.
2. On the Frozr AI Cooling switch.
3. Select Customize Mode for Frozr AI Cooling, and click Setting icon .

Click setting icon to adjust detailed settings

On the switch

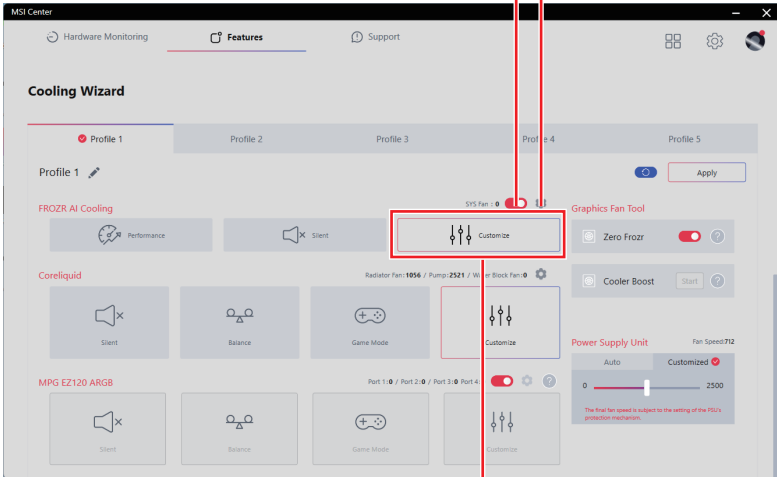

Select Customize mode

- Fill out CPU/ GPU temperatures and the corresponding fan duty for different three stages.
- Click Apply to save the settings.

**Blue curve** - GPU fan curve  
**Red curve** - CPU fan curve  
**Green curve** - Realtime system fan curve

The screenshot shows the MSI Center FROZR AI Cooling interface. It includes a 'Performance' button, a 'Silent' button, and a 'Customize' button. Below these are 'SYS Fan' controls showing '0 RPM' and 'RPM Range 0% ~ 100%' and 'Temperature Range 0°C ~ 100°C / 32°F ~ 212°F'. A table of fan settings is shown below, and a fan curve graph is on the right. The graph plots fan duty (%) on the y-axis (0-100) against temperature (°C) on the x-axis (0-100). Three curves are shown: GPU (blue), CPU (red), and Current (green). The GPU curve starts at 30% duty at 60°C and rises to 70% at 80°C. The CPU curve starts at 30% duty at 60°C and rises to 50% at 80°C. The Current curve starts at 30% duty at 60°C and rises to 50% at 80°C. Below the graph are 'Default' and 'Save' buttons.

Interval	CPU	GPU	Fan 1	Fan 2	Fan 3	Fan 4	Fan 5
Interval 1	85 °C	25 %	60 °C	30 %			
Interval 2	95 °C	35 %	70 °C	50 %			
Interval 3	100 °C	50 %	75 °C	65 %			


Fill out temperatures and fan duty for three stages

Back to the default setting

Change and save


## Setting fan mode for case

1. Go to **Features > Cooling Wizard**.
2. In **Case** section, select one fan mode you'd like to apply.
  - **Performance** - Enhances the heat dissipation performance.
  - **Silent** - Adjust fan speed for best cooling and silence.
  - **Customize** - Customize the performance level and fan speed as desired.

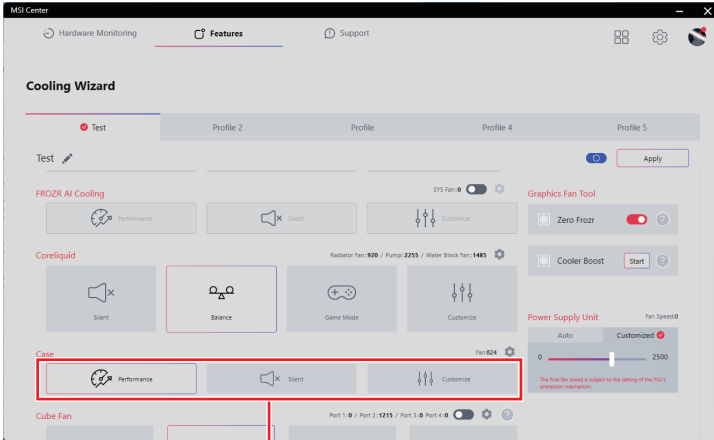


Select one mode


## How to customize fan mode for case

1. Go to **Features > Cooling Wizard**.
2. Click Case Setting icon .

Click here

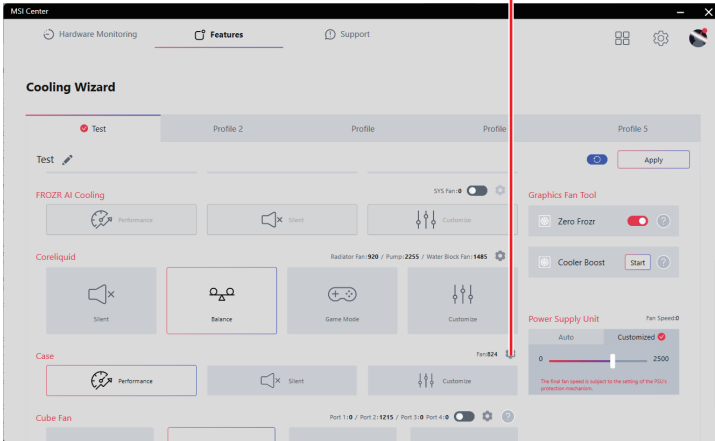


3. Select Customize mode.
4. Adjust fan settings as you want.
5. Click Apply to save the settings.

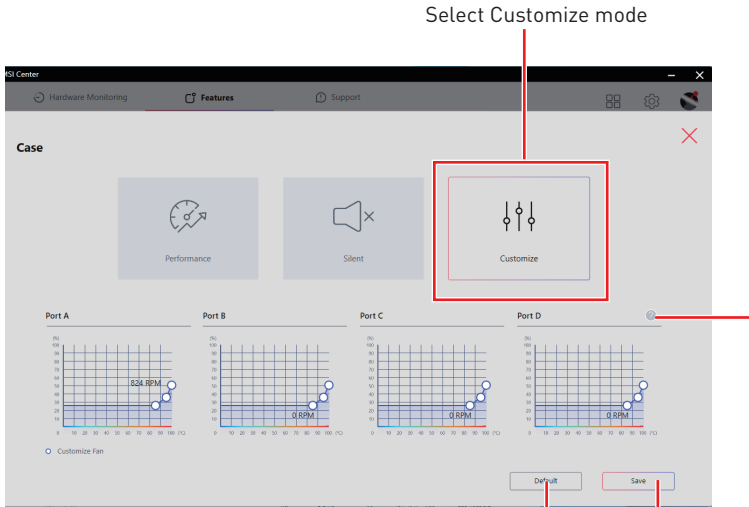

Each fan control panel contains 3 dots which allow you to drag and adjust the smart speed slopes. The fan speed will change along with the smart speed curve.

Back to the default setting


Change and save

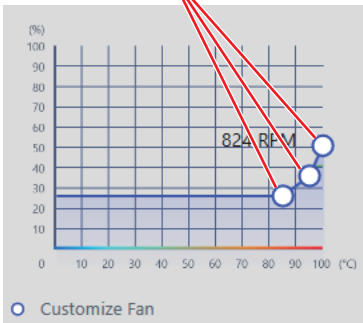

You can view the fan port connection by hovering the cursor over the **question mark button**.

# Setting fan speed for Power Supply Unit

1. Go to **Features > Cooling Wizard**.
2. In **Power Supply Unit** section, select **Auto** or **Customized** settings by clicking the tabs.
  - **Auto**: Adjust fan speed automatically .
  - **Customized**: Adjust the fan speed manually by dragging the slider.

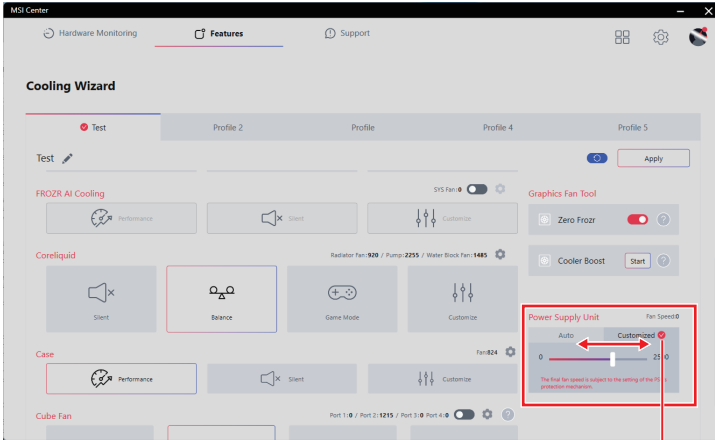

**Checkmark icon** indicates your settings have been applied




*The final fan speed is subject to the setting of the PSU's protection mechanism.*

## How to use Graphics Fan Tool

**Zero Frozr** is an intelligent fan control feature that stops the fan from spinning when the GPU temperature is below 60°C. When the GPU temperature exceeds 60°C, the fan will start to spin to help dissipate heat and maintain optimal performance. Enabling **Cooler Boost** will force the GPU fan to spin at 100% for 30 seconds. You can only click it again after 5 minutes.

Go to **Features > Cooling Wizard**.

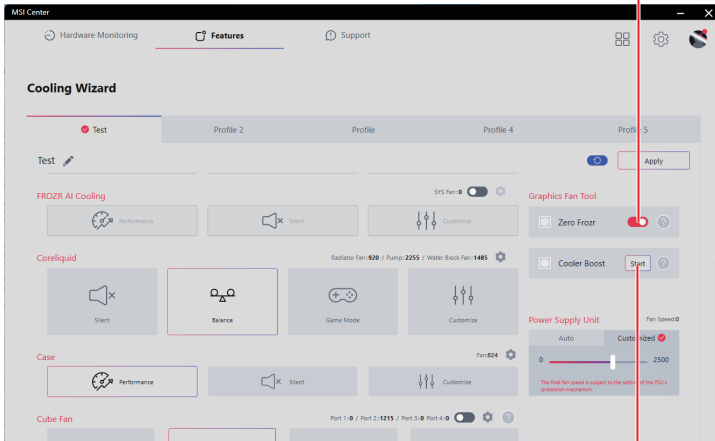

On/Off the switch

Click Start to enable  
Cooler Boost

# Game Highlights

Game Highlights feature will automatically capture clips of amazing gameplay moments. It looks for certain events which occurs in games, and saves the captured videos in your local folder.

Go to **Features > Game Highlights**.





## **Important**

*Game Highlights feature only supports certain series Motherboards. In addition, this function is currently available in Fortnite, League of Legends, Apex Legends, Valorant, PUBG, Overwatch, Heroes of the Storm.*



## How to Share Game Highlights to Social Media

Game Highlights feature supports uploading videos directly to social media, such as YouTube, Twitter, and Discord.

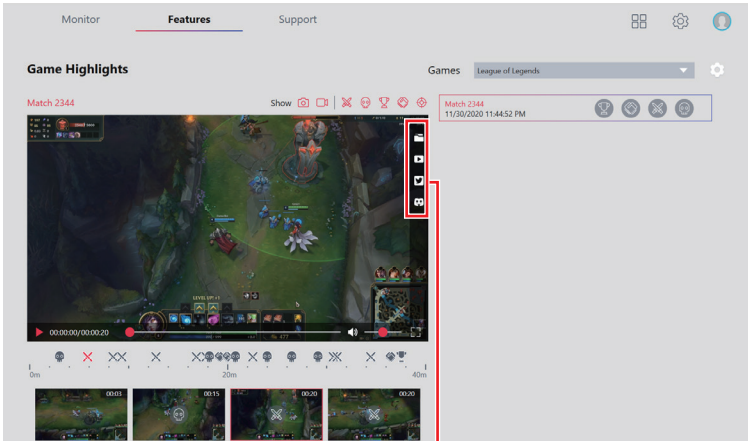


Options to open files in the folder and to directly share clips to social media

# How to Remove Game Highlights

You can choose to delete game highlight video which includes several clips or to remove one single game highlight clip from the whole game video.

Click here to remove the game highlight video

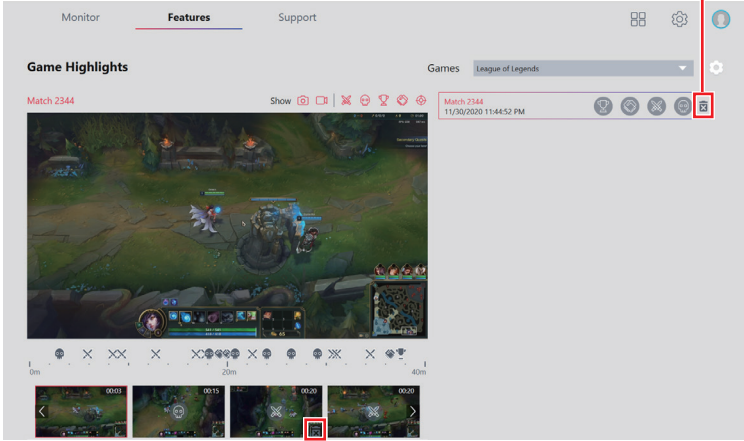


Click here to remove the game highlight clip

## Installing MSI Companion


Before you enable Game Highlights function, you should install MSI Companion first.

1. Go to **Features > Game Highlights**.
2. When a prompt window appears, click **Download MSI Companion app**.


Click here

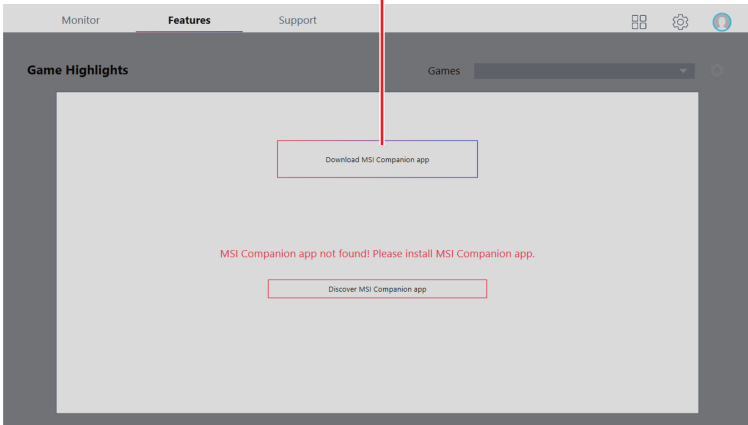


3. Execute **MSI Companion-Installer.exe**, and click **Next** to continue the process.

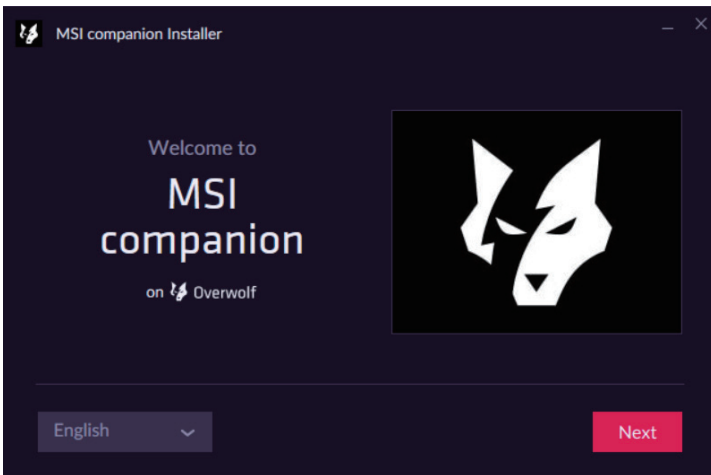

4. Select **I have read and accepted Overwolf's terms and Privacy Policy**.

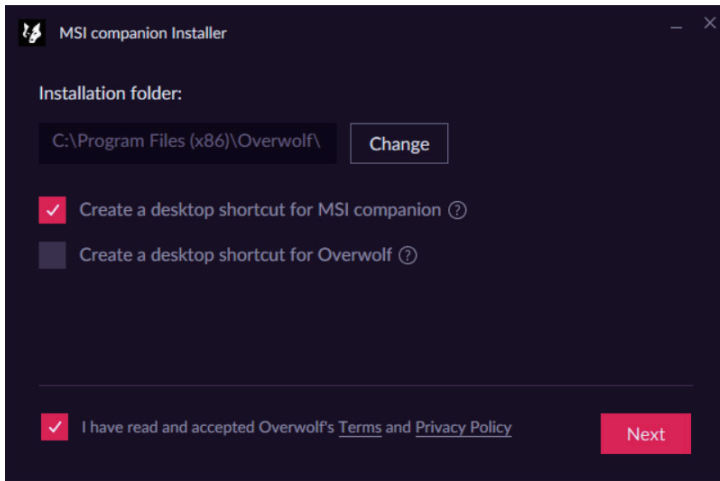

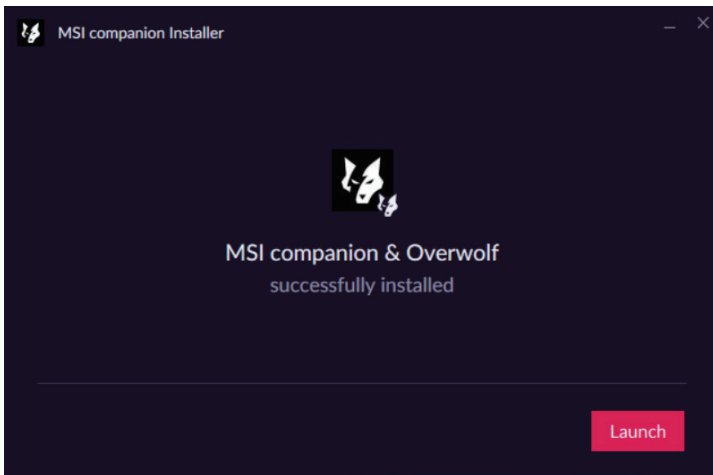


5. After finishing MSI companion and Overwolf Installation, click **Launch** to activate MSI companion.



### How to Activate MSI Companion


You can activate MSI companion by one of the following methods:

- Open Overwolf in System Tray, and click MSI Companion 
- Press ctrl + tab in games to open Overwolf, and click MSI Companion 
- Click MSI Companion  on the desktop.


## Setting MSI Companion

After activating MSI Companion app, you can adjust settings about Control and Display from the pop-up window.

### On Control tab

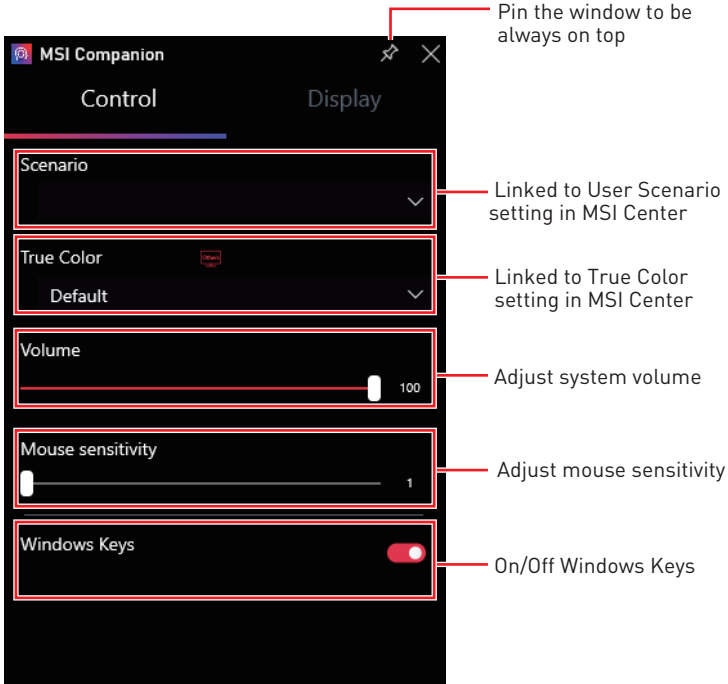

## On Display tab

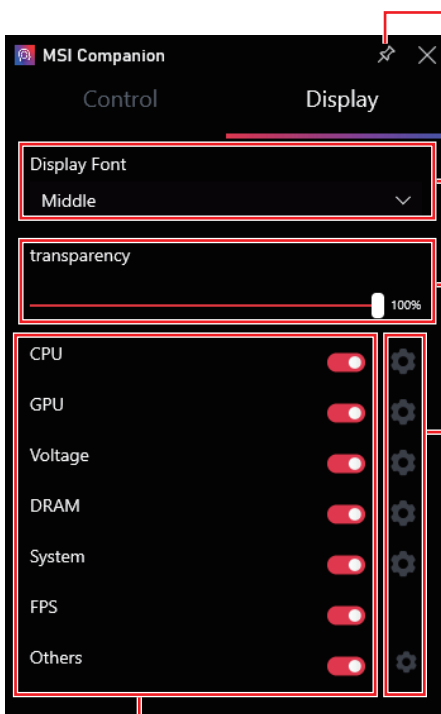

MSI Companion Control Display

Display Font: Middle

transparency: 100%

CPU, GPU, Voltage, DRAM, System, FPS, Others (with toggle switches and setting icons)

MSI Companion Setting


- CPU
  - CPU Usage
  - CPU Core Temperature
  - CPU Frequency
  - CPU Fan
  - PUMP Fan

Annotations:

- Pin the window to be always on top
- Adjust font size for system monitor
- Adjust transparency for monitor background
- Click the setting icon to choose the detailed items you want to display on the screen
- Select the system performance you want to display on the screen

System monitor

Pin the window to be always on top

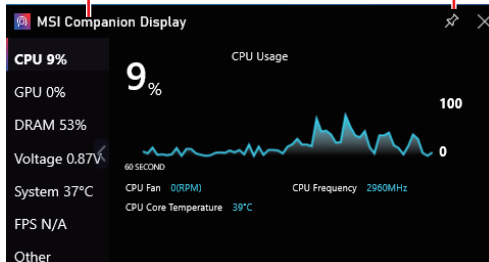

MSI Companion Display

CPU 9% CPU Usage

GPU 0%

DRAM 53%

Voltage 0.87V

System 37°C

FPS N/A

Other

9%

60 SECOND

CPU Fan 0(RPM)


CPU Core Temperature 39°C

CPU Frequency 2960MHz

# Setting Game Highlights

- Go to **Features > Game Highlights**, and click setting .


Click here

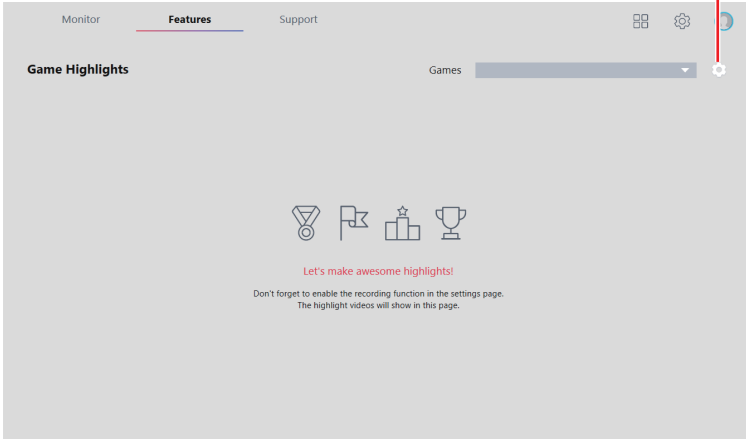

- Adjust settings for Games, Capture, and Storage.


## On Games tab

On/Off Game Highlights

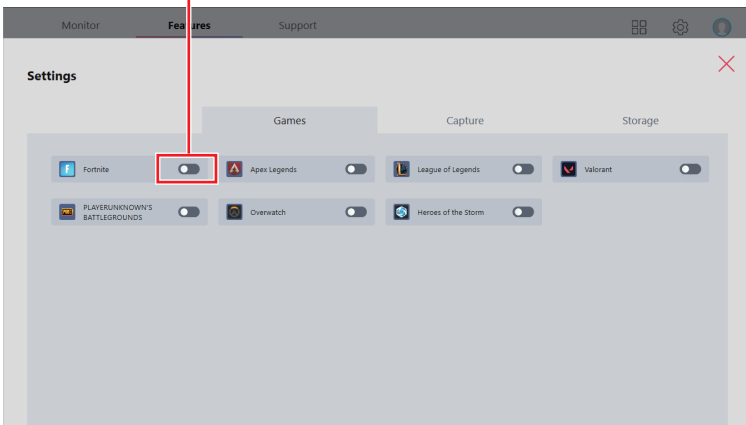


## On Capture tab

Adjust hotkey settings for manual capture

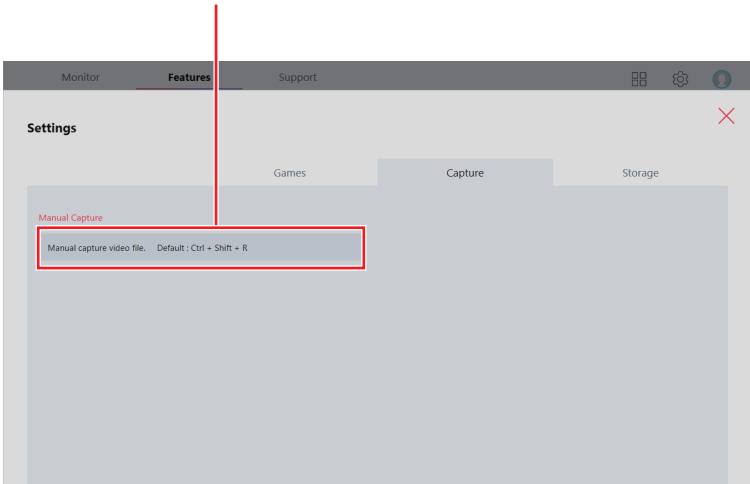

## On Storage tab

Select Auto Manage/ Manual Manage for file size and disk space settings

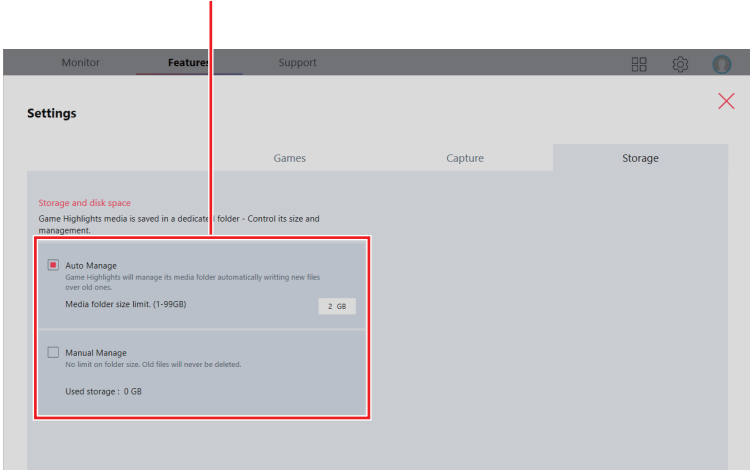




# True Color

With True Color function, you can adjust the best screen gamma, saturation, brightness and contrast settings for your eyes.

The True Color feature supports games in windowed mode.

Go to **Features > True Color**.

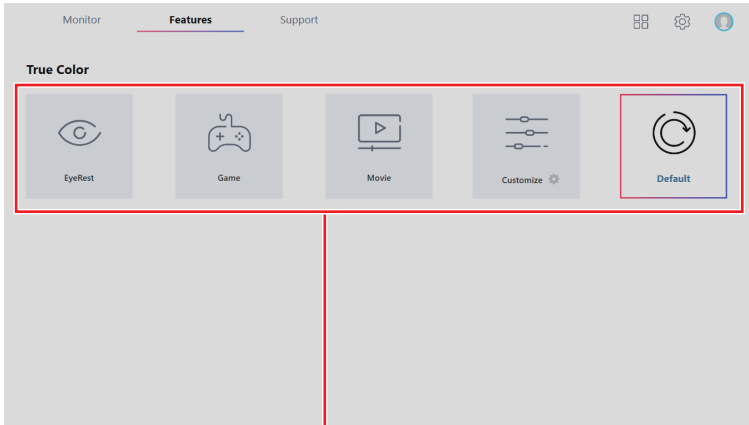

Select one of screen color settings


## True Color Preset Options


When you click the preset option, the screen settings will be immediately applied to your computer. The detailed options are as follows:

- **EyeRest** - reduces blue light of your computer screen for eye care.
- **Gaming** - enhances the contrast of the screen.
- **Movie** - enhances the dynamic contrast of the screen.
- **Customize** - allows you to adjust gamma, contrast and color balance of your computer screen. Please refer to the instructions on page 41.
- **Default** - uses the system default setting.


## How to customize screen color

The True Color control panel has a **Customize** feature that allows you to customize your own colors.

1. Click the setting  icon in the lower right corner of Customize icon.

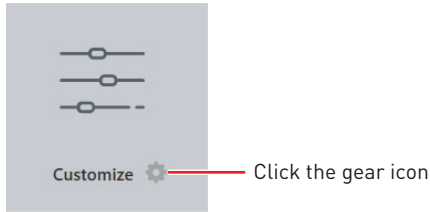

2. Click and drag the sliders to adjust the Gamma, Level, Brightness and Contrast on Red, Green and Blue tabs.

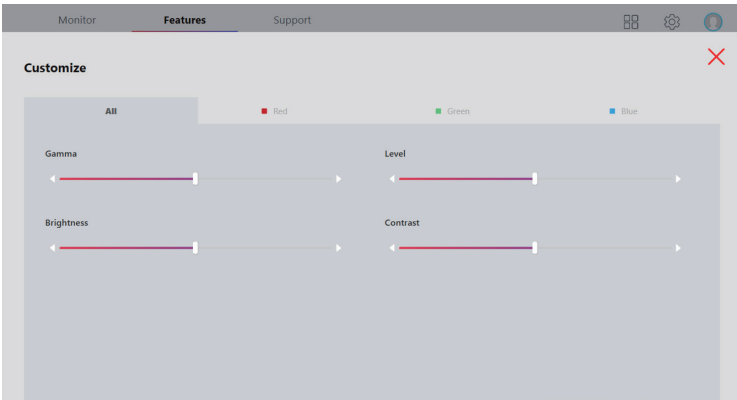


3. Click the Apply button to save the settings.

# LAN Manager

LAN Manager is applied to Windows 10 network traffic shaping. It keeps your internet speed stable and faster during heavy uploads/downloads and reduces the ping value of online games. If your motherboard has a Wi-Fi module, it can also provide virtual access point functionality for your mobile device for traffic shaping.

## To use LAN Manager:

1. Install the LAN driver.
2. Connect your computer to the internet.
3. Go to **Features > LAN Manager**.

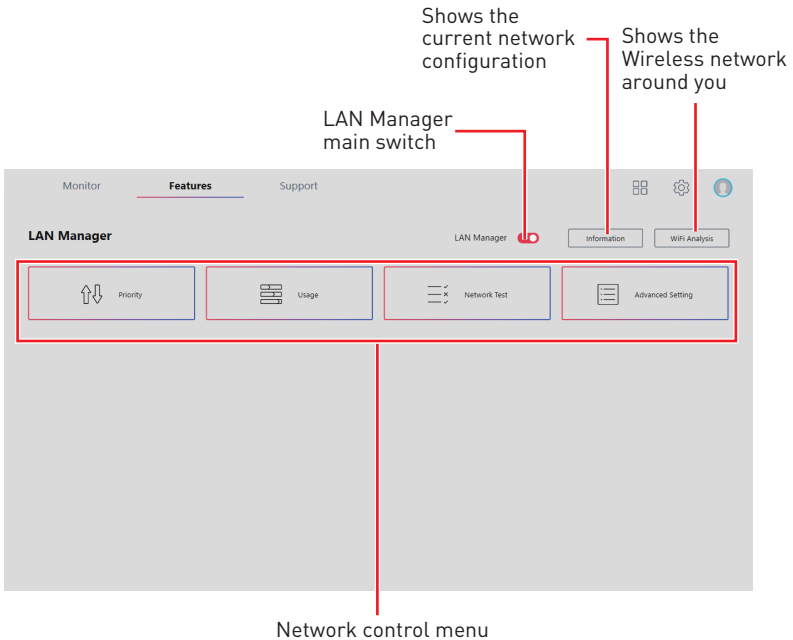


## Network Control Menu

Other relevant settings on the LAN Manager Control Panel are as follows:


- **Priority** - customizes application network bandwidth priorities.
- **Usage** - displays the application network usage status.
- **Network Test** - allows you to set up bandwidth control.
- **Advanced Setting** - allows you to expand RWIN to accelerate download speed. You can also block IP address and set up virtual access point.

# Setting Network Speed


1. Select the **Network Test** control panel.

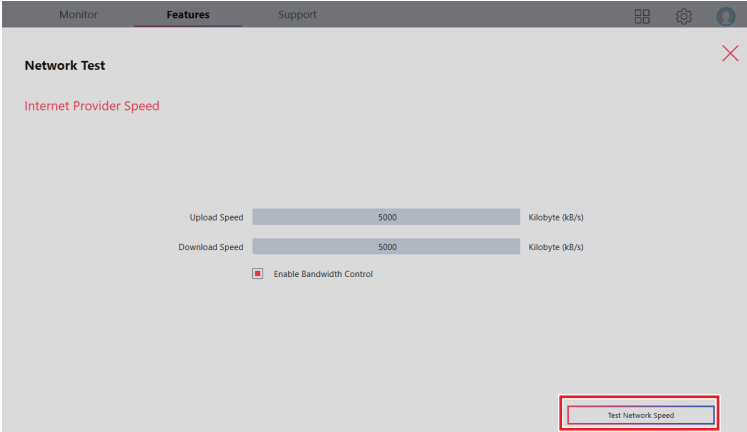

2. Click **Test Network Speed**.
3. cFos Speed Test web page will be opened.

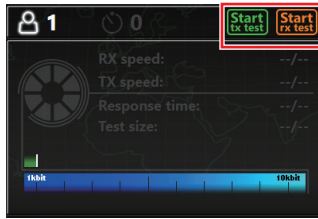


4. Click **Start tx test** to test **Upload speed**, and click **Start rx test** to test **Download speed**.
5. Fill in the speed test results in the **Upload speed** and **Download speed** input boxes.
6. Check the **Enable Bandwidth Control** checkbox.

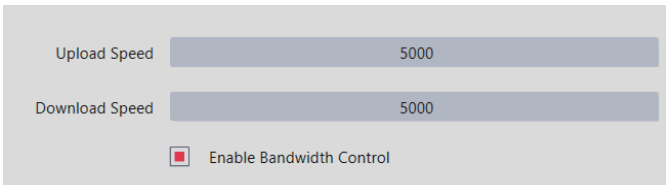


# Customizing Application Priorities

The Priority control panel displays what application is currently using network bandwidth.


1. Test and set the network speed as described previously.
2. Select the **Priority** control panel.

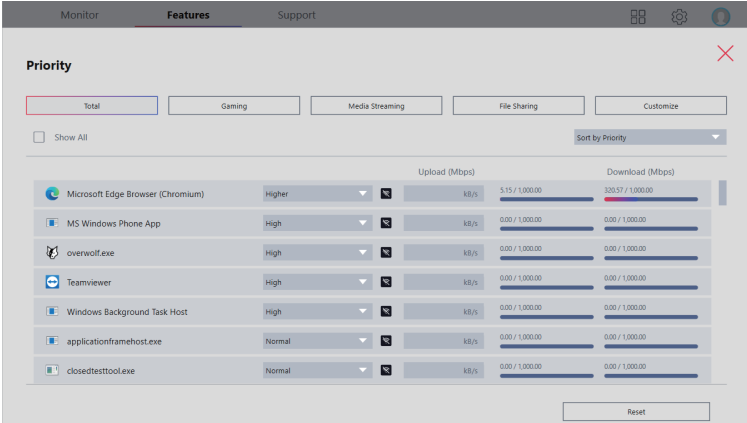


3. Use the category bar to filter the displayed applications categories.



4. Click the drop-down menu next to the application name to select the priority of the application.

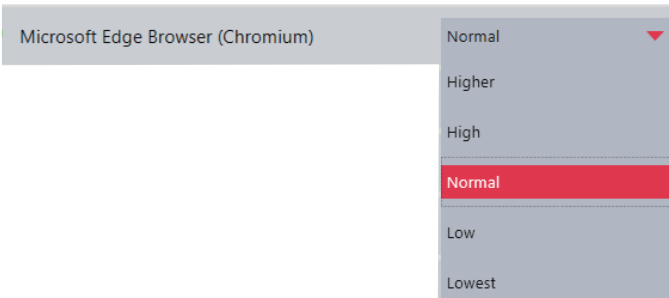

*Note: To stop some applications from using bandwidth, you can click  to block the application.*

# Mystic Light

Mystic Light feature allows you to control LED light effects of MSI & partner products. For some earlier products, you can go to product download page to download the applicable LED control software.

The image shows a screenshot of the Mystic Light software interface. The interface includes a top navigation bar with 'Features', 'Mystic Light', and 'Ambient Link' tabs. Below this, there are three profile buttons labeled 'Profile 1', 'Profile 2', and 'Profile 3'. A central area displays a computer case with various components highlighted. To the right, there is a control panel for 'LED Style' with a 'Rainbow' preset, a color wheel, and sliders for 'LIGHT SPEED' and 'BRIGHTNESS'. An 'Apply' button is located at the bottom right of the control panel. Red lines connect various parts of the interface to descriptive text labels.

When you click the Apply button, the LED effect settings can be saved to Profile1~3, and you can switch to different settings by clicking Profile1~3.

Game Sync

Third party control setting

Mystic Light main switch

Click to access Ambient Link

Device synchronization

All Synchronization

Profile 1 Profile 2 Profile 3

Mystic Light Ambient Link Game Sync

LED SELECT ALL Dynamic Dashboard Phantom Of Lightning

LED Style Rainbow R 255 G 0 B 0 LIGHT SPEED BRIGHTNESS

Apply

LED item drop-down menu

DYNAMIC DASHBOARD button

Light effect pattern

Light effect, LED color, speed and brightness lever selectors

Apply button

- **Device synchronization** - In this section, you may synchronize LED light effect to your devices.



- **All synchronization** - Click the big chain icon on the left side of all the devices.



Click the big chain icon

- **To synchronize devices** - Click the chain icon above device icon. When the chain icon turns red, it indicates that the device has synchronized LED effect settings with other devices.



**Chain icon** - indicates the device has been synchronized.



**Broken-chain icon** - indicates the device is not synchronized.

- **Individual** - You can also change settings for one single device. To do that, click the chain icon and the color will turn gray as below.




**Device icon** - click it to change LED effect setting for this device. When the icon turns red, it indicates the device you're currently setting.

- **LED item drop-down menu** - Click to select the LED item on the device. The LED effects vary depending on your LED item selection.

LED	SELECT ALL
	IO Cover
	PCH
	JRGB1
	JRAINBOW1
	JRAINBOW2
	JCORSAIR-LED RGB STRIP
	JCORSAIR-HD RGB FAN
	JCORSAIR-SP RGB FAN
	JCORSAIR-LL RGB FAN
	SELECT ALL

- **Light effect drop-down menu**

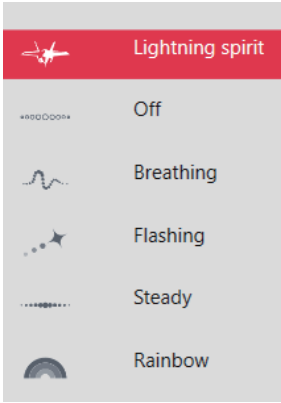

Click it to select LED light effects. Please note that the options about light effects would be more or less depending on the devices you have. It will only list the light effects which are available for all applicable devices.

- **LED Color selector** - In this section, you may select the color for one single light effect (Stack, Breathing, Flashing etc.).

The outer arc is a custom color picker and the inner arc is the default color picker that cannot be changed. You can simply change the LED color by clicking on the color on the outer or inner arc. To store a custom color, click one of the color slots on the outer arc to store the color of your choice.




You can specify a color by editing an RGB (red, green, blue) color value between 0 and 255.

Drag the brightness slider up to increase brightness or drag down to decrease brightness.

Use the Hue Circle to choose the color you want. The color you choose will be displayed on the center circle.

- **Effect speed and brightness level**

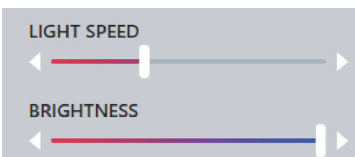

Drag the sliders to adjust the LED light effect switching speed and light brightness.

*Please note that these functions will only be available if your device supports it.*



## Ambient Link

With the Ambient Link feature, it will provide visual color feedback on Philips Hue and Nanoleaf depending on what is happening in games. To use Ambient Link, you need to follow the instructions below to complete the link setup.

### Supported Motherboards

- MEG Z690 GODLIKE
- MEG Z690 ACE
- MEG Z690 UNIFY
- MEG Z690 UNIFY-X
- MEG Z690I UNIFY
- MPG Z690 CARBON WIFI
- MPG Z690 CARBON EK X
- MPG Z690 FORCE WIFI
- MPG Z690 EDGE WIFI DDR4
- MPG Z690 EDGE TI WIFI DDR4
- MPG Z690 EDGE WIFI
- MPG Z690 EDGE TI WIFI
- MAG Z690 TOMAHAWK WIFI DDR4
- MAG Z690 TORPEDO
- MAG Z690 TORPEDO EK X
- MAG Z690 TOMAHAWK WIFI
- PRO Z690-A WIFI DDR4
- PRO Z690-A WIFI
- PRO Z690-A DDR4
- PRO Z690-A
- MAG H670 TOMHAWK WIFI DDR4
- Z690-S01
- PRO Z690-P DDR4
- MAG Z690M MORTAR WIFI
- PRO Z690-P WIFI
- PRO H670-A WIFI DDR4
- PRO B660M-A CEC WIFI DDR4
- PRO B660M-A CEC WIFI
- MPG B660I EDGE WIFI
- MAG B660 TOMAHAWK WIFI DDR4
- MAG B660 TOMAHAWK WIFI
- MAG B660 TOMAHAWK EVA e-PROJECT
- MAG B660M MORTAR DDR4
- MAG B660M MORTAR WIFI DDR4
- MAG B660M MORTAR
- MAG B660M MORTAR WIFI
- MAG B660M BAZOOKA DDR4
- MAG B660M BAZOOKA
- PRO B660M-A WIFI DDR4
- PRO B660M-A WIFI
- PRO B660M-A DDR4
- PRO B660M-A WIFI DDR4
- PRO B660M-A
- PRO B660M-G DDR4
- PRO B660M-B DDR4
- B660M PLUS DDR4
- PRO B660M-G
- PRO B660M-B
- B660M PLUS
- PRO H610M-G DDR4
- PRO Z690-P WIFI
- PRO H670-A WIFI DDR4
- PRO H610M-G
- B660M PLUS
- PRO B660-A DDR4
- PRO B660-A
- PRO H610M 12VO

- MEG Z590 GODLIKE
- MEG Z590 ACE
- MEG Z590 ACE GOLD EDITION
- MEG Z590I UNIFY
- MPG Z590 GAMING CARBON WIFI
- MPG Z590 CARBON EK X
- MPG Z590 GAMING EDGE WIFI
- MPG Z590 GAMING EDGE WIFI SP
- MAG Z590 TOMAHAWK WIFI
- MPG Z590M GAMING EDGE WIFI
- MEG Z590 UNIFY
- MEG Z590 UNIFY-X
- MAG B560 TOMAHAWK WIFI
- MAG B560M MORTAR WIFI
- MPG B560I GAMING EDGE WIFI
- MEG X570S ACE MAX
- MPG X570S CARBON MAX WIFI
- MPG X570S CARBON EK X
- MPG X570S EDGE MAX WIFI
- MPG X570S GAMING PLUS MAX
- MAG X570S TOMAHAWK MAX WIFI
- MPG X570 GAMING PRO CARBON WIFI
- MEG X570 GODLIKE
- MEG X570 ACE
- MEG X570 UNIFY
- PRESTIGE X570 CREATION
- MPG X570 GAMING EDGE WIFI
- MAG X570 TOMAHAWK WIFI
- MAG A520M VECTOR WIFI
- MAG A520M BAZOOKA WIFI
- MPG B550 GAMING CARBON WIFI
- MPG B550 GAMING EDGE WIFI
- MPG B550I GAMING EDGE WIFI
- MPG B550I GAMING EDGE MAX WIFI
- MAG B550M MORTAR WIFI
- MEG B550 UNIFY
- MEG B550 UNIFY-X
- MAG B550M VECTOR WIFI
- MAG B550 TOMAHAWK MAX WIFI
- MAG B550M MORTAR MAX WIFI
- Creator TRX40
- MEG Z490 GODLIKE
- MEG Z490 ACE
- MEG Z490 UNIFY
- MPG Z490 GAMING CARBON WIFI
- MPG Z490M GAMING EDGE WIFI
- MEG Z490I UNIFY
- MPG Z490 GAMING EDGE WIFI
- MAG B460M MORTAR WIFI
- MPG B460I GAMING EDGE WIFI
- B450I GAMING PLUS AC
- X470 GAMING M7 AC
- X470 GAMING PRO CARBON AC
- B450 GAMING PRO CARBON AC
- B450 GAMING PRO CARBON MAX WIF
- B450 GAMING PRO CARBON
- B450M BAZOOKA MAX WIFI
- MEG Z390 GODLIKE
- MEG Z390 ACE
- MPG Z390 GAMING PRO CARBON AC
- MPG Z390 GAMING EDGE AC
- MAG Z390 TOMAHAWK
- Z390I CORSAIR
- MPG Z390M GAMING EDGE AC
- MPG Z390 GAMING PLUS
- MAG Z390M MORTAR

- MPG Z390I GAMING EDGE AC
- B360I GAMING PRO AC
- Creator X299
- MPG X299M GAMING EDGE
- MEG X299 CREATION
- X299 GAMING M7 ACK
- 299 XPOWER GAMING AC
- 299 GODLIKE GAMING
- 299 GODLIKE GAMING
- 299 GAMING PRO CARBON AC
- 299 GAMING PRO CARBON
- 299 TOMAHAWK AC
- 299 TOMAHAWK ARCTIC AC
- 299M GAMING PRO CARBON AC

### **Network Requirements**

- The router is broadcasting a 2.4GHz network.
- The Wi-Fi network is using WPA/WPA2 security.
- The router is configured for any of the Wi-Fi modes a/b/g/n.

### **Philips Hue Setup (optional)**

1. Plug in your Hue bridge and it will automatically power up.
2. Connect it to the router LAN port.
3. Wait for the two lights to come on and you are good to go. (Left is power light and center is local network)



### **Nanoleaf Setup (optional)**

- The router is compatible with Bonjour (mDNS).


## Ambient Link Control Panel

**Game Mode** and **Ambient Mode** can only be activated one at a time in the Ambient Link control panel.


- **Game Mode tab**

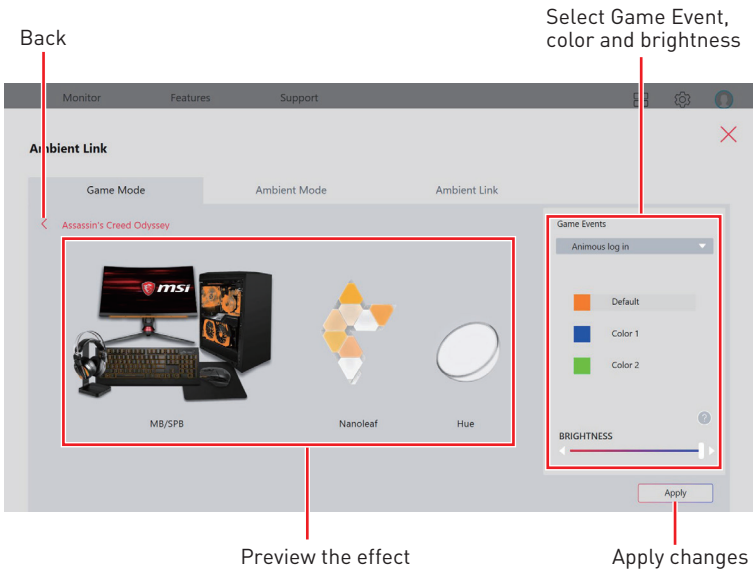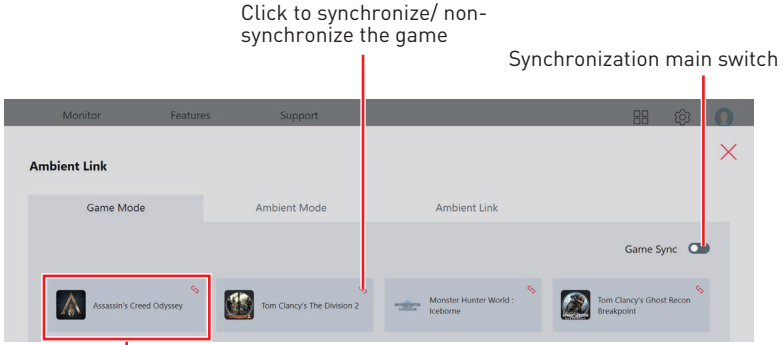

• **Ambient Mode tab**

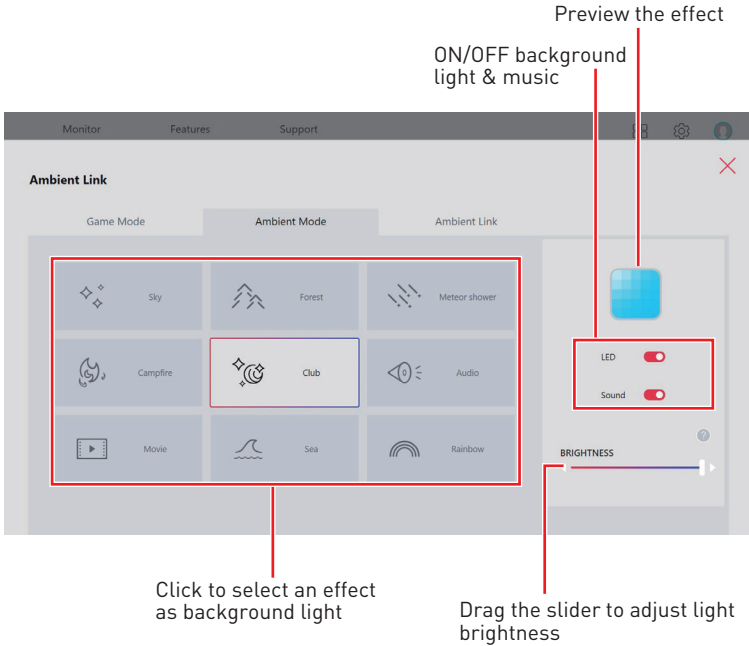

• **Ambient Link tab**

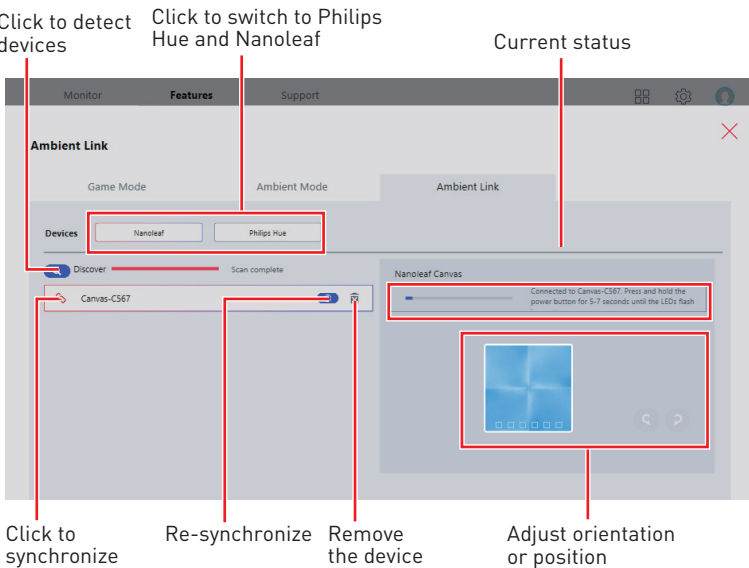

## DYNAMIC DASHBOARD Control Panel (optional)

Click DYNAMIC DASHBOARD button to open the DYNAMIC DASHBOARD control panel.

Enabled DYNAMIC DASHBOARD

The screenshot shows the Dynamic Dashboard Control Panel with the following annotations:


- Select all items:** Points to the "Select All" checkbox.
- Items selection panel:** Points to the grid of hardware items (CPU, PUMP, SYS1, SYS2, SYS3, SYS4, SYS5, SYS6, SYS7, SYS8, CPU1, CPU2, SYS, MOS, PCH, PCIE1, PCIE4, M.2, Sensors1, Sensors2, CPU, DDR).
- Preview:** Points to the preview image of the motherboard.
- Enabled:** Points to the "Enabled" status indicator.
- Disabled:** Points to the "Disabled" status indicator.
- Hardware Status:** Points to the "Hardware Status" button.
- Game Boost:** Points to the "Game Boost" button.
- USER Profile:** Points to the "USER Profile" button.
- Click to restore MSI default animation:** Points to the "Restore Default" button.
- Upload animation:** Points to the "Upload Animation" button.
- Display custom animation:** Points to the "Custom Animation" button.
- Display game boost status:** Points to the "Game Boost" button.
- Display hardware status:** Points to the "Hardware Status" button.
- Click to apply changes:** Points to the "Apply" button.

Disabled DYNAMIC DASHBOARD

### Selecting Display Items

1. Select **Enabled** in the upper left corner of the control panel.
2. Select items you want to show on the DYNAMIC DASHBOARD.
3. Click **Apply** to apply your changes.

## Uploading Custom Animation

Click the Upload  icon and select a .gif animation file.

### .GIF File Restriction

Dimensions: 256 x 64

DPI: 72

Size: max 128KB

256px

64px



## Restoring MSI Default Animation

Click the dragon  icon to restore the MSI default animation.

## Fan Speed/ Temperature/ Voltage State

### Available Items:

Fan Speed : CPU fan / Water pump fan / System fan speed


Temperature : CPU / System / MOS / PCH / PCIe / M.2 / Sensors temperature

Voltage : CPU / Memory voltage



## Hardware Information

### CPU Information



### Memory Information



### Graphics Card Information



## GAME BOOST State



When you use the GAME BOOST Knob, DYNAMIC DASHBOARD will display the CPU frequency information.

Stage 0



Stage 1~11



### Important

Game Boost is only available on K CPUs and speeds may vary based on CPU model.

## DYNAMIC DASHBOARD II Control Panel (optional)

Click DYNAMIC DASHBOARD button to open the DYNAMIC DASHBOARD control panel.

Enable / Disable DYNAMIC DASHBOARD II

Select all item      Items selection panel      Preview

The screenshot shows the Dynamic Dashboard II control panel. At the top right, there is a toggle switch labeled 'Dynamic Dashboard II' which is currently turned off. Below this, the panel is divided into several sections. On the left, there are categories like 'Fan Speed', 'Temperature', and 'Voltage', each with a 'Select All' checkbox. In the center, there is a grid of items to be selected, including CPU, PUMP, MOS, Water Flow, SYS1, SYS2, SYS3, SYS4, SYS5, SYS6, SYS7, SYS8, GPU, CPU Core, CPU Socket, SYS, MOS, PCH, PCIE1, PCIE2, M.2, Sensors1, Sensors2, GPU, and DDR. Below this grid is a 'Hardware Status' section with a 'Default' button and a 'Profile' section with various animation thumbnails. To the right of the profile section is an 'Upload Your Own GIF' section with a social media share icon and a grid of custom animation thumbnails. At the bottom right, there is an 'Apply' button. Red lines and boxes highlight these various elements, with labels pointing to them.

Hardware Status

Default

Profile

Typing Your Words

Upload Your Own GIF

Apply

Display text

Display specific animation

Click to restore MSI default animation

Display hardware status

Upload animation

Display custom animation


Click to apply changes

### Selecting Display Items

1. Click the switch in the upper right corner of the control panel to enable it.
2. Select items you want to show on the DYNAMIC DASHBOARD II.
3. Click **Apply** to apply your changes.



## Uploading Custom Animation

Click the Upload  icon and select a .gif animation file.

### .GIF File Restriction

Dimensions: 176 x 48

DPI: 72~93

Size: max 1024KB



## Fan Speed/ Temperature/ Voltage State

### Available Items:

Fan Speed : CPU fan / Water pump fan / System fan speed

Temperature : CPU / System / MOS / PCH / PCIe / M.2 / Sensors temperature

Voltage : CPU / Memory voltage

### Fan Speed



### Temperature



### Voltage



## Hardware Information

### CPU Information



### Memory Information



### Graphics Card Information



# M-Vision Dashboard (optional)


After connecting to M-Vision Dashboard, configure and customize the M-Vision Dashboard Advanced mode and even upload a .gif .bmp .png .jpg or .mp4 animation file.

Go to **Features > M-VISION DASHBOARD**.


## Setting APP Shortcut

You can add up to 3 application/ website shortcuts for your M-Vision Dashboard.

1. Click the **Set APP Shortcut**.

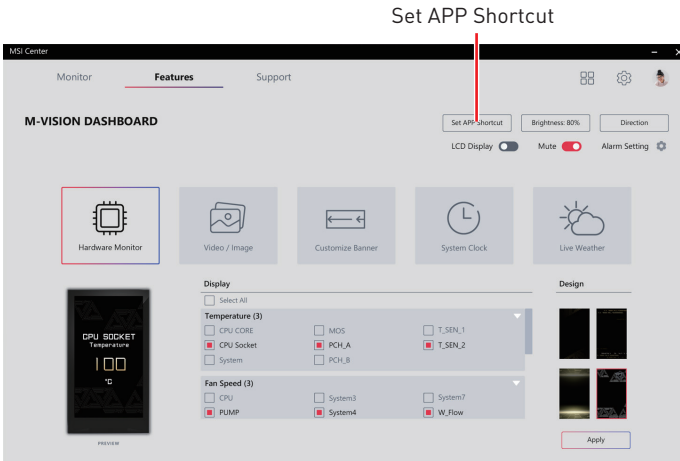

2. When prompted, click **+** Plus icon and select the application or the website you want to create a shortcut for.

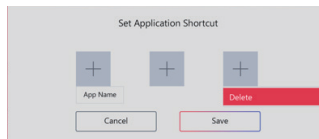


3. Click **Save** to apply the setting.

## Setting Screen and Sound


**Brightness** - set the screen brightness for the M-Vision Dashboard.

**Orientation** - select the orientation for the M-Vision Dashboard.

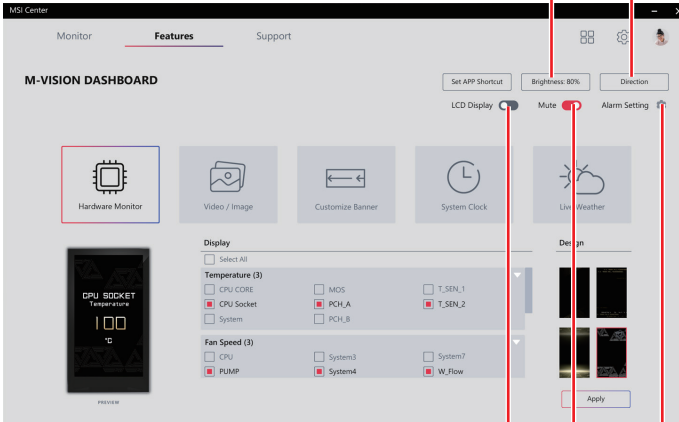

**LCD Display** - Turn on/ off the LCD display of the M-Vision Dashboard.


**Mute** - it allows you to mute the speakers of the M-Vision Dashboard

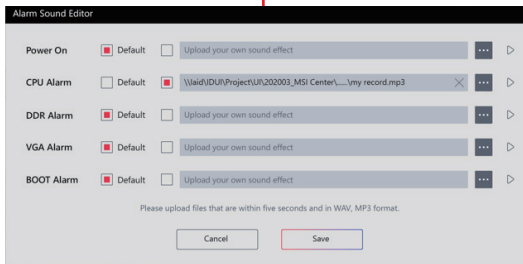

**Alarm Setting** - select a customized audio file and less than 5 seconds in WAV or MP3 format for the alarm and then click **Save** to apply the setting.

## Customizing Screen

You can select one of the following items to display system information, video, image, time or weather on the screen.

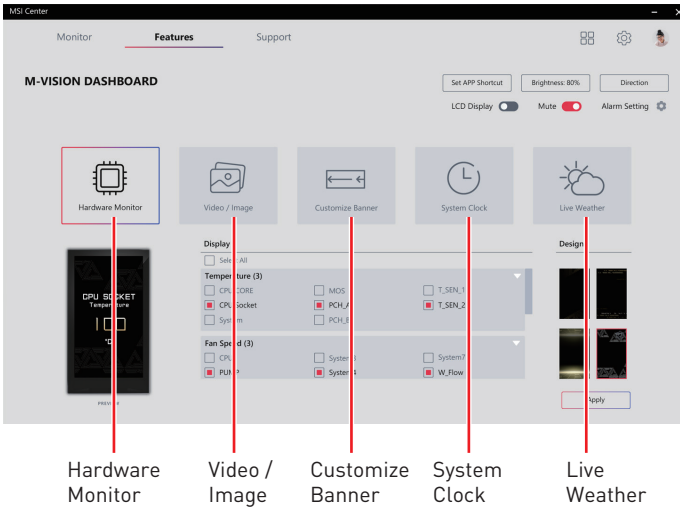

**Hardware Monitor** - select the display items of the hardware monitor function. The pieces of information of selected items will be shown on the M-Vision Dashboard sequentially.

**Video / Image** - select a preset or a customized video or image file, and less than 5 minutes in BMP, JPG, PNG, GIF, MP4, 800x480 pixel format.

**Customize Banner** - enter marquee text and select preset or uploaded backgrounds. Background file format: BMP, JPG, PNG, GIF, MP4, 800x480 pixel, less than 5 minutes.

**System Clock** - select the display style of the system clock.

**Live Weather** - enable or disable to show the live weather of the designated city.




### **Important**

*Live Weather function need an Internet connection and allow location service.*

# Gaming Gear

This panel allows you to control MSI's gaming gear and supported third-party devices.

Go to **Features > Gaming Gear**.

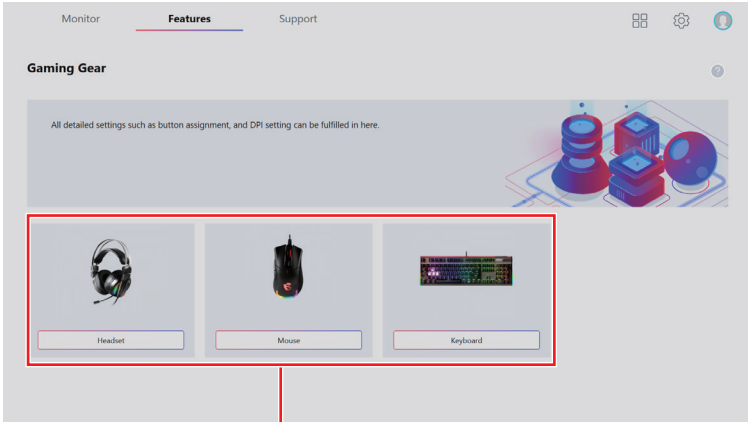

Supported devices will be displayed here. Click buttons to enter the control panel of the device.

# Gaming Dial (optional)

Certain series of desktops have the Gaming Dial for controlling system settings and monitoring the system status.



### Rotate:

- selecting function menus and items
- adjusting function values
- entering into from function menus

### Short Press (OK):

- entering submenus
- confirming a selection or setting


### Long Press (Exit):

- return upper menu
- exit monitor function

## Setting Gaming Dial

Go to Features > Gaming Gear.


Select Gaming Dial

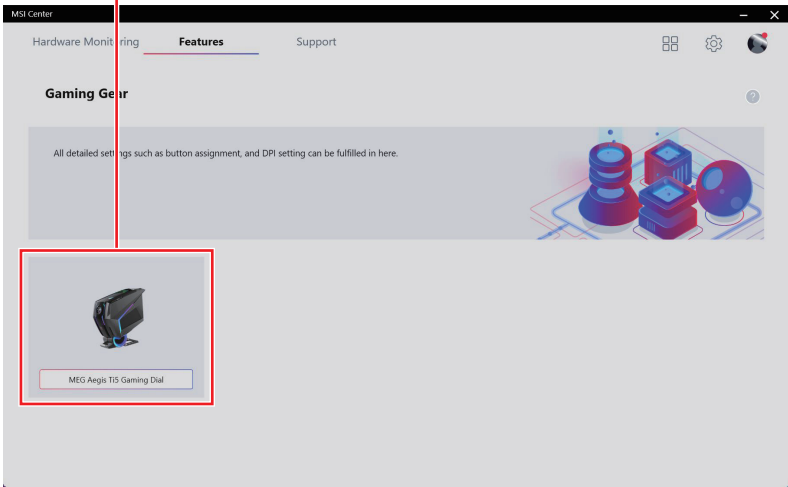

## Gaming Dial Control Panel

Choose 5 topics to show on the Gaming Dial screen

Allow Standby animation display in sleep mode

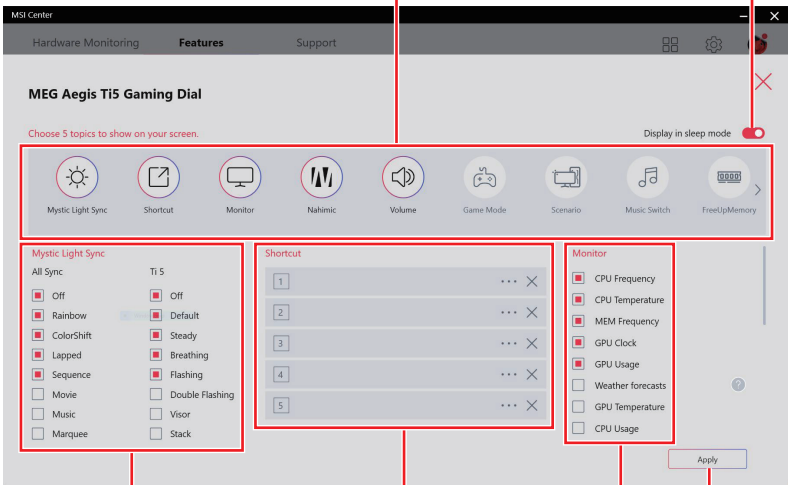












Mystic Light items selection panel

Shortcut items selection panel

Click to apply changes

Monitor items selection panel

## Topics


Icon	Item	Description
	<b>Mystic Light Sync</b>	Switch Mystic Light effect by Gaming Dial.
	<b>Shortcut</b>	Fast execution customize program by Gaming Dial.
	<b>Monitor</b>	Show Display Hardware information on Gaming Dial Screen. <ul style="list-style-type: none"> <li>• <i>Weather forecasts function need an internet connection and allow location service.</i></li> <li>• <i>When execution monitor function, standby animation will not display.</i></li> </ul>
	<b>Nahimic</b>	Switch Nahimic's profiles by Gaming Dial.
	<b>Volume</b>	Easy to adjust OS volume by Gaming Dial. <ul style="list-style-type: none"> <li>• <i>Volume adjustment is the default idle function.</i></li> </ul>
	<b>Game Mode</b>	Switch Game mode on/ off by Gaming Dial.
	<b>Scenario</b>	Switch User Scenario by Gaming Dial.
	<b>Music Switch</b>	Adjust Media player function (Play/ Pause/ Next track/ Previous track) by Gaming Dial.
	<b>Free Up Memory</b>	Execute Free Up Memory function by Gaming Dial.
	<b>Countdown Timer</b>	Set the countdown timer function from 1 to 99 minutes by Gaming Dial.
	<b>OSD Control</b>	Enter On-Screen Display (OSD) function menus by Gaming Dial. <ul style="list-style-type: none"> <li>• <i>For selected MSI Gaming monitors, Gaming Dial allows users to directly control the monitor through the touch panel's OSD Control.</i></li> <li>• <i>To enable OSD Control, you need a USB connection from the desktop's USB port to the monitor's USB port with a compatible USB cable.</i></li> </ul>




## Setting Shortcut


You can add up to 5 application/ website shortcuts to the Gaming Dial.

Various shortcut formats are supported, including .exe files, web links, Steam games, Uplay games, and Epic Games.

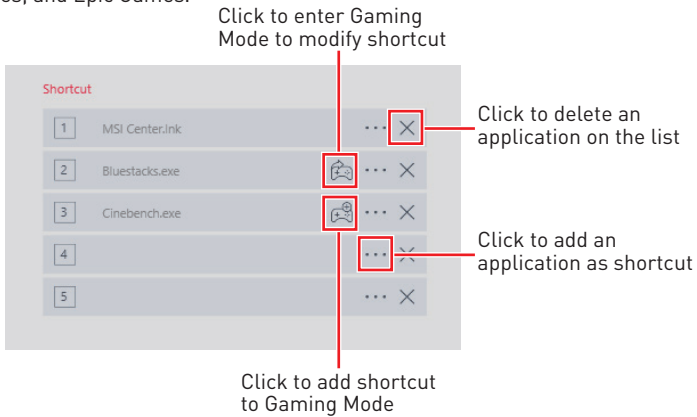

## Uploading Your Own Animation

Click the Upload  icon and select .jpg/ .gif animation files.

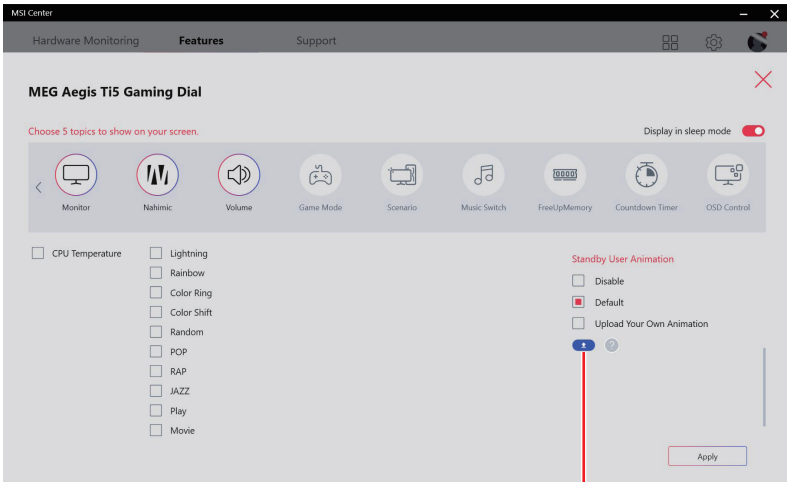

### .JPG/ .GIF File Restriction


Dimensions: 240 x 240

Animation speed: 24 FPS



Size: max 3.0 MB

# HMI 2.0 (optional)

Activate MSI Center and go to **Features > Gaming Gear**.

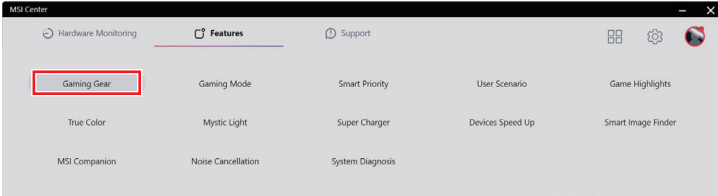



Click **HMI 2.0** to call forth the function menu.

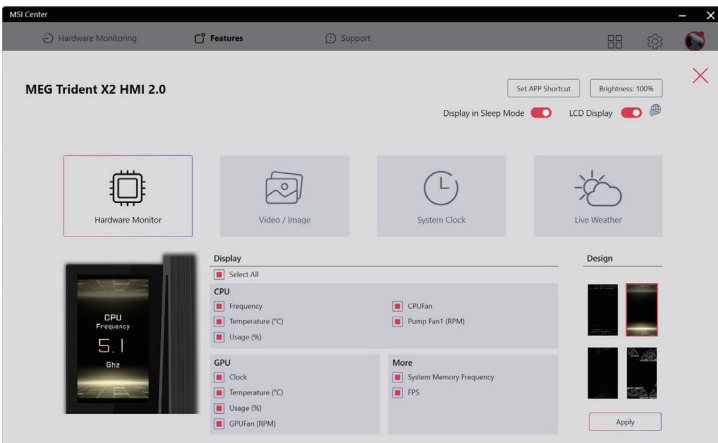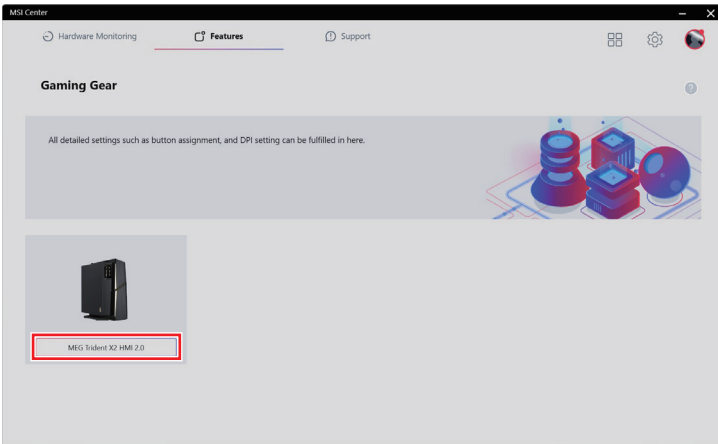



# Firmware Update

If new firmware is available when activating HMI 2.0, users will be prompted to update to the latest version.

Click **Install**, select a language, and click **Update** to update the firmware.

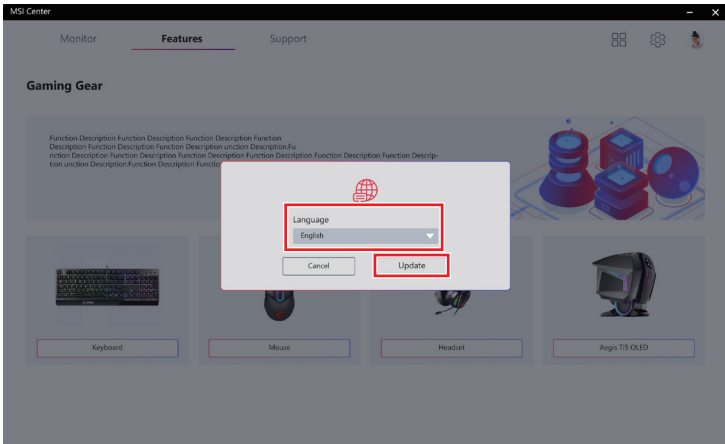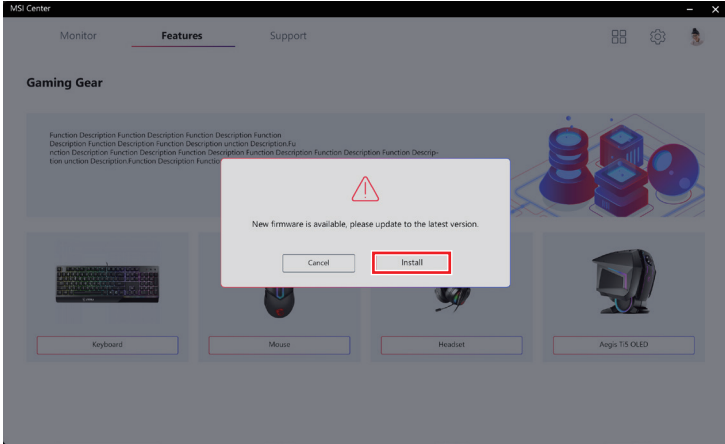

Follow the on-screen instructions to complete the firmware update.

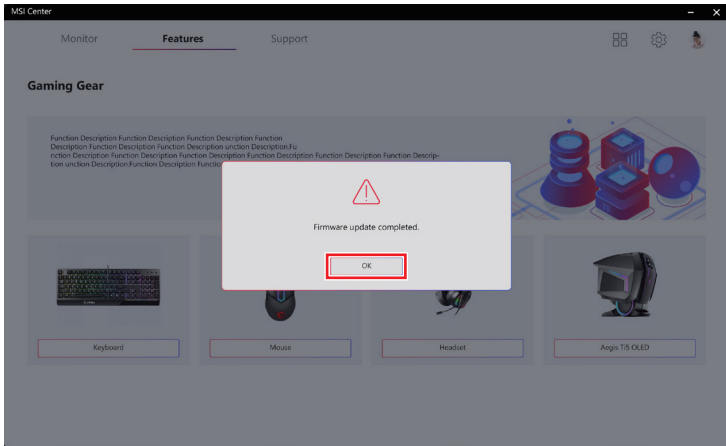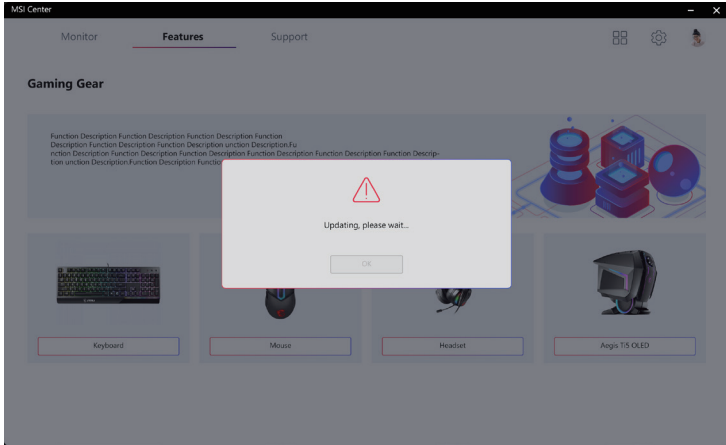

# Hardware Monitor

Go to **Features > Gaming Gear > HMI 2.0**, and click **Hardware Monitor**.

The screenshot shows the MSI Center interface for the MEG Trident 12 HMI 2.0. The top navigation bar includes Hardware, Monitoring, Features, and Support. The main content area is titled 'MEG Trident 12 HMI 2.0' and contains several sections: 'Hardware Monitor' (with a CPU icon), 'Video / Image', 'System Clock', and 'Live Weather'. Below these are three main panels: 'Display', 'Design', and 'Apply'. The 'Display' panel has checkboxes for 'Select All', 'CPU' (Frequency, Temperature, Usage), 'GPU' (Clock, Temperature, Usage, GPU Fan), 'CPU Fan' (RPM), 'PUMP Fan 1 (RPM)', and 'More' (System Memory Frequency, FPS). The 'Design' panel shows four design thumbnails and an 'Apply' button. A 'Language' dropdown menu is shown at the top right, and a 'Brightness: 100%' slider is visible. A 'Display in Sleep Mode' toggle is also present.

Click **Hardware Monitor**.

Click ON  / OFF  to put the touch panel in/out of Sleep Mode.

Click to select the touch panel language.

Click to adjust the touch panel brightness.

Click to turn ON  / OFF  the touch panel.

Preview the selected design.

Select the hardware information to display. If no selection or change has been made, **Apply** will be disabled.


Select and click **Apply** to apply the selected design and enter **Hardware Monitor** standby mode.

Click to customize the frame color, font style and font color.

## Video/Image

Go to **Features > Gaming Gear > HMI 2.0**, and click **Video/Image**.

Click **Video/Image**.

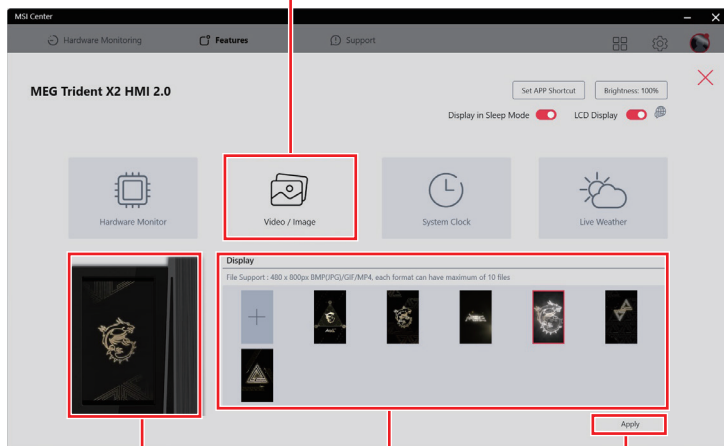

Preview the selected style.

Select from the preset styles or upload your customized video/image files as the display style of the touch panel. Uploaded files should be in BMP/JPG/PNG/GIF/MP4, 800x480 pixel format.

Click to apply the selected style and enter **Video/Image** standby mode.

# System Clock

Go to **Features > Gaming Gear > HMI 2.0**, and click **System Clock**.

Click **System Clock**.

The screenshot shows the MSI Center interface for the MEG Trident X2 HMI 2.0. The 'Features' tab is active, displaying four main feature tiles: Hardware Monitor, Video / Image, System Clock, and Live Weather. The 'System Clock' tile is highlighted with a red box. Below it, a 'Choose Clock Style' section is also highlighted with a red box, showing a preview of a selected clock style on the left and a grid of ten different clock styles on the right. An 'Apply' button is located at the bottom right of the 'Choose Clock Style' section.

Preview the selected style.

Select clock style.

Click to apply the selected style and enter **System Clock** standby mode.

# Live Weather

Go to **Features > Gaming Gear > HMI 2.0**, and click **Live Weather**.



**Important**

*Live Weather needs an Internet connection for location service.*

Click **Live Weather**.

MEG Trident X2 HMI 2.0

Hardware Monitor Video / Image System Clock Live Weather

Live Weather Provide your location to get more accurate information.

Please open location and network to use Live Weather function.

Apply

Preview the selected style.

Select live weather style.


Click to apply the selected style and enter **Live Weather** standby mode.




## Set APP Shortcut

You can add up to 5 application/website shortcuts to the HMI 2.0 touch panel.


Various shortcut formats are supported, including .exe files, web links, Steam games, Uplay games, and Epic Games.

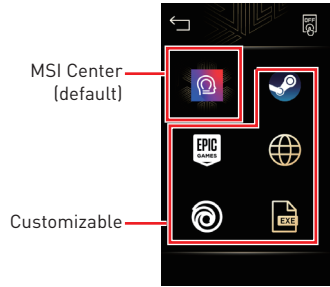

Go to **Features > Gaming Gear > HMI 2.0**, and click **Set APP Shortcut**.

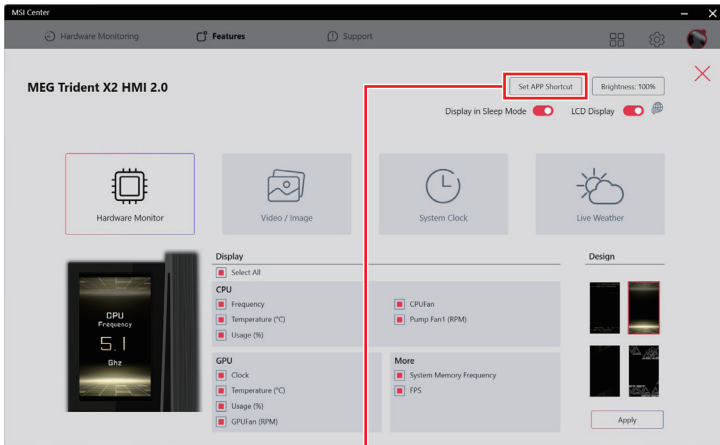

Click to add shortcut to Gaming Mode.

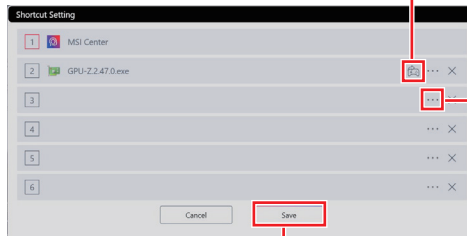

Click to save the shortcuts.

Click to add an application as shortcut.

# MSI Sound Tune (optional)


The AI-powered noise cancellation is trained through a deep neural network (DNN), which is generated with more than 500 million data and simulated the way the human brain works. When a sound is detected, the model automatically recognizes and separates the vocal sound from background noises. Hence, filtering out all the unwanted noise. This feature greatly improves the users' communication experience.

Go to **Features > MSI Sound Tune**.



Enable/ Disable Speaker Noise Cancellation.

Enable/ Disable Microphone Noise Cancellation.

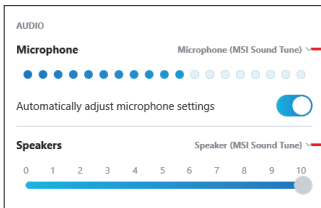


Select **Microphone (MSI Sound Tune)** in the communication software.

Select **Speakers (MSI Sound Tune)** in the communication software.

# Devices Speed Up

Devices Speed Up allows you to improve USB data transfer speed and speed up data storage performance.

Go to **Features > Devices Speed Up**.

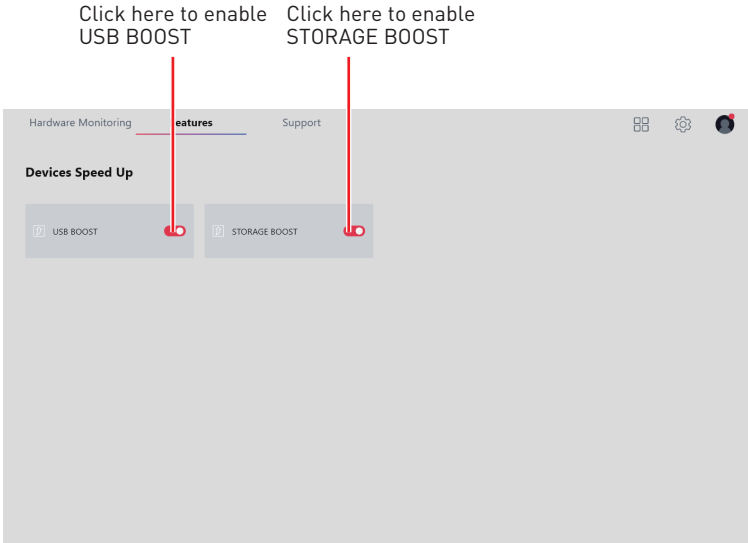

## Devices Speed Up Options

**USB BOOST** - supports faster data transfer rates of the USB storage devices.

**STORAGE BOOST** - supports faster access speed of storage device.

# Super Charger


Super Charger provides charging function for iPad, iPhone and iPod.

iPad has a different power requirement: 1.6A power supply rather than the 0.5A current available with conventional USB interfaces. That is why computer cannot charge your iPad even with power on. The MSI Super Charger is a Windows resident program capable of changing power supply mode of your USB port. Once iPad is connected to your USB port, the Super Charger will send a signal to initiate its charging circuit.


## Enabling Super Charger

Go to **Features > Super Charger**.


Super Charger function will be enabled automatically after installing Super Charger.




If your motherboard has a Super Charger Port (please refer to the motherboard user manual), the following dialog will appear. And **Turn On** the switch.



When you shutdown, hibernate, or put your computer to sleep, Super Charger Port will be still able to provide charging function.

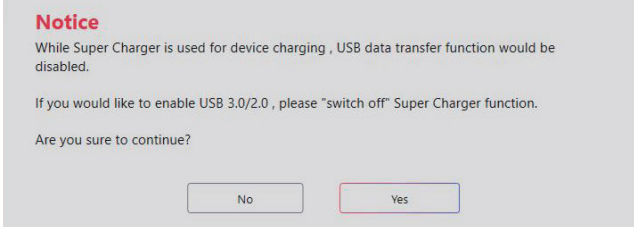

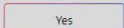When a warning prompt window appears, click **Yes**  to continue.


### **Important**

*When Super Charger is enabled, the Super Charger Port will be changed to Charging mode, therefore, the data syncing will be disabled.*


# Smart Image Finder

With Microsoft Azure technology, Smart Image Finder can automatically add related tags to all the images. You can search for the images by the tags. You can also add or remove tags if you want.


## Using Smart Image Finder

1. Go to **Features** > **Smart Image Finder**.
2. Click the folder  icon to import a folder.


Click here

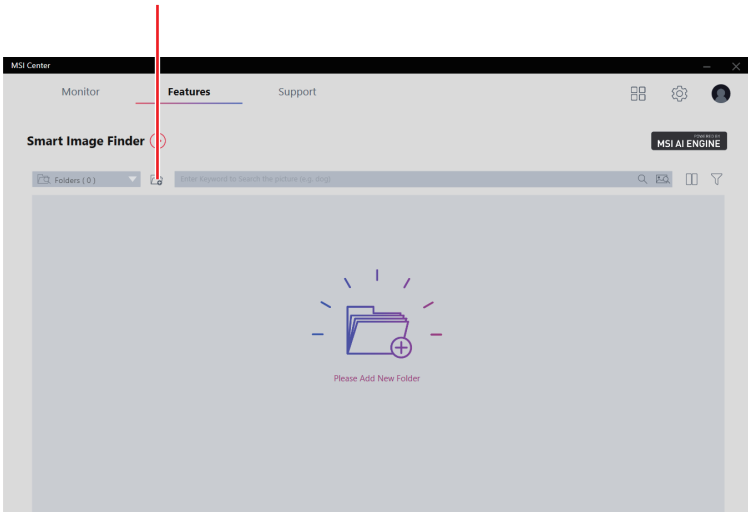


3. Select a folder.

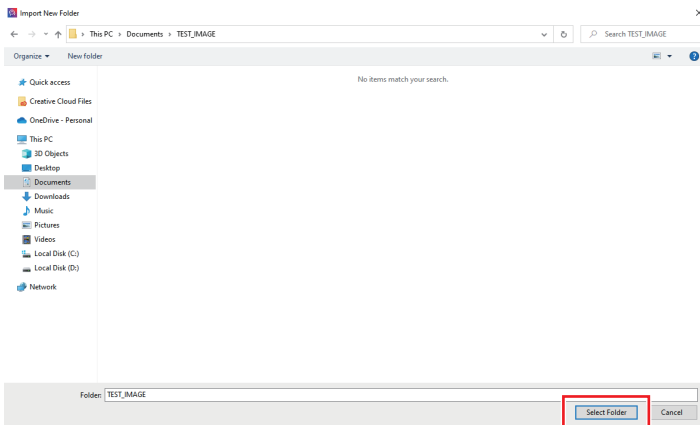

4. Wait for the image analysis.


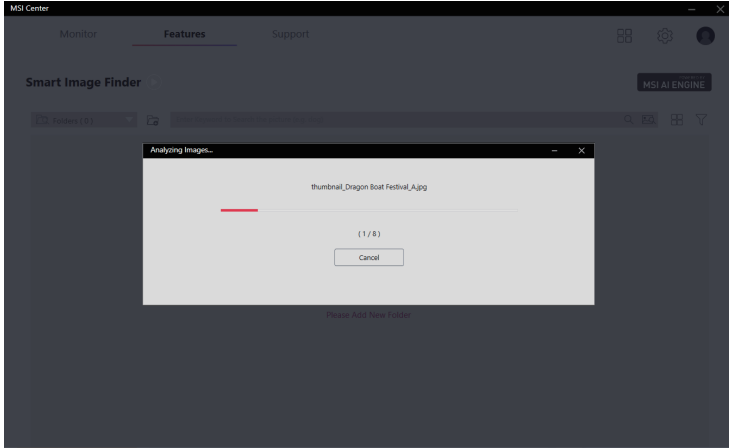


5. After the analysis, the images in the folder will be shown below.

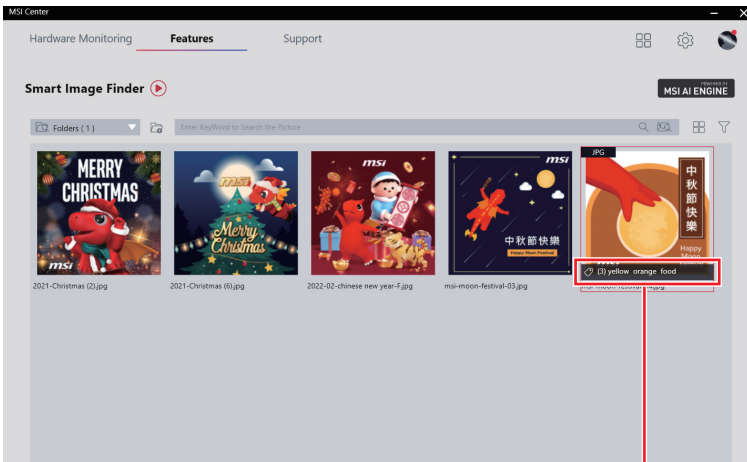

Mouse over the image to see the tags

6. Search for the images by using the search bar.

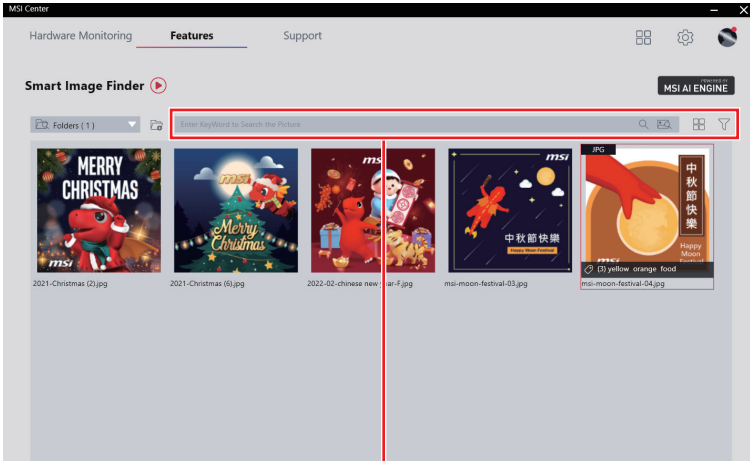

Search by tags

Search by images

Change the layout of images

Advanced search by filters

# Add or Remove Tags on Images

To zoom in/out of the image

Double click on the image you want to edit

To delete the image



Click here to add tags

Right click on the tag to delete it



# System Diagnosis (optional)

System Diagnosis allows you to easily check the usage of your storage devices. You can see how much disk/ memory space is being used and choose to clean up disk and free up memory. You can also see the usage and the health status of SSD.

The health status of SSD

**Healthy** - 51%~100%

**Good** - 21%~50%

**Replacement is recommended** - 11%~20%

**Replacement is strongly recommended** - under 10%

The screenshot shows the MSI Center System Diagnosis window. It is divided into two main sections: System Checker and Storage Status. The System Checker section includes Disk and Memory usage. The Storage Status section shows details for an INTEL SSDPEKKW256G7, including its health status and temperature. Red lines and boxes highlight specific elements, with text labels explaining their function or status.

**Annotations:**


- Click here to clean up Disk**: Points to the "Clean Up Disk" button in the Disk section.
- Disk usage**: Points to the "0 %" usage indicator in the Disk section.
- Click here to free up memory**: Points to the "Free Up Memory" button in the Memory section.
- Memory usage**: Points to the "75 %" usage indicator in the Memory section.
- SSD usage**: Points to the "55% Used" gauge in the Storage Status section.
- Change temperature display between Celsius and Fahrenheit**: Points to the temperature gauge showing "52°C" and the Celsius/Fahrenheit toggle.
- Health status**: Points to the "Healthy (51%~100%)" status indicator in the Storage Status section.

Item	Value
Total	238.47GB
Used	132.89 GB
Free	105.58 GB

# Coreliquid (optional)


Certain series of MSI liquid cooling products have a dynamic LCD display controller. Coreliquid feature allows you to change LCD display items of controller and adjust the fan settings. In addition, you can adjust the radiator RGB fan through Mystic light feature.

Go to **Features > Coreliquid**.

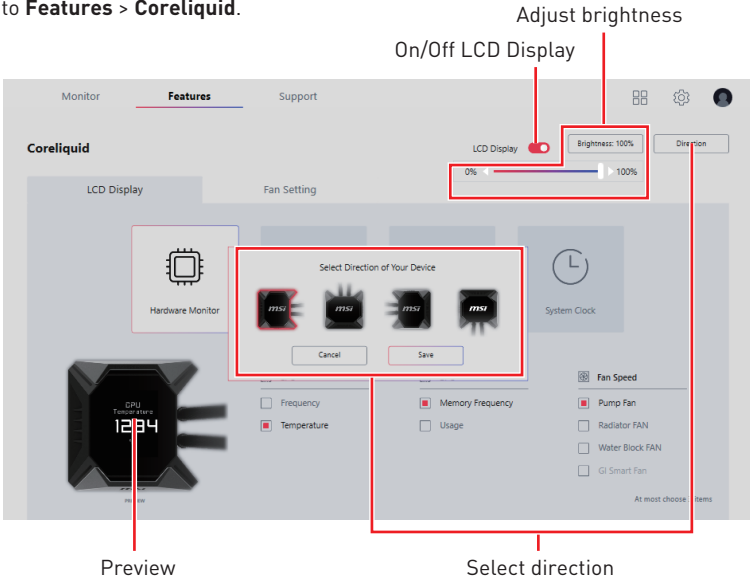

## Displaying hardware monitor

Click **Hardware Monitor**

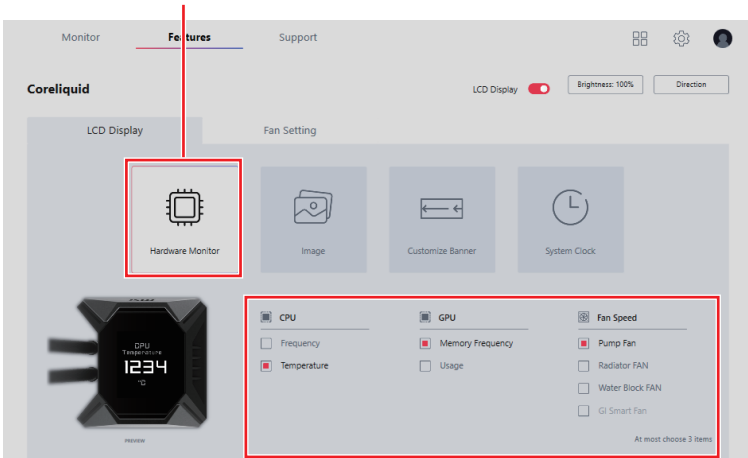

Check the items you'd like to display. Please note that **GI Smart Fan** can be checked when you select **GI Mode** in **Fan Setting** tab.

## Displaying image

Click **Image**

Select default images

Supported image format

If you'd like to apply a customized image, click **+** to add an image. And to remove an image, click the certain image and then click **Delete** below the image.


## Displaying customized banner

Click **Customize Banner**


Select background images

Edit text

## Displaying system clock

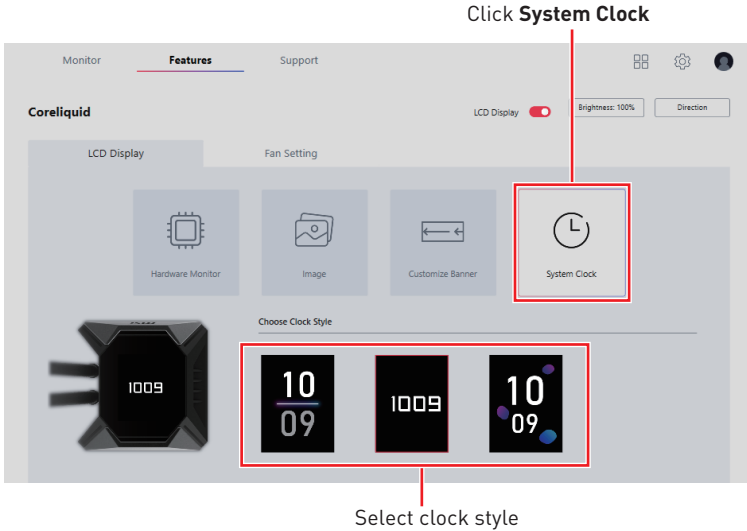


## Selecting liquid cooling system fan mode

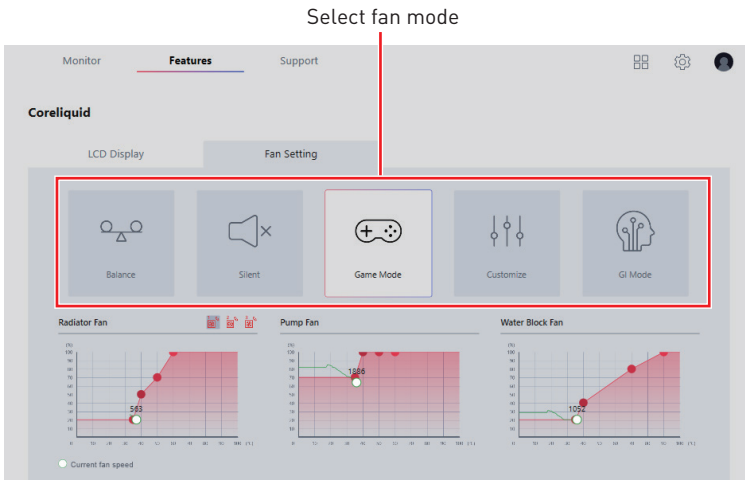

To control liquid cooling system fans, choose one fan mode you'd like to apply.

- **Balance** - Default setting for most users.
- **Silent** - Adjust fan speed for best cooling and silence.
- **Game Mode** - Enhances the heat dissipation performance.
- **Customize** - Customize the performance level and fan speed as desired.
- **GI Mode** - Automatically adjust the fan speed through the AI algorithm.


## Setting customized fan mode

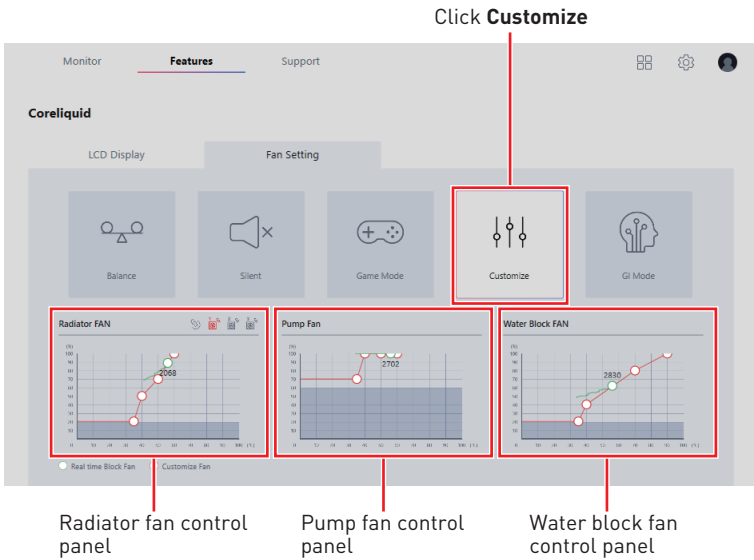

The fan control panel contains 4 dots which allow you to drag and adjust the Smart Speed slopes. The fan speed will change along with the Smart Speed curve.

**Red chain:** Synchronize settings for all radiator fans.

**Gray chain:** Adjust each radiator fan setting independently.

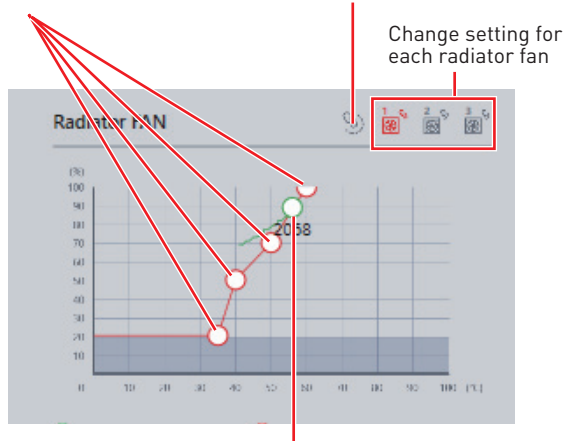


The green dot will display the current fan speed and create strip chart in real time.

# Case (optional)


Certain series of MSI PC cases have an LCD display controller. The Case feature allows you to change LCD display items and adjust fan settings. In addition, you can adjust the ARGB fan through **Mystic Light** feature.

## Setting Screen Saver

1. Go to **Features > Case**.

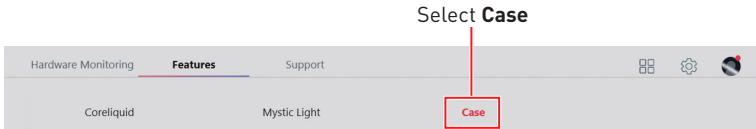

2. Click **Screen Saver** to open Screen Saver Setting window.

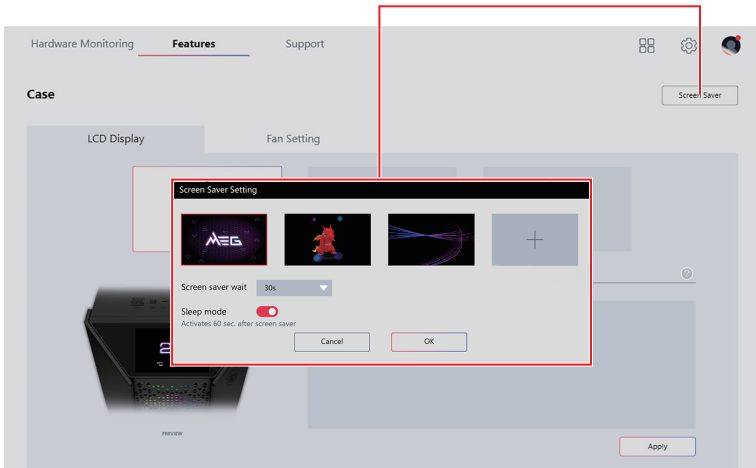

3. Select one of the default animations or upload your own animation in **.MP4 file**.

Select default animation      Upload animation

**.MP4 File restrictions**  
Length: max 5 minutes

ON  / OFF  Sleep mode

Right-click the animation and select **Delete** to remove it.

4. From the drop-down menu, select the amount of idle time before the screen saver is activated, and click the **OK button** to apply your change.

Click to apply


## Displaying Temperature

Go to **Features > Case > LCD Display**, and click **Temperature**.

Preview      Choose the unit to display      Click to apply


## Displaying Clock

Go to **Features > Case > LCD Display**, and click **Clock**.

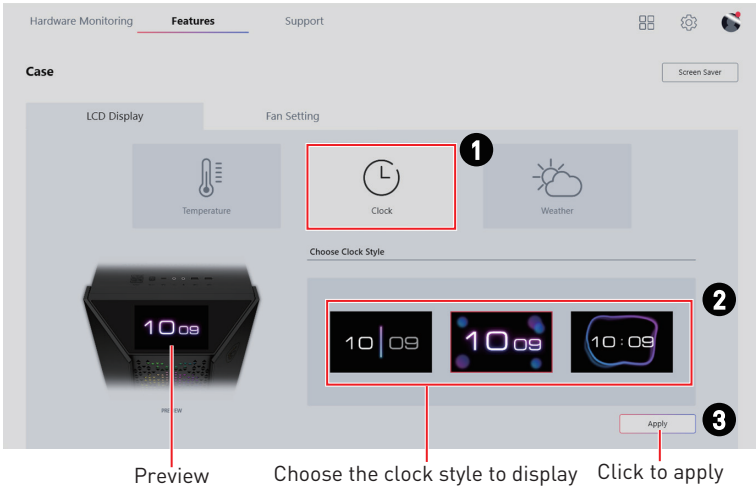

## Displaying Weather

1. Go to **Features > Case > LCD Display**, and click **Weather**.
2. Turn on the switch to provide your location for more accurate information.

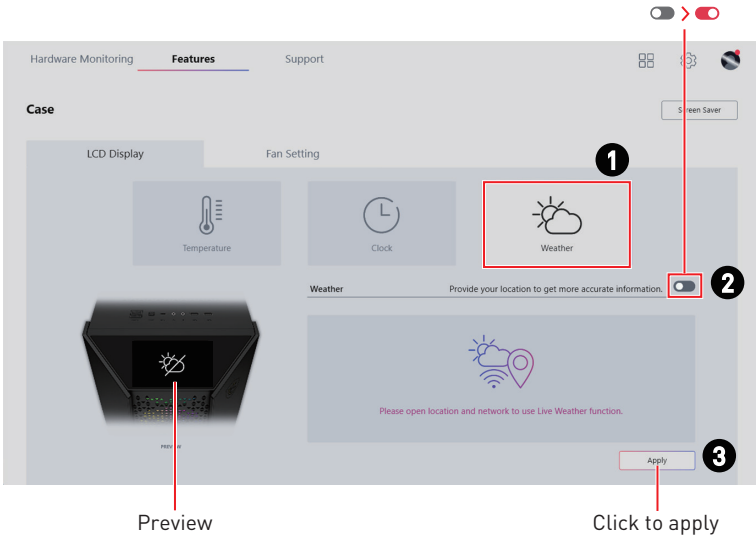

**Important**


The weather forecast function requires an internet connection and location service.



# Power Supply Unit (optional)


After connecting to G.I. Port, you can monitor the power supply unit's status in real-time and control its DC output (single-rail / multi-rail) and fan speed.

Go to **Features > Power Supply Unit**.

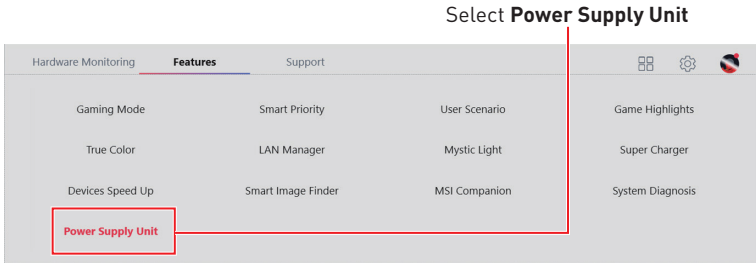

## Power Supply Unit Interface Overview

Total energy consumption for reference. **To stay on track, please keep MSI Center on.**

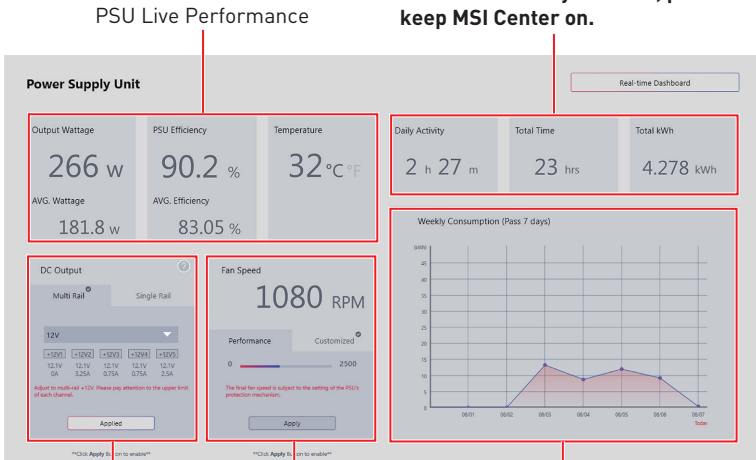

DC output control panel

fan speed control panel


Weekly energy consumption graph.



Power Supply Unit features only support MSI PSU with G.I. Port.

## Switching DC Output (Single-rail / Multi-rail)


1. Go to **Features > Power Supply Unit**.
2. Select **Single-rail** or **Multi-rail** by clicking the tabs.
3. Click the **Apply** button to apply your changes.

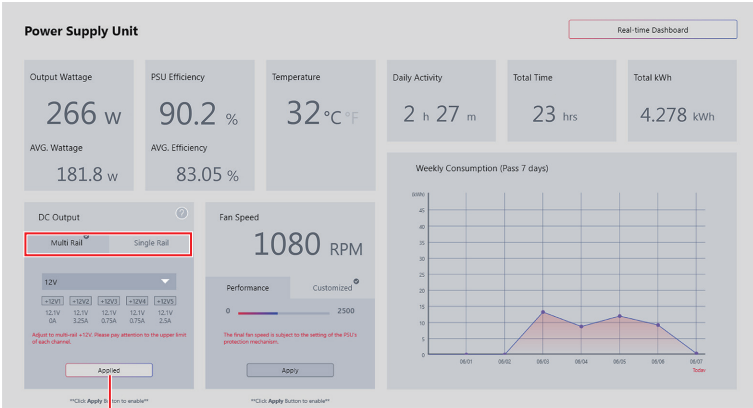

Apply changes


## DC Output Panel Overview

Tabs with a **checkmark icon** indicates your settings have been applied.

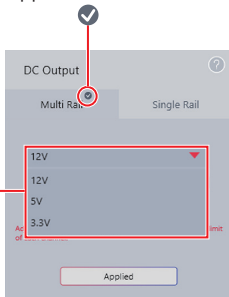

Select the voltage information you want to see from the drop-down menu.

You can view the DC output connection by keeping the cursor on the **question mark button**.

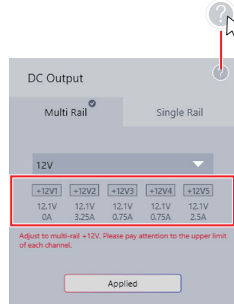

DC Output status Information for each channel

### Important

- Please pay attention to the upper limit of each channel.
- The upper limits may vary from product to product.

# How to Save PSU Performance Data

Go to **Features > Power Supply Unit**, and click **Real-time Dashboard**.

Click to enter Real-time Dashboard

**Power Supply Unit**

Output Wattage: 266 w  
AVG. Wattage: 181.8 w

PSU Efficiency: 90.2 %  
AVG. Efficiency: 83.05 %

Temperature: 32 °C °F

Daily Activity: 2 h 27 m

Total Time: 23 hrs

Total kWh: 4.278 kWh

Weekly Consumption (Pass 7 days)

DC Output: Multi Rail / Single Rail, 12V, 5V, 3.3V

Fan Speed: 1080 RPM

Buttons: Applied, Apply

Footer: \*\*Click Apply Button to enable\*\*



**Real-time Dashboard**

PSU Temperature: 32 °C

Output Voltage - 12V: 12.1V

Output Wattage (CPU): 266 w

PSU Fan Speed: 1080 RPM

Output Voltage - 5V: 5.0V

Output Wattage (GPU): 181.8 w

PSU Efficiency: 90.2 %

Output Voltage - 3.3V: 3.3V

Output Wattage (TTL): 4.278 kWh


Buttons: Start, Screenshot

Click to save as CSV

Click to save as Screenshot

## • Save CSV

- 1 Enter the time you want to record for future performance of your PSU between 1 minute and 23 hr 59 minutes.

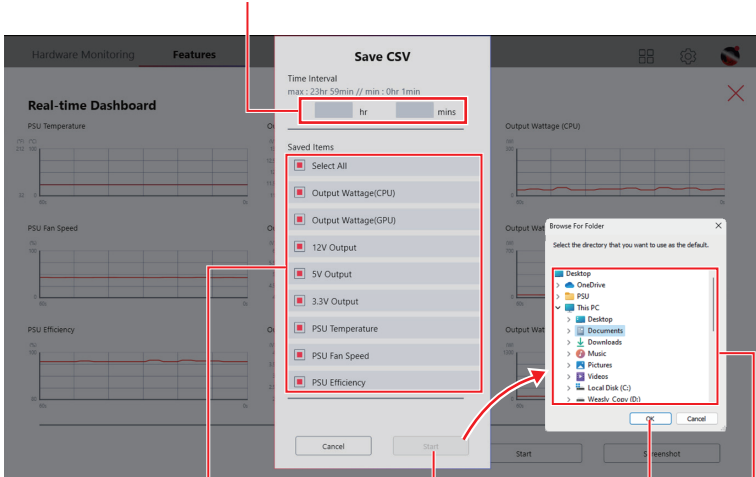


- 2 Select Items to show in CSV file.

- 3 Click **Start**

- 5 Click **OK** to save

- 4 Choose the location

## • Save as Screenshot

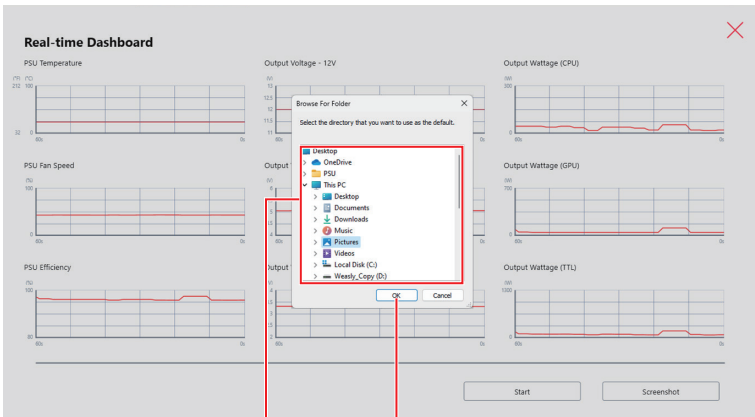


- 2 Click **OK** to save

- 1 Choose the location

# Product Registration


Register your MSI product to get exclusive updates, quicker service and product support.

Click here to enter **My Device**

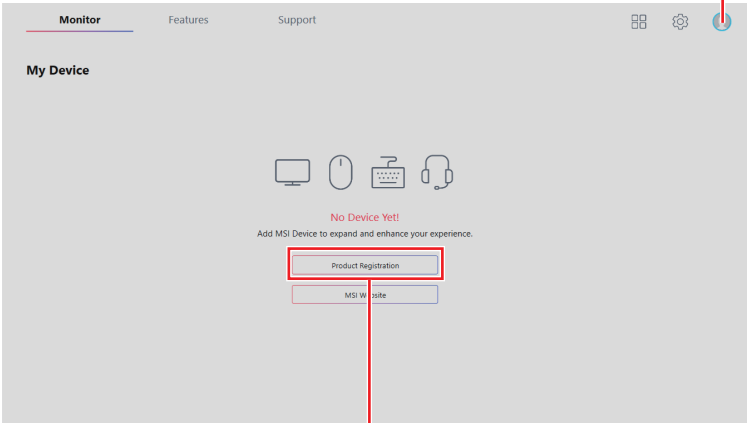


Click here to register your product


Display your devices

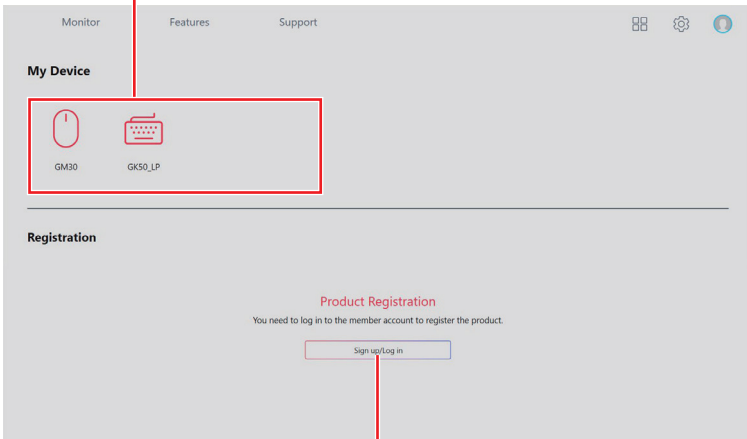

Click here to login

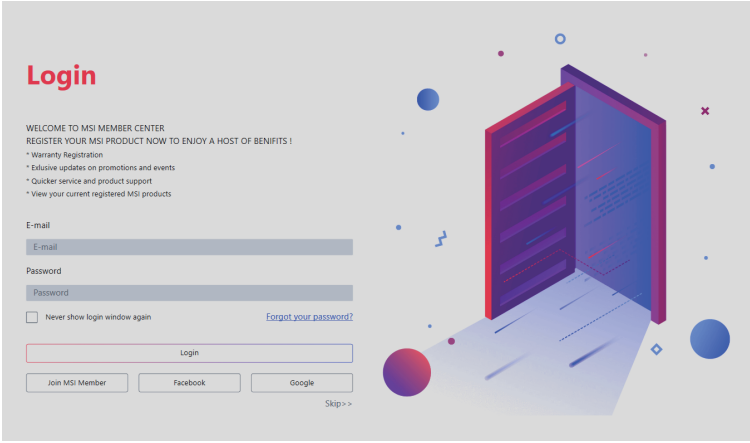

Login to your MSI account on this My Devices tab. If you don't have an MSI account, please click the **Join MSI Member** button or use Facebook, Google Plus to login.

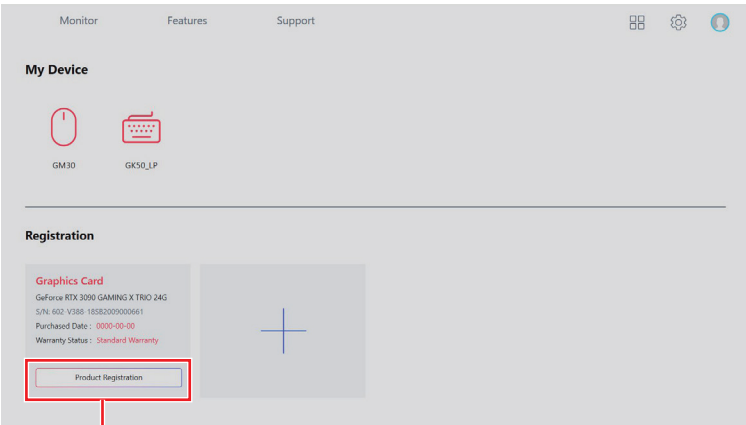


Click **Product Registration** button and fill in the product registration form.

# Live Update

Live Update feature allows you to scan system and download the latest drivers, BIOS and utilities. With Live Update, you don't need to search the drivers on websites, and don't need to know the models of motherboard and graphics cards. Live Update will download the appropriate drivers automatically.

## To use Live Update:

1. Connect your computer to the internet.
2. Go to **Support > Live Update**.

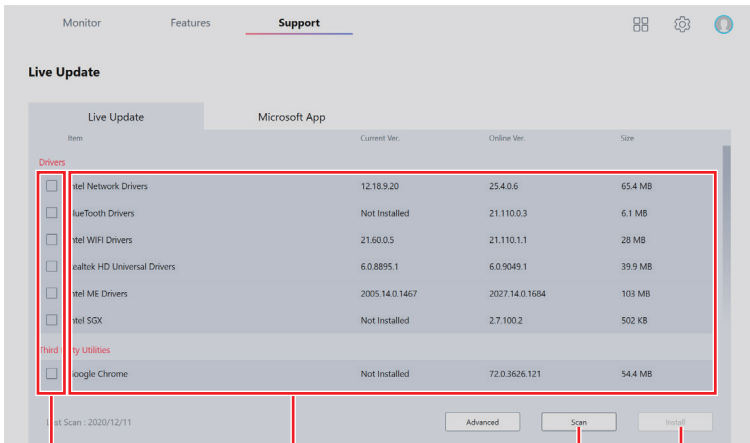

Select which item you want to update.

Utilities and drivers list

Click to scan the system

Click to install

# System Info

The System Info provides information about your computer drivers, BIOS and utilities versions.

## To open System Info:

1. Go to **Support > System Info**.

## To export system information:

1. Go to **Support > System Info**.
2. Click **Export System Info** button in the upper right corner.
3. Browse to the location where you want to save the new text file, and then click Save.

Click to export system information to a text file.

The screenshot shows the 'System Info' page with a table of system components and their versions. A red box highlights the table, and a red arrow points from the 'Export system info' button to the table.

Type	Item	Version
Drivers	Intel Chipset Drivers	10.1.18383.8213
Drivers	Intel Network Drivers	12.18.9.20
Drivers	Realtek PCIe Network Drivers	10.42.526.2020
Drivers	Intel WiFi Drivers	21.60.0.5
Drivers	Realtek HD Universal Drivers	6.0.8895.1
Drivers	Intel ME Drivers	2005.14.0.1467
BIOS MB	M5-7C71	1.30
FW Device	Device FW Update(GK30 LP)	1.01.18
FW Device	Device FW Update(GM30)	1.02.03

Shows drivers, BIOS and utilities versions.




# Microsoft APP

The Microsoft App feature detects installed drivers and displays a relative Microsoft application download links.

## To install Microsoft App:

1. Go to **Support > Microsoft App**.
2. Click the Get it from Microsoft icon  on the right side of the item.
3. Download and install the application from Microsoft Store.

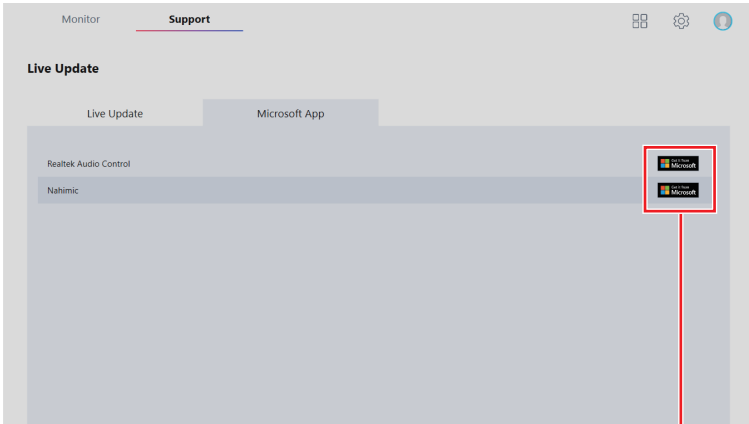

Click to install

# Notices

**msi** Micro-Star Int'l Co.,Ltd.

The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

## Copyright

© Micro-Star Int'l Co.,Ltd. 2024 All rights reserved.

## Revision History

Version 1.0, 2021/01, First release

Version 1.1, 2021/05, Add Coreliquid feature

Version 1.2, 2021/07, Add Resizable Bar, Update MSI Companion, Smart Priority, Hardware Monitoring

Version 1.3, 2022/06, Add Smart Image Finder & System Diagnosis, change Speed Up to Devices Speed Up, and remove Duet Display

Version 1.4, 2022/09, Add Case & PSU

Version 1.5, 2022/10, Add M-Vision Dashboard & HMI2.0

Version 1.6, 2022/12, Update Gaming Dial

Version 1.7, 2024/04, Add MSI AI Engine & Cooling Wizard