



AMD 800 series BIOS

USER GUIDE

Motherboard

Contents

- UEFI BIOS4
 - UEFI advantages 4
 - Incompatible UEFI cases 4
 - How to find the BIOS version? 4
- BIOS Setup.....5
 - Entering BIOS Setup 5
 - Function key 5
 - BIOS Setting Mode 6
 - EZ Mode..... 6
 - Game Boost 7
 - Creation Boost..... 7
 - AI Boost..... 8
 - AXMP/ EXPO Profile 9
 - M-Flash 10
 - Favorites 12
 - MSI Performance Preset..... 14
 - Smart Button 15
 - Profile 16
 - Hardware monitor..... 18
 - Smart fan configuration 19
 - BIOS Log 20
 - Language 21
 - BIOS Search..... 22
 - Screenshot..... 23
 - Boot priority 24
 - EZ On/Off 25
 - EZ Config..... 26
 - Advanced Mode..... 27
 - System Status..... 28
 - Advanced..... 29
 - Overclocking menu..... 36
 - Security 61
 - Boot 65
 - Save & Exit..... 66
 - Resetting BIOS 67

Updating BIOS 67

 Updating BIOS with M-FLASH 67

 Updating the BIOS with MSI Center 68

 Updating BIOS with Flash BIOS Button..... 68

Revision History 69

UEFI BIOS

MSI UEFI BIOS is compatible with UEFI (Unified Extensible Firmware Interface) architecture. UEFI has many new functions and advantages that traditional BIOS cannot achieve, and it will completely replace BIOS in the future. The MSI UEFI BIOS uses UEFI as the default boot mode to take full advantage of the new chipset's capabilities. However, it still has a CSM (Compatibility Support Module) mode to be compatible with older devices. That allows you to replace legacy devices with UEFI compatible devices during the transition.



Important

The term BIOS in this user guide refers to UEFI BIOS unless otherwise noted.

UEFI advantages

- Fast booting - UEFI can directly boot the operating system and save the BIOS self-test process. And also eliminates the time to switch to CSM mode during POST.
- Supports for hard drive partitions larger than 2 TB.
- Supports more than 4 primary partitions with a GUID Partition Table (GPT).
- Supports unlimited number of partitions.
- Supports full capabilities of new devices - new devices may not provide backward compatibility.
- Supports secure startup - UEFI can check the validity of the operating system to ensure that no malware tampers with the startup process.

Incompatible UEFI cases

- **32-bit Windows operating system** - this motherboard supports only Windows 11 64-bit operating system.
- **Older graphics card** - the system will detect your graphics card. If you use older graphics cards, it may display a warning message **There is no GOP (Graphics Output protocol) support detected in this graphics card.**




Important

We recommend that you replace it with a graphics card supporting GOP/UEFI or use CPU with integrated graphics for having normal function.

How to find the BIOS version?

After entering the BIOS, find the BIOS version in the information box.

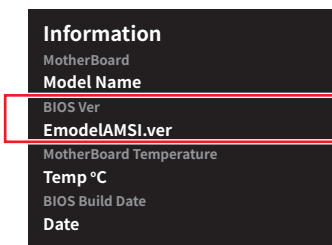

BIOS Setup

The default settings offer optimal performance for system stability in normal conditions. You should **always keep the default settings** to avoid possible system damage or failure booting unless you are familiar with BIOS.



Important

- The BIOS setup screens, options, and settings in this manual are for reference only and may vary from the motherboard you purchased. Please refer to the actual BIOS version of your system for detailed screens, settings and options.
- In Advanced mode, you can find BIOS item descriptions at the bottom of the BIOS screen for information on the purpose and function of each BIOS setting. BIOS items are continuously updated for better system performance. Therefore, the description may differ slightly from the latest BIOS and should be for reference only.

Entering BIOS Setup

Press **Delete** key, when the **Press DEL key to enter Setup Menu, F11 to enter Boot Menu** message appears on the screen during the boot process.

Function key

+/-: Increase / decrease the value

Enter: Select the item

ESC: Exit

Tab: Next selection

Ctrl+F: Enter Search menu

F1: General Help list

F2: Add/ Remove a favorite item

F3: Enter Favorites menu

F4: Enter CPU core center & memory center information menu

F5: Enter Hardware Monitor menu

F6: Load optimized defaults

F7: Switch between Advanced mode and EZ mode

F8: Load Overclocking Profile

F9: Save Overclocking Profile

F10: Save Change and Reset*

F12: Take a screenshot and save it to USB flash drive (FAT/ FAT32 format only).


* Pressing **F10** displays a confirmation message summarizing your changes. Select **Yes** or **No** to confirm.

BIOS Setting Mode

We provide two modes for you to configure BIOS settings: **EZ mode** and **Advanced mode**. Click on the **EZ Mode/ Advanced (F7)** button or press the **F7** function key to switch between these two modes.

EZ Mode


In EZ mode, it provides the basic setup functions for easy configuration and displays basic system information and status.

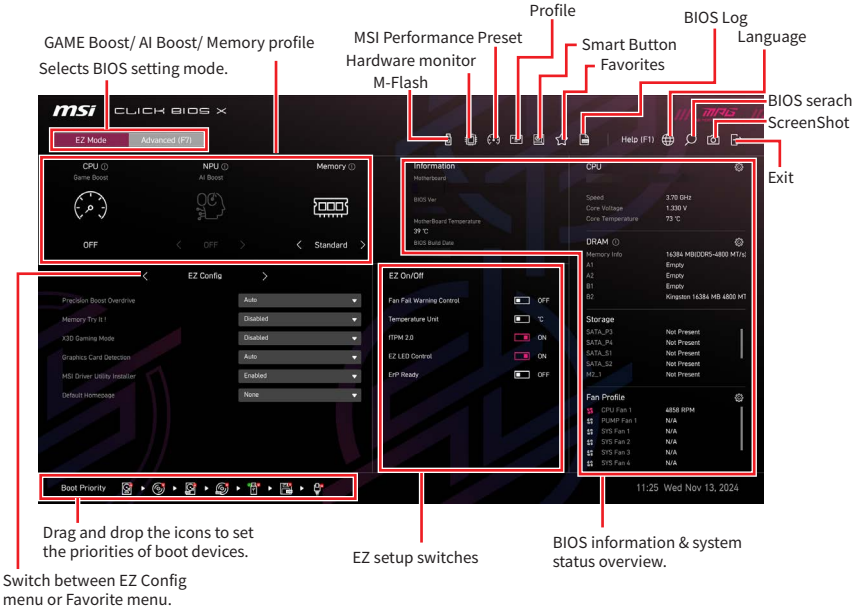

Game Boost

Enabling the GAME BOOST, the BIOS will automatically configure the CPU for optimal overclocking. However, this feature is only available if both your motherboard and CPU support it.

Click here to enable or disable the Game Boost/Creation Boost function.

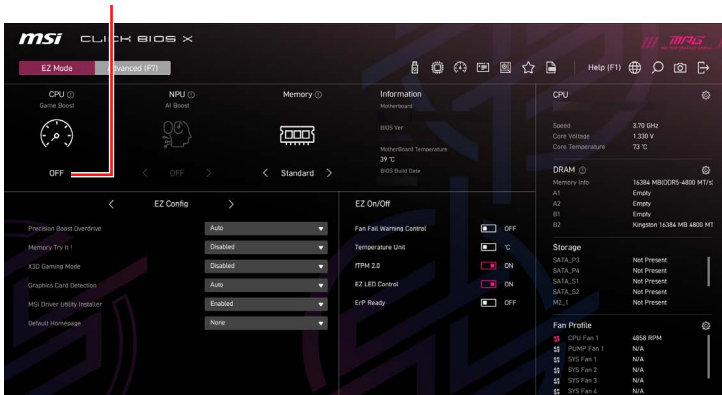

Important

Please don't make any changes in Overclocking menu and don't load defaults to keep the optimal performance and system stability after activating the **Game Boost** function.

Creation Boost

Enabling the Creation BOOST for performance optimization.


Important

Please don't make any changes in Overclocking menu and don't load defaults to keep the optimal performance and system stability after activating the **Creation Boost** function.

AI Boost

Enabling AI Boost allows the BIOS to automatically configure the NPU for optimal settings, enhancing AI processing performance. However, this feature is only available if both your motherboard and CPU support it.

Click here to enable or
disable the AI OC function.

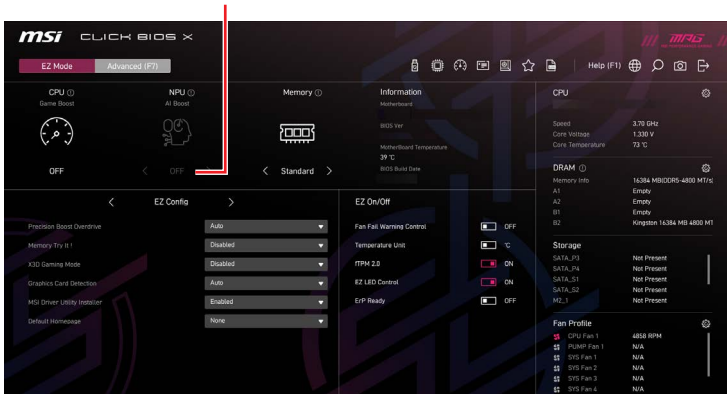


Please don't make any changes in Overclocking menu and don't load defaults to keep the optimal performance and system stability after activating the **AI Boost** function.

AXMP/ EXPO Profile

It allows you to select a memory profile for overclocking memory. However, this feature is only available if your motherboard, memory and CPU support it.


Select a memory profile
for overclocking memory.

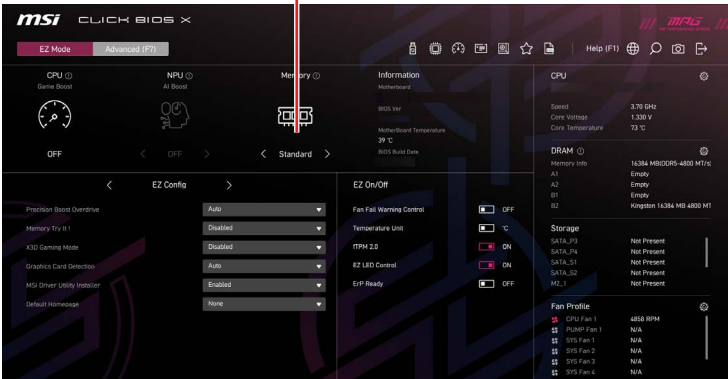

M-Flash

M-Flash makes it easy to update system BIOS with a USB flash drive.

Click this icon to enter M-Flash procedure.

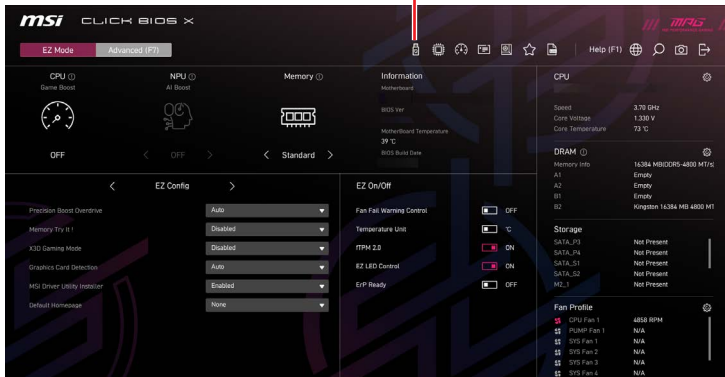

Before starting the M-Flash process, make sure you have:

- A USB flash drive with a capacity of 32GB or less that is formatted to FAT32.

Important

M-Flash only supports FAT32 format, and the USB flash drive should not exceed 32GB.


- A computer with internet access.

Please follow the steps below to update BIOS:

1. Download the latest BIOS file from the MSI website that matches your motherboard model, and save it to the USB flash drive.
2. If your motherboard has a Multi-BIOS switch, switch to the target BIOS ROM.
3. Insert the USB flash drive into your motherboard's USB port.
4. Enter flash mode by either:
 - Rebooting and pressing **Ctrl + F5** during POST, then clicking **Yes** to reboot the system.


Press <Ctrl+F5> to activate M-Flash for BIOS update.

- Rebooting and pressing **Del** during POST to enter BIOS, then clicking the M-FLASH button and clicking **Yes** to reboot.

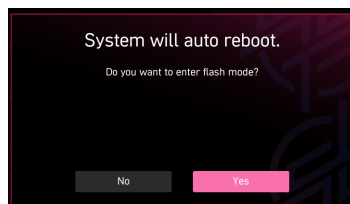


5. Selects a BIOS file and press enter.

Selects a BIOS file.

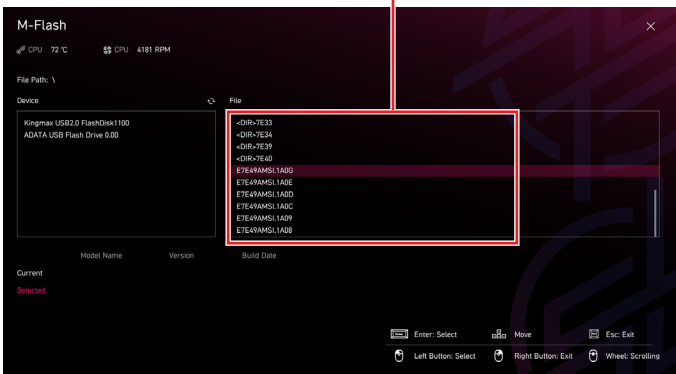

6. When prompted by a File Check message, click **Yes** to start the BIOS update.

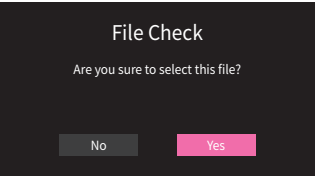


Once the update reaches 100%, the system will reboot automatically.


Favorites

Favorites is a section where you can create a personalized BIOS setting menu. The favorite menu allows you to quickly and easily access your most commonly used BIOS settings.


Click this icon to enter Favorites main page.

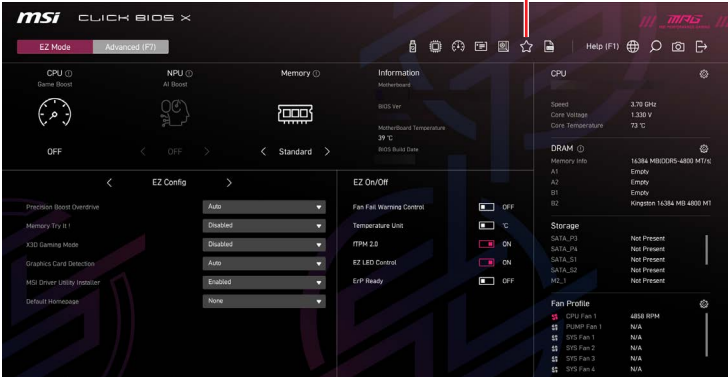


- To add a BIOS item to a favorite menu
1. Select a BIOS item on the BIOS sub-menu.

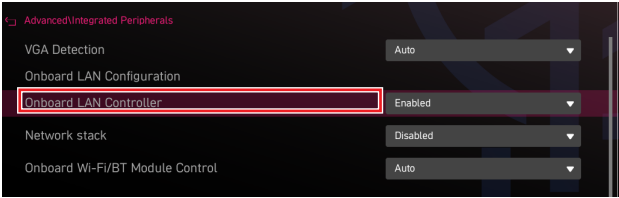


2. Right-click or press F2 key.
3. Choose one **Favorite** menu to add this BIOS item.

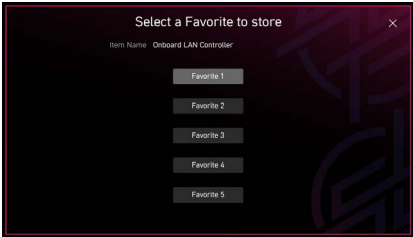

- To delete a BIOS item from favorite menu
1. Select a BIOS item on **Favorite** menu.

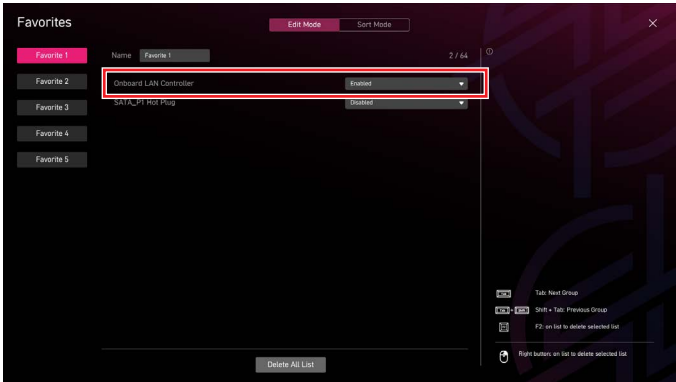


2. **Right-click** or press **F2** key.
3. Choose **Delete** and click on **OK**.

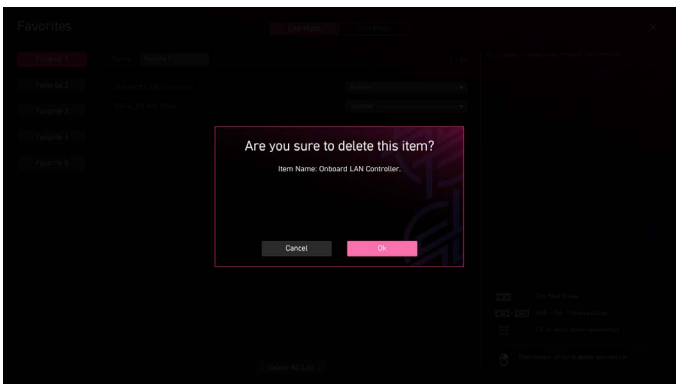

MSI Performance Preset

MSI Performance Preset provides levels of power limit control for different significant scenarios.


MSI Performance Preset

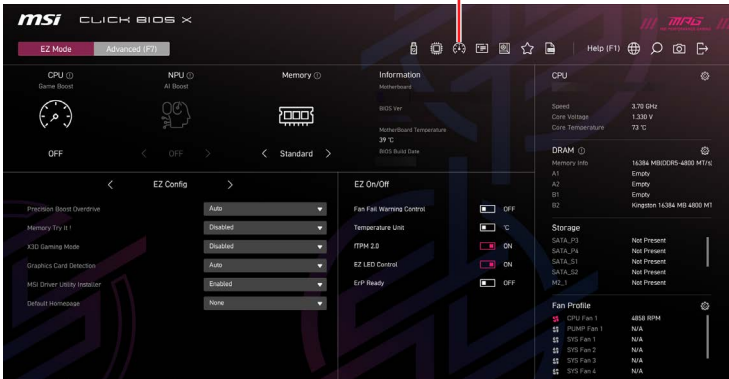


Smart Button

Click this button to select a system function for either the smart button on the motherboard or the reset button on the computer chassis. The chosen function can then be activated by pressing the smart/ reset button.

Click this icon to set the Smart button function

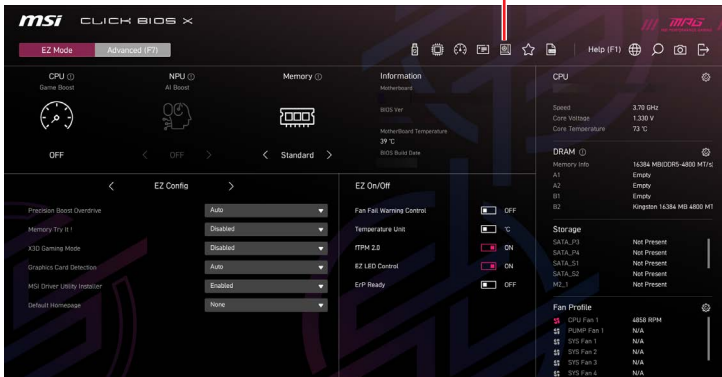

- Please follow the steps below to set the smart button function.
- 1. Click on **Smart Button**.
- 2. Select the system functions for the smart button and the reset button separately. And then click **OK**.

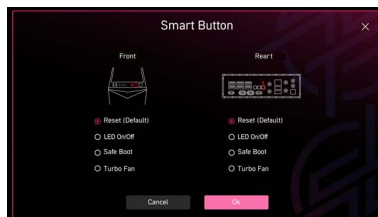

- **Reset** - it is used to reset the system.
- **LED On/ Off** - it is used turn on/ off all the onboard LEDs.

Important


The **LED On/ Off** function is unavailable when the LED_SW1 (EZ LED Control) switch turns OFF.

- **Safe Boot** - click the reset/ smart button and start the system simultaneously to boot in Safe Boot mode. The system will boot with default and lower the PCIe (from CPU) mode.
 - **Turbo Fan** - click the reset/ smart button for all fans to operate full speed or default speeds.
3. Press **F10** to save the change and select **Yes** to restart the system.

Profile

In the profile page, it allows you to load or store the BIOS profile from BIOS ROM/ USB flash driver.


Click this icon to enter the profile page

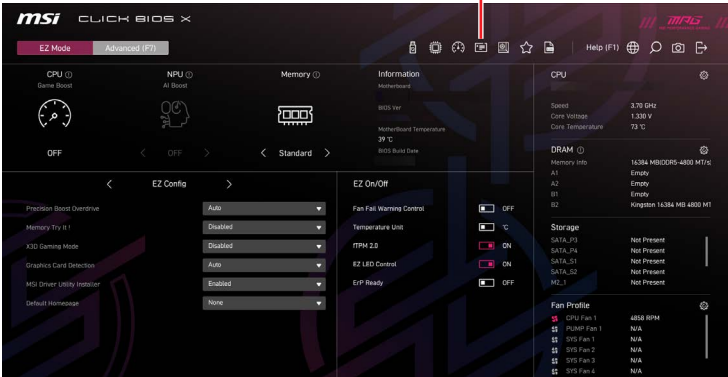


Important

The USB flash drive should be FAT/ FAT32 format only.


- Please follow the steps below to load profile.
- 1. Click on **Profile** icon.
- 2. Click **Load(F8)** to enter the load profile page.
- 3. Select a profile from ROM/ USB flash drive, and then press **Enter** to load the profile.

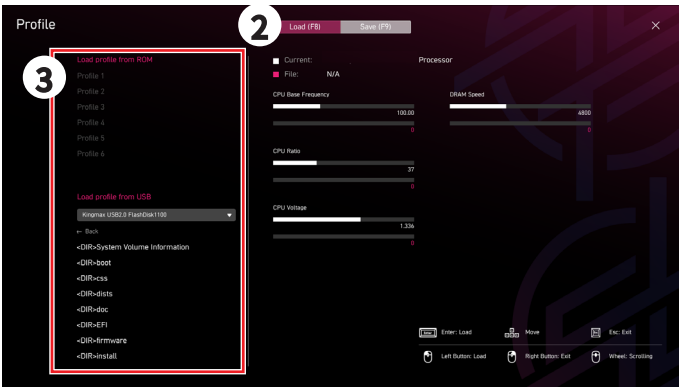

- Please follow the steps below to save profile.
1. Click on **Profile** icon.
 2. Click **Save(F9)** to enter the save profile page.
 3. Select the ROM or USB flash drive and press **Enter**.

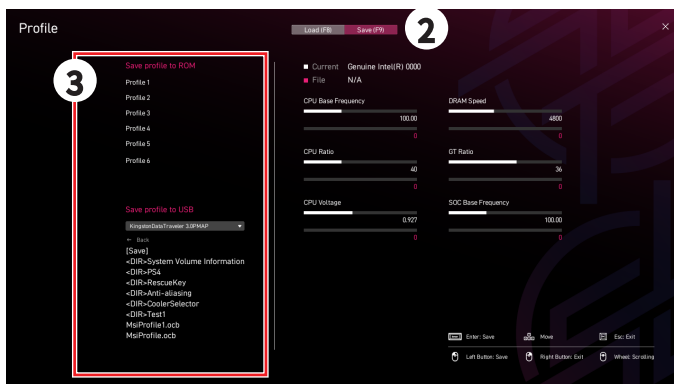


4. Click **OK** to save the current BIOS settings and create a profile.

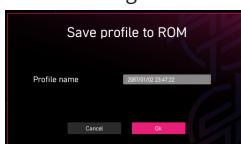


Hardware monitor

Hardware monitor detects and displays the voltages and temperatures of different components. It also provides a smart fan feature that allows you to adjust the fan speed manually.

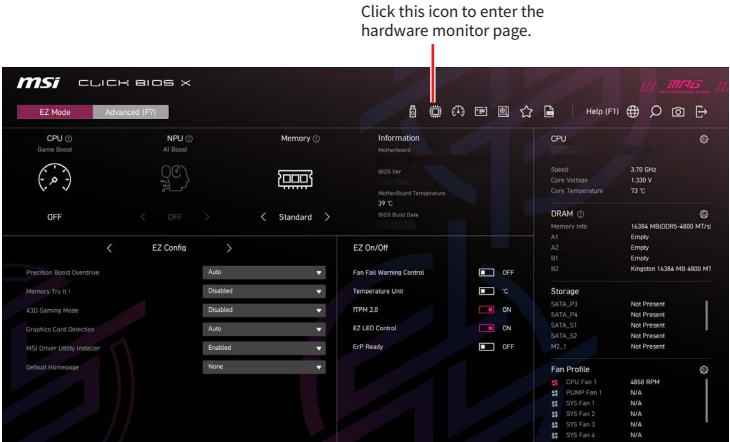

Click this icon to enter the hardware monitor page.

Smart Fan is an excellent feature that will adjust the CPU/ PUMP/ system fan speed automatically depending on the current CPU/ system temperature, avoiding overheating and damaging your system.

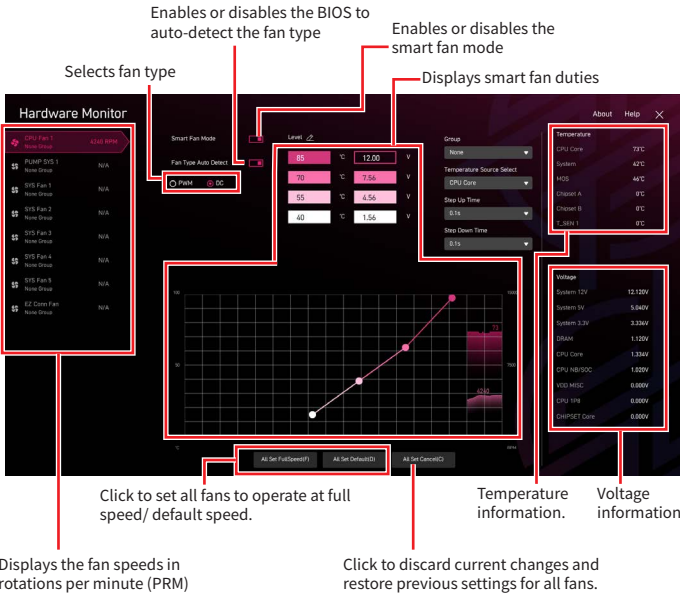

Enables or disables the BIOS to auto-detect the fan type

Enables or disables the smart fan mode

Displays smart fan duties


Selects fan type

Important


The appearance of this menu may differ based on your motherboard model. Please consult your motherboard's BIOS for specific settings and options.

Smart fan configuration

- Please follow the steps below to adjust fan speed (PRM).
1. Selects a fan you want to adjust.
 2. Click and drag the duty points on the graph to adjust the desired fan speed (RPM).

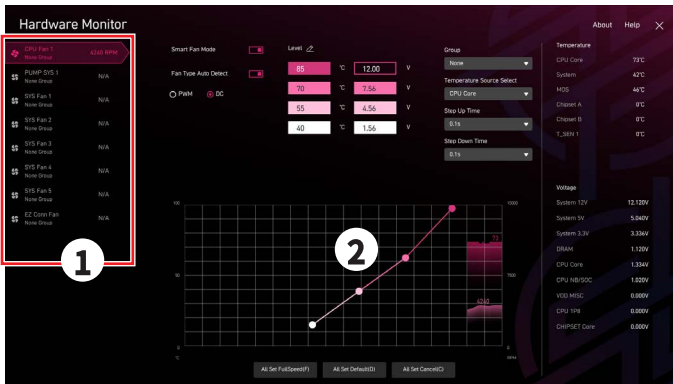

- Please follow the steps below to add new fan duty for smart fan mode
1. Select a fan you want to adjust.
 2. Double-click the icon next to **Level**.
 3. Choose a temperature source for this fan duty point.
 4. Enter a desired value within the smart mode range. Then click the “+” to add the new fan duty.

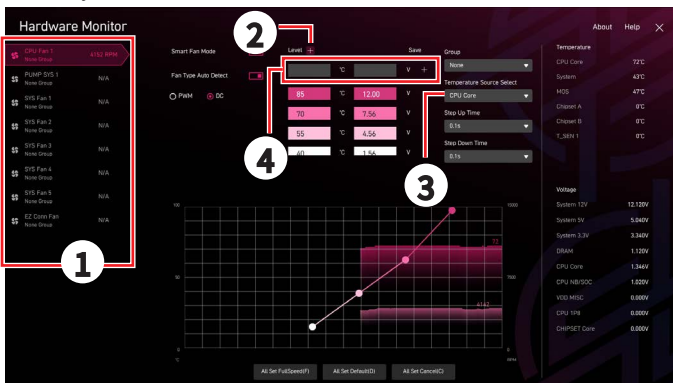


Important

Make sure fans are working properly after adjusting the fan speed and switching the fan mode.

BIOS Log


The BIOS log page displays a detailed list of BIOS configuration modifications during this period.

Click this icon to enter the BIOS log page.

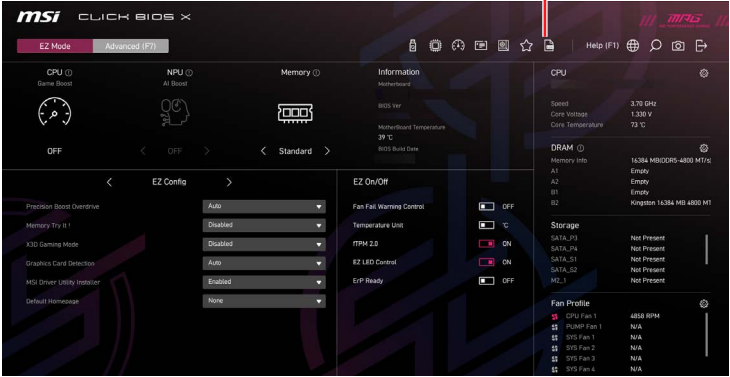


Language

Click on this button to select the display language of the BIOS setup program.

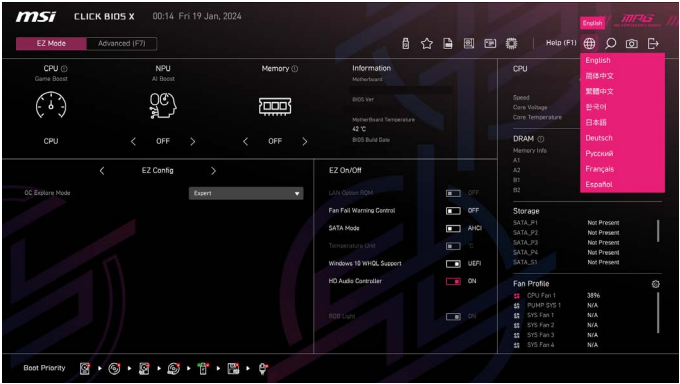


BIOS Search

Click this icon to enter BIOS search page

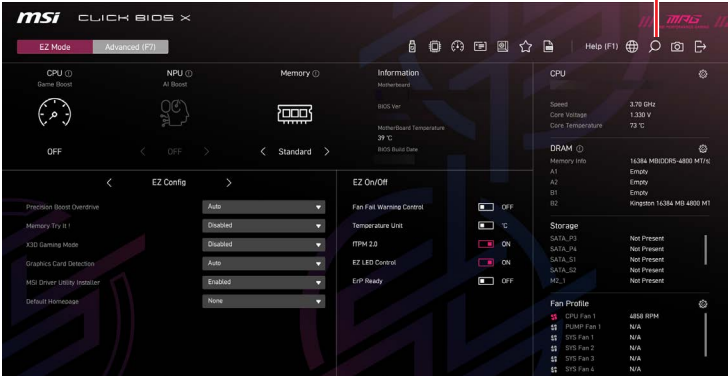

On the search page, it allows you to search for the related BIOS items by entering the keyword.

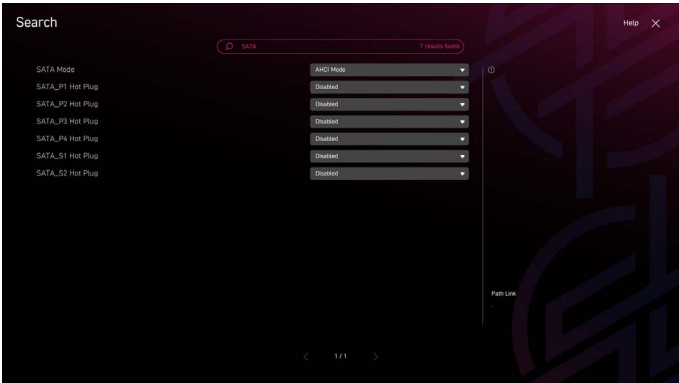


Important

On the search page, only the **F2**, **F6**, **F10** and **F12** function keys are available.

Screenshot


Click on this button or press the **F12** key to take a screenshot and save it to a USB flash drive (FAT/ FAT32 format only).

Click this icon to take a screenshot

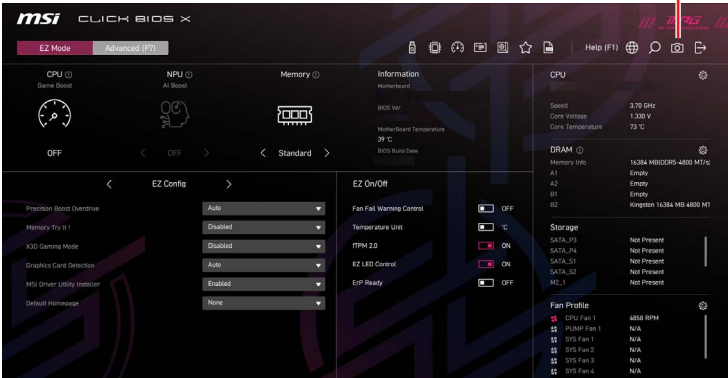

Boot priority


Drag and drop the icons to set the boot order of devices. Devices from left to right will have boot priority in descending order (highest on the left).

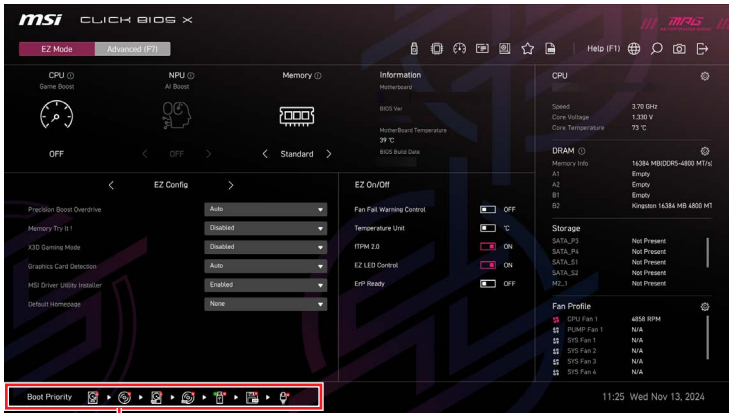

Boot device priority bar

EZ On/Off

The Ez On/Off section provides easy-to-use controls for common functions.

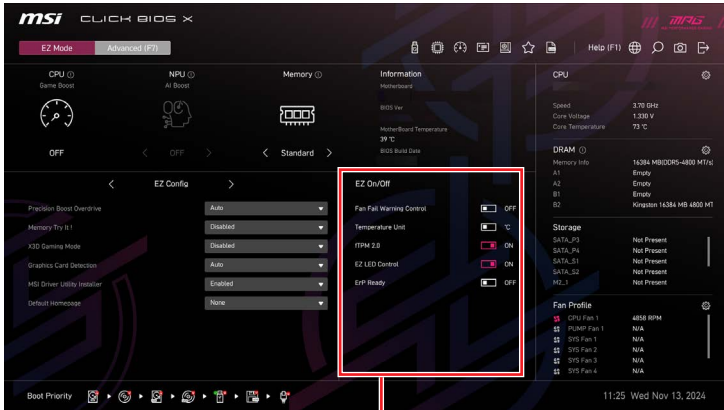

EZ setup switches

- **CPU Fan Fail Warning Control** - enables or disables the system to show the CPU fan fail warning message during the POST.
- **Temperature Unit** - change the temperature unit.
- **fTPM 2.0** - enables or disables the firmware TPM control.
- **EZ LED Control** - turns on or off all the LEDs of the motherboard.
- **ErP Ready** - enables or disables the system power consumption according to ErP regulation.
- **Debug Code LED Control** - enables or disables the debug code LED.




Important

The appearance of this menu may differ based on your motherboard model. Please consult your motherboard's BIOS for specific settings and options.

EZ Config

The EZ Config section provides some specific BIOS setting shortcuts for quick accessing.

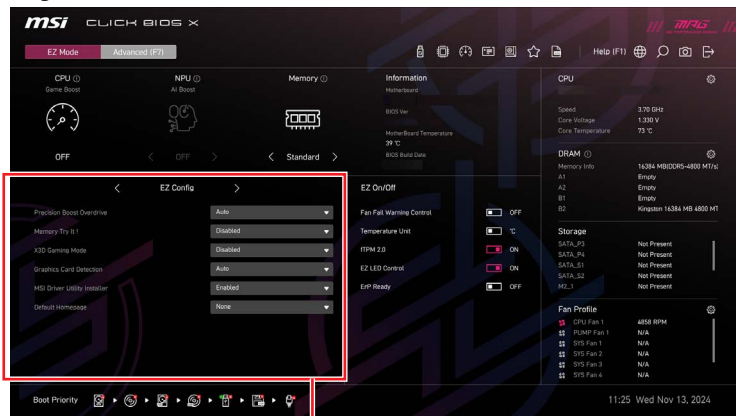


EZ Config menu

Within the EZ Config section, click the < or > icon next to EZ Config label to switch between EZ Config menu and Favorites menu.

Advanced Mode

In Advanced mode, it provides detailed BIOS settings for experienced users to fine-tune performance and overclocking.

Selects BIOS setting mode. Or press F7 to change setting mode.

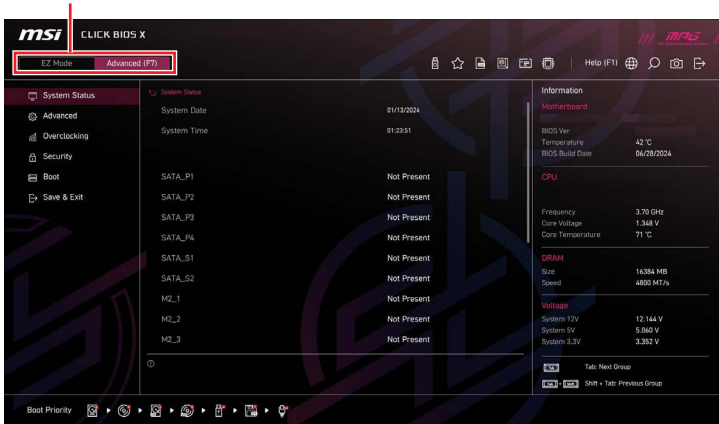


The left side of the BIOS screen displays several BIOS menus, including the following items:

- **System Status** - This menu displays comprehensive system information and allows you to adjust system date and time settings.
- **Advanced** - This menu allows you to specify the parameters and adjust settings for the devices and components of your system.
- **Overclocking** - This menu allows you to adjust the frequency and voltage. Remember, higher settings can mean better performance, but also raise the risk of damage.
- **Security** - This menu allows you to set administrator and user passwords, and manage TPM settings for enhanced system security using this menu.
- **Boot** - This menu allows you to set the system boot devices.
- **Save & Exit** - This menu provides options for restoring default settings, saving customized settings, or discarding any unsaved changes.

System Status

The System Status menu allows you to set the system clock and view system information.

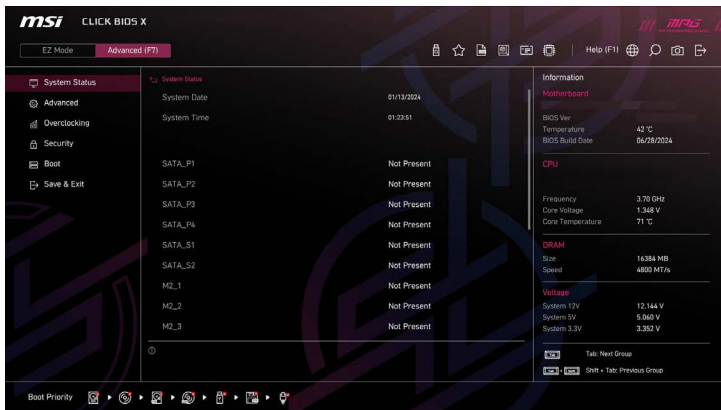

► System Date

Sets the system date. Use **Tab** key to switch between date elements.

The format is <day> <month> <date> <year>.

<day> Day of the week, from Sun to Sat, determined by BIOS. Read-only.

<month> The month from Jan. through Dec.

<date> The date from 1 to 31 can be keyed by numeric function keys.

<year> The year can be adjusted by users.

► System Time

Sets the system time. Use tab key to switch between time elements. The time format is <hour> <minute> <second>.

► SATA PortX/ M2_X

Shows the information of connected SATA/ M.2 devices.



Important

If the connected SATA/ M.2 device is not displayed, turn off computer and re-check SATA/ M.2 cable and power cable connections of the device and motherboard.

► System Information


Shows detailed system information, including CPU type, BIOS version, and Memory information. (Read only).

► DMI Information

Shows system information, desktop Board Information and chassis Information. (Read only).

Advanced

The Advanced menu allows you to adjust and set the parameters and behaviors of PCIe, ACPI, integrated peripherals, integrated graphics, USB, power management and Windows.

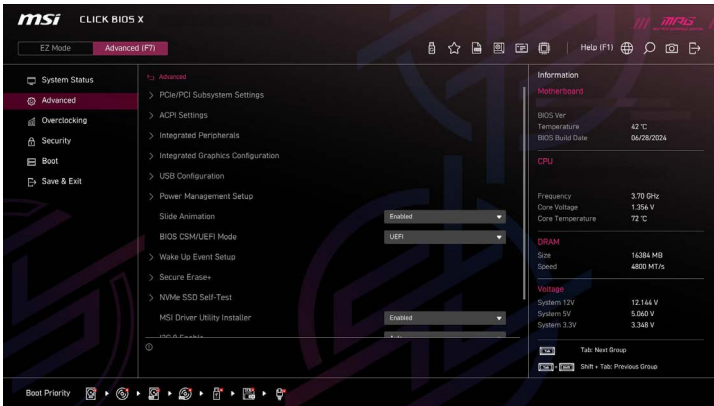

► PCIe Sub-system Settings

Sets PCI, PCI express interface protocol and latency timer. Press Enter to enter the sub-menu.

► Re-Size BAR Support

Enables or disables the Resize BAR (Base Address Register) support. It is only available if the system supports 64-bit PCI/ PCIe decoding. If the system supports 64-bit PCI/ PCIe decoding, please enable this item for compatible PCIe device. It is a requirement by AMD Smart Access Memory (SAM) technology.

► M.2_X Gen Mode

Sets PCI Express protocol for M.2_X slot to match different installed M.2 devices.

► PCI_Ex Gen Switch

Sets PCI Express protocol for PCI_E1 slot to match different installed PCIe devices.

► Chipset Gen Switch

Sets PCI Express protocol (from chipset) for matching different installed devices.

► PCI_Ex Lanes Configuration

PCIe lanes configuration is for MSI M.2 expansion card/ Other M.2 PCIe storage card. The options in this item will vary with the installed processor.

► ASPM Control for CPU PCIe

If enabled, ASPM will be controlled by the operating system. If disabled, ASPM will be controlled by the BIOS.

▸ **SR-IOV Support**

Enables or disables the SR-IOV (Single Root IO Virtualization) support.

▸ **ACPI Settings**

Sets ACPI parameters of onboard power LED behaviors. Press Enter to enter the sub-menu.

▸ **Power LED**

Sets shining behaviors of the onboard Power LED.

[Dual Color] The power LED turns to another color to indicate the S3 state.

[Blinking] The power LED blinks to indicate the S3 state.

▸ **CPU Over Temperature Alert**

Enables or disables the CPU overheating alert sound and message when CPU temperature is over 80 and 94 degrees centigrade.

▸ **Integrated Peripherals**

Sets integrated peripherals' parameters, such as LAN, HDD, USB and audio. Press **Enter** to enter the sub-menu.

▸ **Graphics Card Detection**

Allows the system to detect if there is any discrete graphics card or integrated graphics unit.

▸ **Onboard LAN Controller**

Enables or disables the onboard LAN controller.

▸ **LAN Option ROM**

Enables or disables the legacy network Boot Option ROM for detailed settings. This item will appear when **Onboard LAN Controller** is enabled. For CSM mode (Legacy) only.

[Enabled] Enables the onboard LAN Boot ROM.

[Disabled] Disables the onboard LAN Boot ROM.

▸ **Network Stack**

Sets UEFI network stack for optimizing IPv4 / IPv6 function. This item will appear when **Onboard LAN Controller** is enabled.

[Enabled] Enables UEFI network stack.

[Disabled] Disables UEFI network stack.

▸ **Ipv4 PXE Support**

When **Enabled**, the system UEFI network stack will support Ipv4 protocol. This item will appear when **Network Stack** is enabled.

[Enabled] Enables the Ipv4 PXE boot support.

[Disabled] Disables the Ipv4 PXE boot support.

▸ **Ipv6 PXE Support**

When **Enabled**, the system UEFI network stack will support Ipv6 protocol. This item will appear when **Network Stack** is enabled.

[Enabled] Enables the Ipv6 PXE boot support.

[Disabled] Disables the Ipv6 PXE boot support.

► **Onboard Wi-Fi/BT Module Control**

Enables or disables the onboard Wi-Fi and Bluetooth functions. If Auto, the both of Wi-Fi and bluetooth are enabled.

► **SATA Mode**

Sets the operation mode of the onboard SATA controller.

[AHCI Mode] Specify the AHCI mode for SATA storage devices. AHCI (Advanced Host Controller Interface) offers some advanced features to enhance the speed and performance of SATA storage device, such as Native Command Queuing (NCQ) and hot-plugging.

[RAID Mode] Enables RAID function for SATA storage devices.

► **Onboard E-SATA Controller Mode**

Sets the operation mode of the onboard E-SATA controller.

► **HD Audio Controller**

Enables or disables the onboard High Definition Audio controller.

► **Smart Button**

Sets the system operation function for the reset button of the case.

► **Rear Smart Key**

Sets the system operation function for the smart button on the rear I/O of the motherboard.

► **Integrated Graphics Configuration**

Adjusts integrated graphics settings for optimum system. Press **Enter** to enter the sub-menu. This sub-menu is only available with the CPU integrate with IGP.

► **Initiate Graphic Adapter**

Selects a graphics device as the primary boot device.

[IGD] Integrated Graphics Display.

[PEG] PCI-Express Graphics Device.

► **Integrated Graphics**

This item allows you to set the UMA memory size manually or allows the system to allocate the system memory dynamically for integrated graphics.

► **UMA Frame Buffer Size**

Sets the system memory buffer size for onboard integrated graphics.

► **Hyper Graphics**

Enables or disables the Hyper Graphics technology.

► **USB Configuration**

Sets the onboard USB controller and device function. Press **Enter** to enter the sub-menu.

► **XHCI Hand-off**

Enables or disables XHCI hand-off support for the operating system without XHCI hand-off feature.

▸ **Legacy USB Support**

Sets Legacy USB function support.

[Auto] The system will automatically detect if any USB device is connected and enable the legacy USB support.

[Enabled] Enable the USB support under legacy mode.

[Disabled] The USB devices will be unavailable under legacy mode.

▸ **Super IO Configuration**

Sets system Super I/O chip parameters including LPT and COM ports. Press **Enter** to enter the sub-menu.

▸ **Serial (COM) Port 0/ 1 Configuration**

Sets detailed configuration of serial(COM) port 0/ 1. Press **Enter** to enter the sub-menu.

▸ **Serial (COM) Port 0/ 1**

Enables or disables serial (COM) port 0/ 1.

▸ **Serial (COM) Port 0/ 1 Settings**

Sets serial (COM) port 0/ 1. If set to Auto, BIOS will optimize the IRQ automatically or you can set it manually.

▸ **Parallel (LPT) Port Configuration**

Sets detailed configuration of parallel port (LPT). Press Enter to enter the sub-menu.

▸ **Parallel (LPT) Port**

Enables or disables parallel(LPT) port.

▸ **Parallel (LPT) Port Settings**

Sets parallel port (LPT). If set to **Auto**, BIOS will optimize the IRQ automatically or you can set it manually.

▸ **Device Mode**

Selects an operating mode for parallel port.

[STD Printer Mode] Printer port mode

[SPP] Standard Parallel Port mode

[EPP-1.9 and SPP] Enhanced Parallel Port-1.9 mode + Standard Parallel Port mode.

▸ **Power Management Setup**

Sets system Power Management of ErP and AC Power Loss behaviors. Press **Enter** to enter the sub-menu.

▸ **ErP Ready**

Enables or disables the system power consumption according to ErP regulation.

[Enabled] Optimize the system power consumption according to ErP regulation. It will not support S4 & S5 wake up by USB, PCI and PCIe devices.

[Disabled] Disables this function.

► Restore after AC Power Loss

Sets the system behaviors while encountering the AC power loss.

- [Power Off] Leaves the system in power off state after restoring AC power.
- [Power On] Boot up the system after restoring AC power.
- [Last State] Restores the system to the previous state (power on/ power off) before AC power loss.

► System Power Fault Protection

Enables or disables the system to boot up when detecting abnormal voltage input.

- [Enabled] Protect the system from unexpected power operating and remain the shut down status.
- [Disabled] Disables this function.

► BIOS UEFI/ CSM Mode

Select CSM (Compatibility Support Module) or UEFI mode to meet the system requirement.

- [CSM] For the non-UEFI driver add-on devices or non-UEFI mode OS.
- [UEFI] For the UEFI driver add-on devices and UEFI mode OS.

► Wake Up Event Setup

Sets system wake up behaviors for different sleep modes. Press **Enter** to enter the sub-menu.

► Wake Up Event By

Selects the wake up event by BIOS or operating system.

- [BIOS] Activates the following items, set wake up events of these items.
- [OS] The wake up events will be defined by OS.

► Resume By RTC Alarm

Disables or enables the system wake up by RTC Alarm.

- [Enabled] Enables the system to boot up on a scheduled time/ date.
- [Disabled] Disables this function.

► Date (of month) Alarm/ Time (hh:mm:ss) Alarm

Sets RTC alarm date/ Time. If Resume By RTC Alarm is set to [Enabled], the system will automatically resume (boot up) on a specified date/hour/minute/second in these fields (using the + and - keys to select the date & time settings).

► Resume By PCI-E Device

Enables or disables the wake up function of installed PCI-E expansion cards.

- [Enabled] Enables the system to be awakened from the power saving modes when activity or input signal of PCIe device is detected.
- [Disabled] Disables this function.

► Resume by USB Device

Disables or enables system wake up from S3/S4 by USB device.

- [Enabled] Enables the system to be awakened from sleep state when activity of USB device is detected.
- [Disabled] Disables this function.

► **Resume From S3/S4/S5 by PS/2 Mouse**

Enables or disables the system wake up by PS/2 mouse.

[Enabled] Enables the system to be awakened from S3/ S4/ S5 state when activity of PS/2 mouse is detected.

[Disabled] Disables this function.

► **Resume From S3/S4/S5 by PS/2 Keyboard**

Enables or disables the system wake up by PS/2 keyboard.

[Any Key] Enables the system to be awakened from S3/ S4/ S5 state when activity of any key on PS/2 keyboard is detected.

[Hot Key] Enables the system to be awakened from S3/ S4/ S5 state when activity of hot key on PS/2 keyboard is detected.

[Disabled] Disables this function.

► **Hot Key**

Selects a combination of keys as a hot key to wake the system. This item appears when you set the **Resume From S3/S4/S5 by PS/2 Keyboard** to **Hot Key**.

► **Click BIOS Configuration**

Configures BIOS setup related items. Press **Enter** to enter the sub-menu.

► **Slide Animation**

Enables or disables the sliding function for BIOS main menu block.

► **Default Homepage**

Selects a BIOS menu as the BIOS main page.

► **Show Application At First Time**

Selects an application to launch when entering BIOS menu at the next startup.

► **Secure Erase+**

Enables or disables Secure Erase+ function. **Secure Erase+** is the best way to effectively wipe all data from a SSD. Please note that data of SSD will be erased after enabling **Secure Erase+**.

► **MSI Driver Utility Installer**

Enables or disables MSI driver utility installer support.

► **NVME SSD Self-Test**

This setting enables or disables a built-in diagnostic function within the NVMe SSD. Press Enter to start the NVMe SSD self test.

► **SR-IOV Support**

Enables or disables the Intel SR-IOV (Single Root I/O Virtualization).

► **M.2 XPANDER Card Settings**

You can set the fan duty percentage according LED color of the M.2 XPANDER card fan. If set to **Auto**, BIOS will set the fan duty automatically.

▸ **Realtek PCIe GBE Family Controller (MAC)**


Shows driver information and configuration of the ethernet controller parameter. This item will appear when **Network Stack** is enabled.

▸ **RAIDXpert2 Configuration Utility**

RAIDXpert2 is a utility used for creating and managing NVMe RAID arrays. Press **Enter** to enter the sub-menu.

Overclocking menu

This menu allows you to configure the frequencies and voltages for overclocking. Please note that, higher frequency and voltage may benefit overclocking capability but cause system instability.

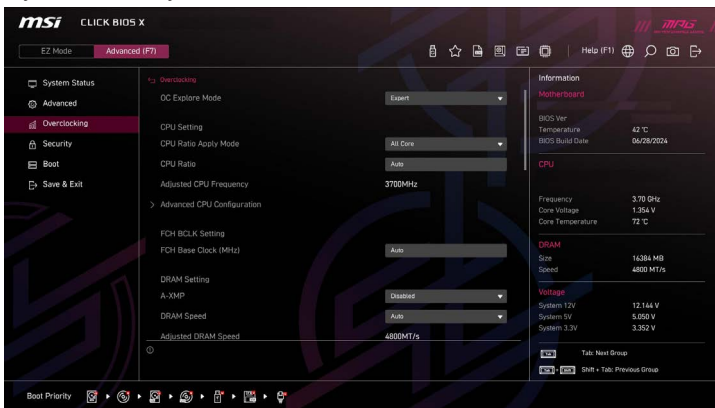

Important

- Overclocking your system manually is only recommended for advanced users.
- Overclocking is not guaranteed, and if done improperly, it could void your warranty or severely damage your hardware.
- If you are unfamiliar with overclocking, we advise you to use **Game Boost/ Creation Boost** function or easy overclocking.
- The BIOS options and settings in Overclocking menu will vary from the motherboard you purchased. Please refer to the actual BIOS of your system for the BIOS settings and options.

► OC Explore Mode

Enables or disables to show the normal or expert version of OC settings.

[Normal] Provides the regular OC settings in BIOS setup.

[Expert] Provides the advanced OC settings for OC expert to configure in BIOS setup.

► CPU Ratio Apply Mode

Sets applied mode for CPU ratio.

► CPU Ratio

Sets the CPU ratio that is used to determine CPU clock speed. This item will appear when **CPU Ratio Apply Mode** is set to **All Core** and if the processor supports this function.

► Adjusted CPU Frequency

Shows the adjusted CPU frequency. Read-only.

▸ **CCD0 Ratio**

Sets the CPU CCD0 ratio. This item will appear when **CPU Ratio Apply Mode** is set to **Per CCD/ Adaptive**.

▸ **CCD1 Ratio**

Sets the CPU CCD1 ratio. This item will appear when **CPU Ratio Apply Mode** is set to **Per CCD/ Adaptive** and if the processor supports this function.

▸ **CPU CCD Voltage**

Sets the CPU CCD voltage. This item will appear when **CPU Ratio Apply Mode** is set to **Per CCD**.

▸ **Performance Switch**

This item allows you to specify a level to upgrade the CPU performance based on the CPU quality. This item will appear when **CPU Ratio Apply Mode** is set to **Adaptive**.

▸ **CPU Performance CCD0 Ratio**

Sets the CPU CCD0 ratio. This item will appear when **Performance Switch** is set to **Advanced**.

▸ **CPU Performance CCD1 Ratio**

Sets the CPU CCD0 ratio. This item will appear when **Performance Switch** is set to **Advanced** and if the processor supports this function.

▸ **Performance Current Limit**

This item allows you to set the current limit. This item will appear when **Performance Switch** is set to **Advanced**.

▸ **Performance Current Limit Hysteresis**

This item allows you to set the current limit of hysteresis. This item will appear when **Performance Switch** is set to **Advanced**.

▸ **Trigger Counts**

This item allows you to set the time of each trigger count. This item will appear when **Performance Switch** is set to **Advanced**.

▸ **CPU Performance Voltage**

Sets the CPU CCD voltage. This item will appear when **Performance Switch** is set to **Advanced**.

▸ **Advanced CPU Configuration**

Press **Enter** to enter the sub-menu. You can set the parameters about CPU power/ current/ overclocking.



Important

The system may become un-stable or un-bootable after changing the power parameters. If it occurs, please clear the CMOS data and restore the default settings.

► **AMD Overclocking**

Press **Enter** to enter the sub-menu. You can set the parameters about CPU overclocking. This sub-menu will appear when the CPU and chipset support this function.

► **Manual iGPU Overclocking**

Press **Enter** to enter the sub-menu.

► **GFX Clock Frequency**

Set the frequency of integrated graphics.

► **GFX Voltage**

Set the voltage of integrated graphics.

► **Precision Boost Overdrive**

Enables or disables Precision Boost Overdrive (PBO) that is a performance-maximizing technology available in AMD CPU. This item will appear only when the CPU supports this function.

► **CCD0 Core Control**

Specifies the number of cores to utilize for CCD0.

► **CCD1 Core Control**

Specifies the number of cores to utilize for CCD1.

► **SMT Control**

Enables or disables the symmetric multi-threading.

► **LN2 Mode**

Enables or disables the LN2 mode. LN2 mode provides additional stability at extreme cold operating temperatures.

► **LCLK Frequency Control (I/O Clock)**

Sets this item to Manual allows you to set the LCLK frequency manually in the following item. If set to **Auto**, BIOS will configure the frequency automatically.

► **Maximum Frequency**

This item allows you to set the LCLK frequency manually. This item will appear when **LCLK Frequency Control (I/O Clock)** is set to **Manual**.

► **Prochot VRM Throttling**

Disabling Prochot prevents the VRM from throttling the CPU when overheating.

► **Peak Current Control**

Enables or disables the peak current control.

► **PBO Limits**

Sets the PBD limits control mode. This item will appear when **Precision Boost Overdrive** is set to **Advanced**.

► **PPT Limit [W]**

Sets PPT (Package Power Tracking) limit. This item will appear when **PBO Limits** is set to **Manual**.

▸ **TDC Limit [A]**

Sets TDC (Thermal Design Current) limit. This item will appear when **PBO Limits** is set to **Manual**.

▸ **EDC Limit [A]**

Sets EDC (Electrical Design Current) limit. This item will appear when **PBO Limits** is set to **Manual**.

▸ **Precision Boost Overdrive Scalar Ctrl**

Sets to control the PBO automatically or manually.

▸ **Precision Boost Overdrive Scalar**

Sets PBO scalar. This item will appear when **Precision Boost Overdrive Scalar Ctrl** is set to **Manual**.

▸ **CPU Boost Clock Override**

If enabled, it allows you to override the CPU boost clock. If set to **Auto**, BIOS will configure the clock. This item will appear when **Precision Boost Overdrive** is set to **Advanced**.

▸ **Max CPU Boost Clock Override(+)**

It allows you to increase the maximum CPU frequency that may be automatically achieved by the Precision Boost 2 algorithm.

▸ **Max CPU Boost Clock Override(-)**

It allows you to decrease the maximum CPU frequency that may be automatically achieved by the Precision Boost 2 algorithm.

▸ **GPU Boost Clock Override**

It allows you to set GPU boost clock. If set to **Auto**, BIOS will configure the clock.

▸ **Max GPU Boost Clock Override**

It allows you to set maximum GPU boost clock. If set to **Auto**, BIOS will configure the clock.

▸ **Platform Thermal Throttle Limit**

It allows you to set the maximum processor temperature. If set to **Auto**, BIOS will configure this settings. This item will appear when **Precision Boost Overdrive** is set to **Advanced**.

▸ **GFX Curve Optimizer**

Press **Enter** to enter the sub-menu. This item will appear when **Precision Boost Overdrive** is set to **Advanced**.

▸ **GFX Curve Optimizer**

Enables or disables the curve optimizer for integrated graphics.

▸ **GFX Core Curve Optimizer Sign**

Sets the shifting direction of the curve for integrated graphics. This item will appear when **GFX Curve Optimizer** is set to **Enabled**.

▸ **GFX Curve Optimizer Magnitude**

Sets Curve Optimizer value for all cores. This item will appear when **GFX Curve Optimizer** is set to **Enabled**.

▶ **Curve Optimizer**

Press **Enter** to enter the sub-menu. This item will appear when **Precision Boost Overdrive** is set to **Advanced**.

▶ **Curve Optimizer**

Enables or disables the Curve Optimizer for entire CPU cores or specific cores.

▶ **All Core Curve Optimizer Sign**

Sets the shifting direction of the curve for the entire CPU cores. This item will appear when **Curve Optimizer** is set to **All Cores**.

▶ **All Core Curve Optimizer Magnitude**

Sets Curve Optimizer value for the entire CPU cores. This item will appear when **Curve Optimizer** is set to **All Cores**.

▶ **Core[n] Curve Optimizer Sign**

Sets the shifting direction of the curve for specific cores. This item will appear when **Curve Optimizer** is set to **Per Core**.

▶ **Core[n]s Curve Optimizer Magnitude**

Sets Curve Optimizer value for specific cores. This item will appear when **Curve Optimizer** is set to **Per Core**.

▶ **Curve Shaper**

Press **Enter** to enter the sub-menu.

▶ **Min Frequency - Low Temperature**

Enables or disables the voltage offset under minimum frequency and low temperature conditions.

▶ **Min Frequency - Low Temperature sign**

Sets the direction of voltage offset under minimum frequency and low temperature conditions.

▶ **Min Frequency - Low Temperature Magnitude**

Sets the value of voltage offset under minimum frequency and low temperature conditions.

▶ **Min Frequency - Med Temperature**

Enables or disables the voltage offset under minimum frequency and medium temperature conditions.

▶ **Min Frequency - Med Temperature sign**

Sets the direction of voltage offset under minimum frequency and medium temperature conditions.

▶ **Min Frequency - Med Temperature Magnitude**

Sets the value of voltage offset under minimum frequency and medium temperature conditions.

▸ **Min Frequency - High Temperature**

Enables or disables the voltage offset under minimum frequency and high temperature conditions.

▸ **Min Frequency - High Temperature sign**

Sets the direction of voltage offset under minimum frequency and high temperature conditions.

▸ **Min Frequency - High Temperature Magnitude**

Sets the value of voltage offset under minimum frequency and high temperature conditions.

▸ **Low Frequency - Low Temperature**

Enables or disables the voltage offset under low frequency and low temperature conditions.

▸ **Low Frequency - Low Temperature sign**

Sets the direction of voltage offset under low frequency and low temperature conditions.

▸ **Low Frequency - Low Temperature Magnitude**

Sets the value of voltage offset under low frequency and low temperature conditions.

▸ **Low Frequency - Med Temperature**

Enables or disables the voltage offset under low frequency and medium temperature conditions.

▸ **Low Frequency - Med Temperature sign**

Sets the direction of voltage offset under low frequency and medium temperature conditions.

▸ **Low Frequency - Med Temperature Magnitude**

Sets the value of voltage offset under low frequency and medium temperature conditions.

▸ **Low Frequency - High Temperature**

Enables or disables the voltage offset under low frequency and high temperature conditions.

▸ **Low Frequency - High Temperature sign**

Sets the direction of voltage offset under low frequency and high temperature conditions.

▸ **Low Frequency - High Temperature Magnitude**

Sets the value of voltage offset under low frequency and high temperature conditions.

▸ **Med Frequency - Low Temperature**

Enables or disables the voltage offset under medium frequency and low temperature conditions.

▸ **Med Frequency - Low Temperature sign**

Sets the direction of voltage offset under medium frequency and low temperature conditions.

▸ **Med Frequency - Low Temperature Magnitude**

Sets the value of voltage offset under medium frequency and low temperature conditions.

▸ **Med Frequency - Med Temperature**

Enables or disables the voltage offset under medium frequency and medium temperature conditions.

▸ **Med Frequency - Med Temperature sign**

Sets the direction of voltage offset under medium frequency and medium temperature conditions.

▸ **Med Frequency - Med Temperature Magnitude**

Sets the value of voltage offset under medium frequency and medium temperature conditions.

▸ **Med Frequency - High Temperature**

Enables or disables the voltage offset under medium frequency and high temperature conditions.

▸ **Med Frequency - High Temperature sign**

Sets the direction of voltage offset under medium frequency and high temperature conditions.

▸ **Med Frequency - High Temperature Magnitude**

Sets the value of voltage offset under medium frequency and high temperature conditions.

▸ **High Frequency - Low Temperature**

Enables or disables the voltage offset under high frequency and low temperature conditions.

▸ **High Frequency - Low Temperature sign**

Sets the direction of voltage offset under high frequency and low temperature conditions.

▸ **High Frequency - Low Temperature Magnitude**

Sets the value of voltage offset under high frequency and low temperature conditions.

▸ **High Frequency - Med Temperature**

Enables or disables the voltage offset under high frequency and medium temperature conditions.

▸ **High Frequency - Med Temperature sign**

Sets the direction of voltage offset under high frequency and medium temperature conditions.

▸ **High Frequency - Med Temperature Magnitude**

Sets the value of voltage offset under high frequency and medium temperature conditions.

▸ **High Frequency - High Temperature**

Enables or disables the voltage offset under high frequency and high temperature conditions.

▸ **High Frequency - High Temperature sign**

Sets the direction of voltage offset under high frequency and high temperature conditions.

▸ **High Frequency - High Temperature Magnitude**

Sets the value of voltage offset under high frequency and high temperature conditions.

▸ **Maximum Frequency - Low Temperature**

Enables or disables the voltage offset under maximum frequency and low temperature conditions.

▸ **Maximum Frequency - Low Temperature sign**

Sets the direction of voltage offset under maximum frequency and low temperature conditions.

▸ **Maximum Frequency - Low Temperature Magnitude**

Sets the value of voltage offset under maximum frequency and low temperature conditions.

▸ **Maximum Frequency - Med Temperature**

Enables or disables the voltage offset under maximum frequency and medium temperature conditions.

▸ **Maximum Frequency - Med Temperature sign**

Sets the direction of voltage offset under maximum frequency and medium temperature conditions.

▸ **Maximum Frequency - Med Temperature Magnitude**

Sets the value of voltage offset under maximum frequency and medium temperature conditions.

▸ **Maximum Frequency - High Temperature**

Enables or disables the voltage offset under maximum frequency and high temperature conditions.

▸ **Maximum Frequency - High Temperature sign**

Sets the direction of voltage offset under maximum frequency and high temperature conditions.

▸ **Maximum Frequency - High Temperature Magnitude**

Sets the value of voltage offset under maximum frequency and high temperature conditions.

► **AMD CBS**

Press **Enter** to enter the sub-menu. This sub-menu will appear when the CPU supports this function.

► **SMT Control**

Enables or disables the symmetric multi-threading.

► **Core Performance Boost**

Enables or disables the Core Performance Boost (CPB). This item appears when the installed CPU supports CPB.

[Auto] Allows the processor to dynamically overclocking when the system request the highest performance state.

[Disabled] Disables this function.

► **Global C-state Control**

Enables or disables IO based C-state generation and DF C-states.

► **Opcache Control**

Enables or disables opcache control.

► **SVM Enable**

Enables or disables the AMD SVM (Secure Virtual Machine) Mode.

► **Power Supply Idle Control**

Manages the behavior of power supply to prevent issues during idle states.

► **AMD CBS - DF Common Options**

► **ACPI SRAT L3 Cache As NUMA Domain**

Enables or disables each L3 cache as the independent NUMA domain.

► **AMD CBS - NBIO Common Options**

► **IOMMU**

Enables or disables the IOMMU (I/O Memory Management Unit) for I/O virtualization.

► **PCIe ARI Support**

Enables or disables the ARI (Alternative Routing ID Interpretation) support.

► **PCIe ARI Enumeration**

Enables or disables the ARI (Alternative Routing ID Interpretation) enumeration.

► **PSPP Policy**

Sets the PCIe Speed Power Policy (PSPP).

► **AMD CBS - SMU Common Options**

► **System Configuration**

Tune the system's TDP.

▸ **STAPM**

Enables or disables the STAPM (Skin Temperature Aware Power Management).

▸ **SPL Control**

This item allows you to set the SPL (Sustained Power Limit) manually or the SPL is configured by BIOS automatically.

▸ **Sustained Power Limit**

Set the sustained power limit.

▸ **TDP Control**

This item allows you to set the TDP manually or the TDP is configured by BIOS automatically.

▸ **TDP**

Sets the TDP value. This item will appear when **TDP Control** is set to **Manual**.

▸ **PPT Control**

This item allows you to set the PPT (Package Power Tracking) manually or the PPT is controlled by BIOS automatically.

▸ **Fast PPT Limit**

Sets the fast PPT (Package Power Tracking) value. This item will appear when **PPT Control** is set to **Manual**.

▸ **Slow PPT Limit**

Sets the slow PPT (Package Power Tracking) value. This item will appear when **PPT Control** is set to **Manual**.

▸ **Slow PPT Time Constant**

Sets the slow PPT (Package Power Tracking) time constant. This item will appear when **PPT Control** is set to **Manual**.

▸ **PPT**

Sets the PPT value. This item will appear when **PPT Control** is set to **Manual**.

▸ **Thermal Control**

This item allows you to set the Tctl limit temperature manually or the temperature is controlled by BIOS automatically.

▸ **TjMax**

Sets the maximum Tctl limit temperature value. This item will appear when **Thermal Control** is set to **Manual**.

▸ **TDC Control**

This item allows you to set the TDC (Thermal Design Current) manually or the TDC is configured by BIOS automatically.

▸ **TDC_VDDCR_VDD**

Sets the VDDCR_VDD TDC limit. This item will appear when **TDC Control** is set to **Manual**.

▸ **TDC_VDDCR_SOC**

Sets the VDDCR_SOC TDC limit. This item will appear when **TDC Control** is set to **Manual**.

▸ **EDC Control**

This item allows you to set the EDC (Electrical Design Current) manually or the TDC is configured by BIOS automatically.

▸ **EDC_VDDCR_VDD**

Sets the VDDCR_VDD EDC limit. This item will appear when **EDC Control** is set to **Manual**.

▸ **EDC_VDDCR_SOC**

Sets the VDDCR_SOC EDC limit. This item will appear when **EDC Control** is set to **Manual**.

▸ **PROCHOT Control**

This item allows you to set the PROCHOT deassertion ramp time manually. If set to **Auto**, the default PROCHOT deassertion ramp time is enabled.

▸ **PROCHOT Deassertion Ramp Time**

Sets the PROCHOT deassertion ramp time. PROCHOT Deassertion Ramp Time is the time definition for the processor to return to normal power again after the PROCHOT overheating signal occurs.

▸ **VDDP Voltage Control**

This item allows you to control the manually or the TDC is controlled by BIOS automatically.

▸ **VDDP Voltage**

Sets the VDDP voltage. This item will appear when **VDDP Voltage Control** is set to **Manual**.

▸ **Infinity Fabric Frequency and Dividers**

Sets the infinity fabric frequency (FCLK) and dividers. If set to **Auto**, BIOS will configure the frequency.

▸ **AMD CBS - SOC Miscellaneous Control**

▸ **Mixed DIMM config extended NUMA domain**

Enables or disables the mixed DIMMs configuration to extended NUMA domain.

▸ **Config TDP**

Selects one group of the specified values for TDP (W), PPT (W), TDC (A), and EDC (A). If set to **Auto**, BIOS will configure the default values automatically.

▸ **PSS Support**

Enables or disables the generation of ACPI_PPC, _PSS, and _PCT objects.

▸ **PPC Adjustment**

Sets the P-state mode. This item will appear when **PSS Support** is set to **Enabled**.

► **AVX Control**

Enables or disables the AVX control.

► **AVX2 Control**

Enables or disables the AVX2 control.

► **AVX512 Control**

Enables or disables the AVX512 control. This item would be available after the **AVX2 Control** sets to **Auto**.

► **FCH Spread Spectrum**

Enables or disables the FCH spread spectrum. If set to **Auto**, BIOS will configure the setting automatically.

[Enabled] Enables the spread spectrum function to reduce the EMI (Electromagnetic Interference) problem.

[Disabled] Enhances the overclocking ability of CPU Base clock.



Important

Remember to disable Spread Spectrum if you are overclocking because even a slight jitter can introduce a temporary boost in clock speed which may just cause your overclocked processor to lock up.

► **eCLK Mode**

This allows you to set the CPU clock and PCIe clock synchronously or not. If set to **Auto**, BIOS will configure this setting automatically.

► **CPU/ PCIe Base Clock (MHz)**

This allows you to set the base clock of the CPU and PCIe synchronously. This item will appear when **eCLK** is set to **eCLK0**.

► **CPU Base Clock (MHz)**

Sets the CPU base clock. You may overclock the CPU by adjusting this item. Please note that overclocking behavior and stability is not guaranteed. This item will appear when **eCLK** is set to **eCLK1**.

► **CPU Base Clock Apply Mode**

Sets the applying mode for adjusted CPU base clock. This item will appear when **eCLK** is set to **eCLK1**.

[Auto] This setting will be configured automatically by BIOS.

[Next Boot] CPU will run the adjusted CPU base clock next boot.

[Immediate] CPU runs the adjusted CPU base clock immediately.

► **CPU Base Clock Offset**

Sets the offset value for CPU base clock. If set to **Auto**, BIOS will configure this setting automatically.

► **Direct OC Button**

Specifies the base clock or the CPU ratio for the OC button/ header to overclock CPU in real time.

▸ **Direct OC Step (MHz)**

Sets the increase or decrease value for base clock when press the OC button (+ or -) once.

▸ **FCH Base Clock (MHz)**

Sets the FCH base clock. Please note that overclocking behavior and stability is not guaranteed. If set to **Auto**, BIOS will configure this setting automatically.

▸ **Optimized Performance Profile**

AMD OPP (Optimized Performance Profile) is designed for RAM modules using Hynix chips, providing few overclocking profiles. This item is available only when the installed memory modules support this function.

▸ **A-XMP**

Selects and loads memory XMP profile with optimized timing and voltage settings supported by installed memory module. This item is available only when the installed processor, memory modules and motherboard support this function.

▸ **EXPO**

Selects and loads memory EXPO profile with optimized timing and voltage settings supported by installed memory module. This item is available only when the installed processor, memory modules and motherboard support this function.

▸ **DRAM Speed**

Sets the DRAM speed. Please note the overclocking behavior is not guaranteed.

▸ **Adjusted DRAM Speed**

Shows the adjusted DRAM speed. Read-only.

▸ **FCLK Frequency**

Sets the FCLK frequency (Internal Data Fabric clock of DRAM). Please note the overclocking behavior is not guaranteed.

▸ **Fclk VDCI Mode Pref P0**

Sets the FCLK VDCI (Voltage Dependent Clock Increment) mode in P0 state.

▸ **UCLK DIV1 MODE**

Sets UCLK (Internal memory controller clock) mode.

▸ **High-Efficiency Mode**

Enabling this feature will provide optimized settings and better memory performance.

▸ **Memory Try It !**

It can improve memory compatibility or performance by choosing optimized memory preset.

▸ **Memory Context Restore**

Enables or disables the memory context restoring. If enabled, the POST latency will be minimized.

▸ **Advanced DRAM Configuration**

Press **Enter** to enter the sub-menu. User can set the memory timing for each/ all memory channel. The system may become un-stable or un-bootable after changing memory timing. If it occurs, please clear the CMOS data and restore the default settings. (Refer to the Clear CMOS jumper section to clear the CMOS data, and enter the BIOS to load the default settings.)

▸ **A-XMP User Profile**

Press **Enter** to enter the sub-menu.

▸ **A-XMP User Profile DIMM A1/ A2/ B1/ B2**

Press **Enter** to enter the sub-menu. You can set memory profile manually.

▸ **Load Setting To Item**

Load the current settings or the A-XMP profile to the user profile.

▸ **Write User Profile To Memory**

Write the user profile to memory or erase the user profile from memory.

▸ **Save Memory User Profile To BIOS**

Save the user profile to BIOS.

▸ **Load BIOS User Profile To Item**

Load the user profile to the selected item.

▸ **A-XMP User Profile 1/ 2**

▸ **DRAM Speed**

Sets the DRAM speed for A-XMP user profile 1/ 2.

▸ **DRAM Voltage**

Sets the DRAM voltage for A-XMP user profile 1/ 2.

▸ **DRAM VDDQ Voltage**

Sets the DRAM VDDQ voltage for A-XMP user profile 1/ 2.

▸ **DRAM VPP Voltage**

Sets the DRAM VPP voltage for A-XMP user profile 1/ 2.

▸ **Memory Controller Voltage**

Sets the memory controller voltage for A-XMP user profile 1/ 2.

▸ **tCL**

Sets the CAS (Column Address Strobe) latency time for A-XMP user profile 1/ 2.

‣ **tRCD**

Sets the RAS to CAS delay time for A-XMP user profile 1/ 2 .

‣ **tRP**

Sets the row pre-charge time for A-XMP user profile 1/ 2.

‣ **tRAS**

Sets the RAS (Row Address strobe) active time for A-XMP user profile 1/ 2.

‣ **tRC**

Sets the Active to Active/ Refresh delay time for A-XMP user profile 1/ 2.

‣ **tWR**

Sets the write recover time for A-XMP user profile 1/ 2.

‣ **tRFC1**

Sets the refresh recovery delay time for A-XMP user profile 1/ 2.

‣ **tRFC2**

Sets the refresh recovery delay time for A-XMP user profile 1/ 2.

‣ **tRFCSB**

Sets the refresh recovery delay time for A-XMP user profile 1/ 2.

‣ **Command Rate**

Sets the command rate for A-XMP user profile 1/ 2.

‣ **EXPO User Profile**

Press **Enter** to enter the sub-menu.

‣ **EXPO User Profile DIMMA1/ A2/ B1/ B2**

Press **Enter** to enter the sub-menu. You can set memory profile manually.

‣ **Load Setting To Item**

Load the current settings or the EXPO profile to the user profile.

‣ **Write User Profile To Memory**

Write the user profile to memory or erase the user profile from memory.

‣ **Save Memory User Profile To BIOS**

Save the user profile to BIOS.

‣ **Load BIOS User Profile To Item**

Load the user profile to the selected item.

‣ **DRAM Speed**

Sets the DRAM speed for EXPO user profile 1/ 2.

‣ **DRAM Voltage**

Sets the DRAM voltage for EXPO user profile 1/ 2.

▸ **DRAM VDDQ Voltage**

Sets the DRAM VDDQ voltage for EXPO user profile 1/ 2.

▸ **DRAM VPP Voltage**

Sets the DRAM VPP voltage for EXPO user profile 1/ 2.

▸ **tCL**

Sets the CAS (Column Address Strobe) latency time for EXPO user profile 1/ 2.

▸ **tRCD**

Sets the RAS to CAS delay time for EXPO user profile 1/ 2.

▸ **tRP**

Sets the row pre-charge time for EXPO user profile 1/ 2.

▸ **tRAS**

Sets the RAS (Row Address strobe) active time for EXPO user profile 1/ 2.

▸ **tRC**

Sets the Active to Active/ Refresh delay time for EXPO user profile 1/ 2.

▸ **tWR**

Sets the write recover time for EXPO user profile 1/ 2.

▸ **tRFC1**

Sets the refresh recovery delay time for EXPO user profile 1/ 2.

▸ **tRFC2**

Sets the refresh recovery delay time for EXPO user profile 1/ 2.

▸ **tRFCSB**

Sets the refresh recovery delay time for EXPO user profile 1/ 2.

▸ **Main Timing Configuration**

▸ **tCL**

Sets the CAS (Column Address Strobe) latency time.

▸ **tRCD**

Sets the RAS to CAS delay time.

▸ **tRP**

Sets the row pre-charge time.

▸ **tRAS**

Sets the RAS (Row Address strobe) active time.

▸ **tRC**

Sets the Active to Active/ Refresh delay time.

‣ **tWR**

Sets the minimum write recover time.

‣ **tRFC1**

Sets the refresh recovery delay time.

‣ **tRFC2**

Sets the refresh recovery delay time.

‣ **tRFCSB**

Sets the refresh recovery delay time.

‣ **Sub Timing Configuration**

‣ **tRTP**

Sets read to pre-charge command delay time.

‣ **tRRDL**

Sets the activate to activate delay time for same bank group.

‣ **tRRDS**

Sets the activate to activate delay time for different bank groups.

‣ **tFAW**

Sets the time window in which four activates are allowed the same rank.

‣ **tWTRL**

Sets the internal write transaction to internal read command time for same bank group.

‣ **tWTRS**

Sets the internal write transaction to internal read command time for different bank groups.

‣ **Turn Around Timing Configuration**

‣ **tRDRDSCl**

Sets the CAS to CAS delay time for same bank group.

‣ **tRDRDSC**

Sets the read to read turnaround time in the same chip select.

‣ **tRDRDSD**

Sets the read to read turnaround time in the same DIMM.

‣ **tRDRDDD**

Sets the read to read turnaround time in the different DIMM.

‣ **tWRWRSCL**

Sets the write to write turnaround time for same bank group.

▸ **tWRWRSC**

Sets the write to write turnaround time in the same chip select.

▸ **tWRWRSD**

Sets the write to write turnaround time in the same DIMM.

▸ **tWRWRDD**

Sets the write to write turnaround time in the different DIMM.

▸ **tWRRD**

Sets the write to read turnaround time.

▸ **tRDWR**

Sets the read to write turnaround time.

▸ **Misc item**

▸ **Power Down Enable**

Enables or disables DDR power down mode.

▸ **Gear Down Enable**

Enables or disables the DDR gear down mode.

▸ **ECC**

Enables or disables DRAM ECC.

▸ **TSME**

Enables or disables TSME feature (Transparent Secure Memory Encryption).

▸ **Data Scramble**

Enables or disables data scrambling.

▸ **Chipset Interleaving**

This item allows you to set the interleave memory blocks across DRAM chip selects for node 0.

▸ **Address Hash Bank**

Enables or disables the bank address hashing.

▸ **Address Hash CS**

Enables or disables the CS address hashing.

▸ **Bank Swap Mode**

Selects the bank swap mode.

▸ **DfE Read Training**

Perform 2D Read Training with DfE.

▸ **PPT Control**

Enables or disables the PPT control.

‣ **DDR Bus Configuration**

‣ **Processor CS drive strengths**

Selects the drive strength for processor CS.

‣ **Processor CK drive strengths**

Selects the drive strength for processor CK.

‣ **Processor CA drive strengths**

Selects the drive strength for all CA0-13 IOs.

‣ **Processor DQ drive strengths**

Selects the drive strength for all DQ and DMI IOs.

‣ **Processor DOT impedance**

Selects the DOT impedance for all DBYTE IOs.

‣ **Processor CA DOT impedance**

Selects the DOT impedance for ACHAN CA IOs.

‣ **Processor CK DOT impedance**

Selects the DOT impedance for ACHAN CK IOs.

‣ **Processor DQ DOT impedance**

Selects the DOT impedance for ACHAN DQ IOs.

‣ **Processor DQ DOT impedance**

Selects the DOT impedance for ACHAN DQS IOs.

‣ **Processor ODT impedance Pull Up p0**

Selects the pull up impedance for processor ODT.

‣ **Processor ODT impedance Pull Down p0**

Selects the pull down impedance for processor ODT.

‣ **Processor DQ drive strengths Pull Up P0**

Selects the pull up drive strength for processor DQ.

‣ **Processor DQ drive strengths Pull Down P0**

Selects the pull down drive strength for processor DQ.

‣ **Dram DQ driver strengths**

Selects the DRAM drive strength for all DQ and DMI IOs.

‣ **Dram DOT impedance RTT_NOM_WR**

Selects the DRAM on-die termination impedance for RTT_NOM_WR.

‣ **Dram DOT impedance RTT_NOM_RD**

Selects the DRAM on-die termination impedance for RTT_NOM_RD.

‣ **Dram DOT impedance RTT_WR**

Selects the DRAM on-die termination impedance for RTT_WR.

‣ **Dram DOT impedance RTT_PARK**

Selects the DRAM on-die termination impedance for RTT_PARK.

‣ **Dram DOT impedance DQS RTT_PARK**

Selects the DRAM on-die termination impedance for DQS_RTT_PARK.

‣ **Dram DQ driver strengths Pull Up P0**

Selects the pull up DRAM drive strength for DRAM DQ.

‣ **Dram DQ driver strengths Pull Down P0**

Selects the pull down DRAM drive strength for DRAM DQ.

‣ **Dram DOT impedance RTT_NOM_WR P0**

Selects the DRAM on-die termination impedance for RTT_NOM_WR.

‣ **Dram DOT impedance RTT_NOM_RD P0**

Selects the DRAM on-die termination impedance for RTT_NOM_RD.

‣ **Dram DOT impedance RTT_WR P0**

Selects the DRAM on-die termination impedance for RTT_WR.

‣ **Dram ODT impedance RTT_PARK P0**

Selects the DRAM on-die termination impedance for RTT_PARK.

‣ **Dram ODT impedance DQS_RTT_PARK P0**

Selects the DRAM on-die termination impedance for DQS_RTT_PARK.

‣ **DDR PMU Training**

‣ **Read Preamble P0**

Select the read preamble clock cycle.

‣ **Write Preamble P0**

Select the write preamble clock cycle.

‣ **PHY VrefDAC0 P0**

Set reference voltage for DAC0 PHY in P0 state.

‣ **PHY VrefDAC1 P0**

Set reference voltage for DAC1 PHY in P0 state.

‣ **PMU DQ Vref P0**

Set reference voltage of PMU DQ in P0 state.

▸ **DDR Turnaround Times**

▸ **Read Drift Adjustment**

Set the read drift time.

▸ **Write Drift Adjustment**

Set the write drift time.

▸ **DigitALL Power**

Press **Enter** to enter the sub-menu. Controls the digital powers related to CPU PWM.

▸ **CPU Loadline Calibration Control**

The CPU voltage will decrease proportionally according to CPU loading. Higher load-line calibration could get higher voltage and good overclocking performance, but increase the temperature of the CPU and VRM. If set to **Auto**, BIOS will configure this setting automatically.

▸ **CPU Over Voltage Protection**

Sets the voltage limit for CPU over-voltage protection. If set to **Auto**, BIOS will configure this setting automatically. Higher voltage provides less protection and may damage the system.

▸ **CPU Under Voltage Protection**

Sets the voltage limit for CPU under-voltage protection. If set to **Auto**, BIOS will configure this setting automatically. Higher voltage provides less protection and may damage the system.

▸ **CPU Over Current Protection**

Sets the current limit for CPU over-current protection. If set to **Auto**, BIOS will configure this setting automatically.

[Auto] This setting will be configured automatically by BIOS.

[Enhanced] Extends the current range for over-current protection.

▸ **CPU Switching Frequency**

Sets the PWM working speed to stabilize CPU Core voltage and minimize ripple range. Increasing the PWM working speed will cause higher temperature of MOSFET. So please make sure a cooling solution is well-prepared for MOSFET before you increase the value. If set to **Auto**, BIOS will configure this setting automatically.

▸ **CPU VRM Over Temperature Protection**

Sets the temperature limit on CPU VRM for over-temperature protection. The CPU frequency may be throttled when CPU temperature over the specified temperature. If set to **Auto**, BIOS will configure this settings.

▸ **CPU NB/SoC Loadline Calibration Control**

The CPU NB/SoC voltage will decrease proportionally according to CPU-NB loading. Higher load-line calibration could get higher voltage and good overclocking performance, but increase the temperature. If set to **Auto**, BIOS will configure this setting automatically.

► CPU NB/SoC Over Current Protection

Sets the current limit for CPU NB/SoC over-current protection. If set to **Auto**, BIOS will configure this setting automatically.

[Auto] This setting will be configured automatically by BIOS.

[Enhanced] Extends the current range for over-current protection.

► CPU NB/SoC Switching Frequency

Sets the PWM working speed to stabilize CPU NB/Soc voltage and minimize ripple range. Increasing the PWM working speed will cause higher temperature of MOSFET. So please make sure a cooling solution is well-prepared for MOSFET before you increase the value. If set to **Auto**, BIOS will configure this setting automatically.

► VR 12VIN OCP Expander

Expands the limitation of VR Over Current Protection with 12V input voltage. The higher expanding value indicates less protection. Therefore, please adjust the current carefully if needed, or it may damage the CPU/ VR MOS. If set to "Auto", BIOS will configure this setting automatically.

► CPU Core Voltage

Sets the CPU Core voltage mode. If set to **Auto**, BIOS will configure this setting automatically.

[Auto] This setting will be configured automatically by BIOS.

[Override Mode] Allows you to set the voltage manually.

[Offset Mode] Allows you to set the offset voltage and select the voltage offset mode.

[AMD Overclocking] Sets the adaptive voltage automatically for optimizing the system performance.

[Override + Offset] Sets the voltage manually and allows you to set the offset voltage.

► Override CPU Core Voltage

It allows you to set CPU core voltage. If set to **Auto**, BIOS will set the voltage automatically. This item will appear when **CPU Core Voltage** sets to **Override mode** or **AMD Overclock**.

► CPU Offset Mode Mark

Sets the CPU offset mode. This item will appear when **CPU Core Voltage** sets to **Offset mode** or **Override + Offset Mode**.

► CPU Offset Voltage

Sets the CPU offset voltage. This item will appear when **CPU Core Voltage** sets to **Offset mode** or **Override + Offset Mode**.

► CPU NB/SoC Voltage

Sets the CPU NB/ SoC voltage mode. If set to **Auto**, BIOS will configure this setting automatically.

[Auto] This setting will be configured automatically by BIOS.

[Override Mode] Allows you to set the voltage manually.

[AMD Overclocking] Sets the adaptive voltage automatically for optimizing the system performance.

► Override CPU NB/SoC Voltage

Sets CPU NB/SoC voltage. If set to **Auto**, BIOS will set the voltage automatically. This item will appear when **CPU NB/SoC Voltage** sets to **Override mode**.

► SOC Voltage

Sets CPU VDD_SOC voltage. If set to **Auto**, BIOS will set the voltage automatically. This item will appear when **CPU NB/SoC Voltage** sets to **AMD Overclocking**.

► VDDG Voltage Control

► VDDG Voltage Control

Selects apply mode for all the VDDG related voltages.

► Global VDDG CCD Voltage

Sets the global VDDG CCD voltage. If set to **Auto**, BIOS will set the voltage automatically.

► Global VDDG IOD Voltage

Sets the global VDDG IOD voltage. If set to **Auto**, BIOS will set the voltage automatically.

► CCD0- CCD VDDG Voltage

Sets the VDDG CCD voltage for CCD0. If set to **Auto**, BIOS will set the voltage automatically.

► CCD0-IOD VDDG Voltage

Sets the VDDG IOD voltage for CCD0. If set to **Auto**, BIOS will set the voltage automatically.

► CCD1- CCD VDDG Voltage

Sets the VDDG CCD voltage for CCD1. If set to **Auto**, BIOS will set the voltage automatically.

► CCD1-IOD VDDG Voltage

Sets the VDDG IOD voltage for CCD1. If set to **Auto**, BIOS will set the voltage automatically.

▸ **VDDP Voltage Control**

▸ **VDDP Voltage Control**

If set to **Auto**, BIOS will set the voltage automatically. If set to **Manual**, you can set the voltage manually.

▸ **VDDP Voltage Adjust**

Sets CPU VDDP voltage. If set to **Auto**, BIOS will set the voltage automatically.

▸ **VDD MISC Voltage**

Sets CPU VDD MISC voltage. If set to **Auto**, BIOS will set the voltage automatically.

▸ **DRAM High Voltage Mode**

Enables or disables DRAM high voltage mode.

▸ **DRAM Voltage**

Sets DRAM voltage. If set to **Auto**, BIOS will set the voltage automatically.

▸ **DRAM VDDQ Voltage**

Sets the DRAM VDDQ voltage. If set to **Auto**, BIOS will set these voltages automatically.

▸ **DRAM VPP Voltage**

Sets DRAM VPP voltage. If set to **Auto**, BIOS will set the voltage automatically.

▸ **CPU VDDIO Voltage**

Sets CPU VDDIO voltage. If set to **Auto**, BIOS will set the voltage automatically. This item will be available when you set the **DRAM Voltage** manually.

▸ **CPU 1P8 Voltage**

Sets CPU 1P8 voltage. If set to **Auto**, BIOS will set the voltage automatically.

▸ **Chipset Core Voltage**

Sets chipset core voltage. If set to **Auto**, BIOS will set the voltage automatically.

▸ **Chipset 1P8 Voltage**

Sets chipset 1P8 voltage. If set to **Auto**, BIOS will set the voltage automatically.

▸ **Memory Changed Detect**

Enables or disables the system to issue a warning message during boot when the memory has been replaced.

[Enabled] The system will issue a warning message during boot and then you have to load the default settings for new devices.

[Disabled] Disables this function and keeps the current BIOS settings.

▸ **CPU Specifications**

Press **Enter** to enter the sub-menu. This sub-menu displays the information of installed CPU. You can also access this information menu at any time by pressing [F4].
Read only.

▸ **CPU Technology Support**

Press **Enter** to enter the sub-menu. The sub-menu shows the key features of installed CPU. Read only.

▸ **MEMORY-Z**

Press **Enter** to enter the sub-menu. This sub-menu displays all the settings and timings of installed memory. You can also access this information menu at any time by pressing [F5].

▸ **DIMMx Memory SPD**


Press **Enter** to enter the sub-menu. The sub-menu displays the information of installed memory. Read only.

▸ **XMP Support Information**

Press **Enter** to enter the sub-menu. The sub-menu displays the X.M.P information of installed memory. Read only.

Security

Use this menu to set the administrator password and the user password for system security. This menu also allows you to set the TPM (Trusted Platform Module) function.

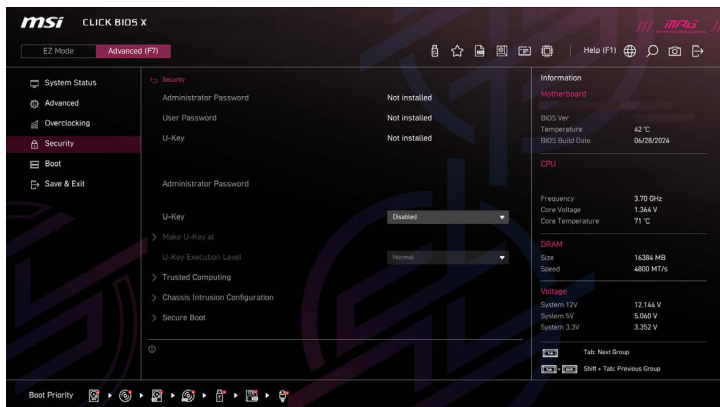

► Administrator Password

Sets administrator password for system security. User has full rights to change the BIOS items with administrator password. After setting the administrator password, the state of this item will show **Installed**.

► User Password

Sets User Password for system security. User has limited rights to change the BIOS items with user password. This item will be available when administrator password is set. After setting the user password, the state of this item will show **Installed**.

► Password Check

Selects a condition that will request the password.

- [Setup] A password will be requested for entering the BIOS Setup.
- [Boot] A password will be requested for booting the system.

► Password Protection

To maintain flexibility in password management, set the password protection to **Normal** to allow password removal via a CMOS reset or BIOS update. To enhance security and prevent unauthorized password clearing, set it to **Enforce**.



Important

When selecting the **Administrator** / **User Password** items, a password box will appear on the screen. Type the password then press **Enter**. The password typed now will replace any previous set password from CMOS memory. You will be prompted to confirm the password. You may also press **Esc** key to abort the selection.

To clear a set password, press **Enter** when you are prompted to enter a new password. A message will confirm the password is being disabled. Once the password is disabled, you can enter the setup and OS without authorization.

▸ **U-Key**

Enables or disables the USB flash drive as a key.

▸ **Make U-Key at**

Specify a USB flash drive as a key to lock your computer. Only people with that specific USB flash drive can use the computer.

▸ **U-Key Execution Level**

Set Enforce, the system can be configured to lock when the USB security key is absent. However, the security setting can be reset to normal mode via a CMOS reset or BIOS update in case of a lost USB key.

▸ **Trusted Computing**

Sets TPM (Trusted Platform Module) function.

▸ **Security Device Support**

Enables or disables the TPM function to build the endorsement key for accessing the system.

▸ **AMD fTPM switch**

Selects TPM device. This item will appear when **Security Device Support** is enabled.

[AMD CPU fTPM] Select it for AMD Firmware TPM.

[AMD CPU fTPM Disabled] Select it for Discrete TPM.

▸ **Active PCR Banks**

Shows the current active PCR banks.

▸ **Available PCR banks**

Shows all available PCR banks.

▸ **SHA256 PCR Banks**

Enables or disables the SHA256 PCR bank.

▸ **SHA384 PCR Banks**

Enables or disables the SHA384 PCR bank.

▸ **Pending operation**

Sets the action of pending TPM operation.

[None] Discard the selection

[TPM Clear] Clear all data secured by TPM.

▸ **Platform Hierarchy**

Enables or disables the platform hierarchy.

▸ **Storage Hierarchy**

Enables or disables the storage hierarchy.

▸ **Endorsement Hierarchy**

Enables or disables the endorsement hierarchy.

▸ **Physical Presence Spec Version**

Sets the version of the testing tool (HCK) in OS.

▸ **Chassis Intrusion Configuration**

Press **Enter** to enter the sub-menu.

▸ **Chassis Intrusion**

Enables or disables recording messages while the chassis is opened. This function is ready for the chassis equips a chassis intrusion switch.

[Enabled] Once the chassis is opened, the system will record and issue a warning message.

[Reset] Clear the warning message. After clearing the message, please return to **Enabled** or **Disabled**.

[Disabled] Disables this function.

▸ **Secure Boot**

Press **Enter** to enter the sub-menu.

▸ **Secure Boot**

Secure Boot function can be enabled only when the Platform Key(PK) is enrolled and running accordingly.

▸ **Secure Boot Mode**

Selects the secure boot mode. This item is to select how the secure boot keys be loaded. This item appears when "**Secure Boot**" is enabled.

[Standard] The system will automatically load the secure keys from BIOS.

[Custom] Allows user to configure the secure boot settings and manually load the secure keys.

▸ **Secure Boot Preset**

Set Hardware/OS Compatibility to support non-UEFI or non-compliant hardware/OS with optimized settings, or enforce Maximum Security to ensure complete validation of all system components.

▸ **Key Management**

Press **Enter** to enter the sub-menu. Manage the secure boot keys. This item will become available when "**Secure Boot Mode**" sets to **Custom**.

▸ **Factory Key Provision**

Enables or disables the factory default keys.

▸ **Restore Factory Keys**

Allows you to install all factory default keys.

▸ **Reset To Setup Mode**

Allows you to delete all the Secure Boot keys from NVRAM.

▸ **Enroll Efi Image**

Allows the image to run in Secure Boot mode. Enroll SHA256 Hash certificate of a PE image into authorized signature database (db).

▸ **Platform Key(PK)**

The Platform Key (PK) can protect the firmware from any un-authenticated changes. The system will verify the PK before your system enters the OS. Platform Key (PK) is used for updating KEK.

▸ **Key Exchange Keys (KEK)**

Key Exchange Key (KEK) is used for updating DB or DBX.

▸ **Authorized Signatures (db)**

Authorized Signatures(DB) lists the signatures that can be loaded.

▸ **Forbidden Signatures (dbx)**

Forbidden Signatures (DBX) lists the forbidden signatures that are not trusted and cannot be loaded.

▸ **Authorized TimeStamps (dbt)**


Authorized TimeStamps (DBT) lists the the authentication signatures with authorization time stamps.

▸ **OsRecovery Singnatures(dbr)**

Lists the available signatures for OS recovery.

Boot

Sets the sequence of system boot devices.

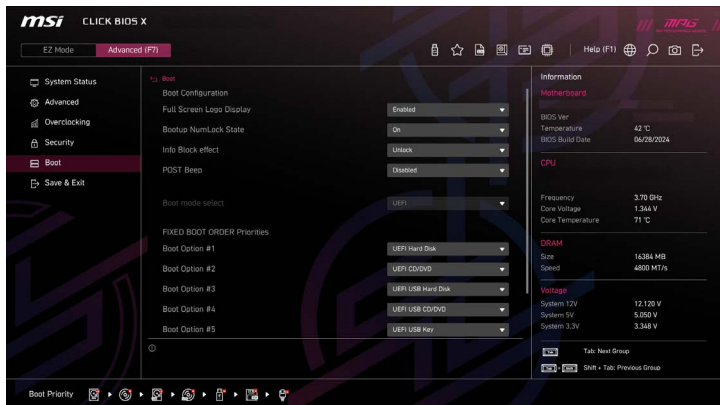

► Full Screen Logo Display

Enables or disables to show the full screen logo while system POST.

[Enabled] Shows the logo in full screen.

[Disabled] Shows the POST messages.

► Bootup NumLock State

Select the keyboard NumLock state upon bootup.

► POST Beep

Enables or disables the POST beep.

► AUTO CLR_CMOS

Enables or disables the CMOS data to be resumed automatically when the system cannot boot to OS and reboot repeatedly.

► Boot Mode Select

Sets the system boot mode from legacy or UEFI architecture depending on OS installation requirement. This item will become un-selectable and will be configured automatically by BIOS when **BIOS UEFI/CSM Mode** sets to **UEFI**.

[UEFI] Enables UEFI BIOS boot mode support only.

[LEGACY+UEFI] Enables both Legacy BIOS boot mode and UEFI BIOS boot mode.


► FIXED BOOT ORDER Priorities

Sets device priority for system boot.

► Boot Option Priorities

These items are used to prioritize the installed boot devices.

Save & Exit

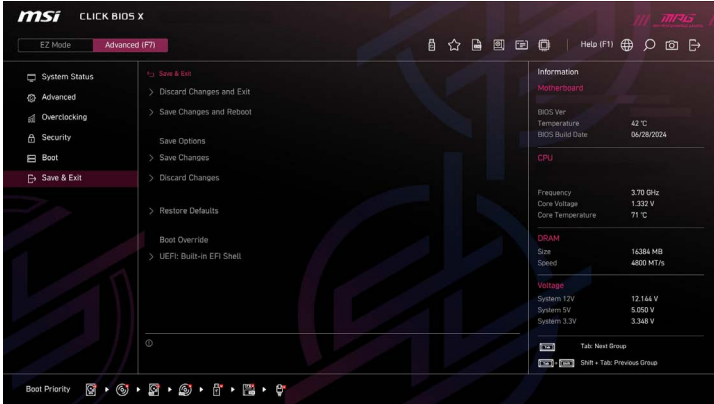

► Discard Changes and Exit

Exit BIOS setup without saving any change.

► Save Changes and Reboot

Save all changes and reboot the system.

► Save Changes

Save current changes.

► Discard Changes

Discard all changes and restore to the previous values.

► Restore Defaults

Restore or load all default values.

► Boot Override

The installed boot-able devices will appear on this menu, you can select one of them to be the boot device.

Resetting BIOS

If you encounter certain issues with your computer, restoring the default BIOS settings might help. You can reset the BIOS settings using the following methods:

- Enter the BIOS setup and press **F6** to load the optimized defaults.
- Use the **Clear CMOS jumper** on the motherboard to reset the BIOS.
- If your motherboard has a **Clear CMOS button** on the rear I/O panel, press it to reset the BIOS.



Important

Ensure the computer is powered off before clearing the CMOS data. For more details, refer to the **Clear CMOS jumper/button** section in the manual.

Updating BIOS

Updating BIOS with M-FLASH

Before starting the M-Flash process, make sure you have:

- A USB flash drive with a capacity of 32GB or less that is formatted to FAT32.



Important

M-Flash only supports FAT32 format, and the USB flash drive should not exceed 32GB.

- A computer with internet access.

Please follow the steps below to update BIOS:

1. Download the latest BIOS file from the MSI website that matches your motherboard model, and save it to the USB flash drive.
2. If your motherboard has a Multi-BIOS switch, switch to the target BIOS ROM.
3. Insert the USB flash drive into your motherboard's USB port.
4. Enter flash mode by either:
 - Rebooting and pressing **Ctrl + F5** during POST, then clicking **Yes** to reboot the system.
 - Rebooting and pressing **Del** during POST to enter BIOS, then clicking the M-FLASH button and clicking **Yes** to reboot.
5. Select a BIOS file from the **M-FLASH File** menu and press **Enter**.
6. When prompted by a File Check message, click **Yes** to start the BIOS update.

Once the update reaches 100%, the system will reboot automatically.

Updating the BIOS with MSI Center

Before updating:

- Ensure the LAN driver is installed, and the internet connection is working properly.
- Close all other applications before updating the BIOS.

To update BIOS:

1. Install and launch MSI Center, then go to **Support** page.
2. Select **Live Update** and click on **Advance** button.
3. Select the BIOS file and click on **Install** button.
4. The installation reminder will appear, then click the **Install** button.

The system will automatically restart to update the BIOS. Once the flashing process is complete, the system will restart.

Updating BIOS with Flash BIOS Button

1. Download the latest BIOS file from the MSI website that matches your motherboard model.
2. Rename the BIOS file to **MSI.ROM**, and save it to the root directory of a USB flash device.
3. Connect the power supply to **CPU_PWR1** and **ATX_PWR1**. (You don't need to install the CPU and memory.)
4. Plug the USB flash device with the **MSI.ROM** file into the **Flash BIOS Port** on the rear I/O panel.
5. Press the **Flash BIOS Button** to start flashing the BIOS. The LED will start flashing to indicate the process has begun.

The LED will turn off when the process is complete.

Copyright and Trademarks Notice



Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

Revision History

Version 1.0, 2024/09, First release